

HISTORY

Model Name : KDL-26/32/37/40P3020 & KDL-26/32/37/40P302H
SERVICE MANUAL

Click on Page Number to display detail of changes.

[illegible]

SERVICE MANUAL

Differences Manual

Self Diagnosis
Supported model

SE2 CHASSIS

MODEL	COMMANDER	DEST	MODEL	COMMANDER	DEST
KDL-26P3020	RM-ED009	AEP	KDL-26P3020	RM-ED009	UK
KDL-32P3020	RM-ED009	AEP	KDL-32P3020	RM-ED009	UK
KDL-37P3020	RM-ED009	AEP	KDL-37P3020	RM-ED009	UK
KDL-40P3020	RM-ED009	AEP	KDL-40P3020	RM-ED009	UK
KDL-26P302H	RM-ED009	AEP	KDL-26P302H	RM-ED009	UK
KDL-32P302H	RM-ED009	AEP	KDL-32P302H	RM-ED009	UK
KDL-37P302H	RM-ED009	AEP	KDL-37P302H	RM-ED009	UK
KDL-40P302H	RM-ED009	AEP	KDL-40P302H	RM-ED009	UK

Note: This Service Manual shows only the differences from KDL-26/32/37/40P3000 and KDL-26/32/37/40P300H. Refer to the Service Manual (9-927-574-xx) of KDL-26/32/37/40P3000 and KDL-26/32/37/40P300H, also for repair.



KDL-26P3020 / KDL-32P3020 / KDL-37P3020 / KDL-40P3020
KDL-26P302H / KDL-32P302H / KDL-37P302H / KDL-40P302H



RM-ED009

FLAT PANEL COLOR TV
SONY®

TABLE OF CONTENTS

<i>Section</i>	<i>Title</i>	<i>Page</i>
5. EXPLODED VIEWS		
5-3.	Rear Cover, Stand & Bezel (26 & 32 Inches)	3
5-4.	Rear Cover, Stand & Bezel (37 & 40 Inches)	4

WARNING !!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE WORK TO AVOID POSSIBLE SHOCK HAZARD DUE TO LIVE CHASSIS, THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE POWER LINE.


SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARKED $\triangle$ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

5-3. REAR COVER, STAND & BEZEL (26 & 32 Inches)

Note : Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

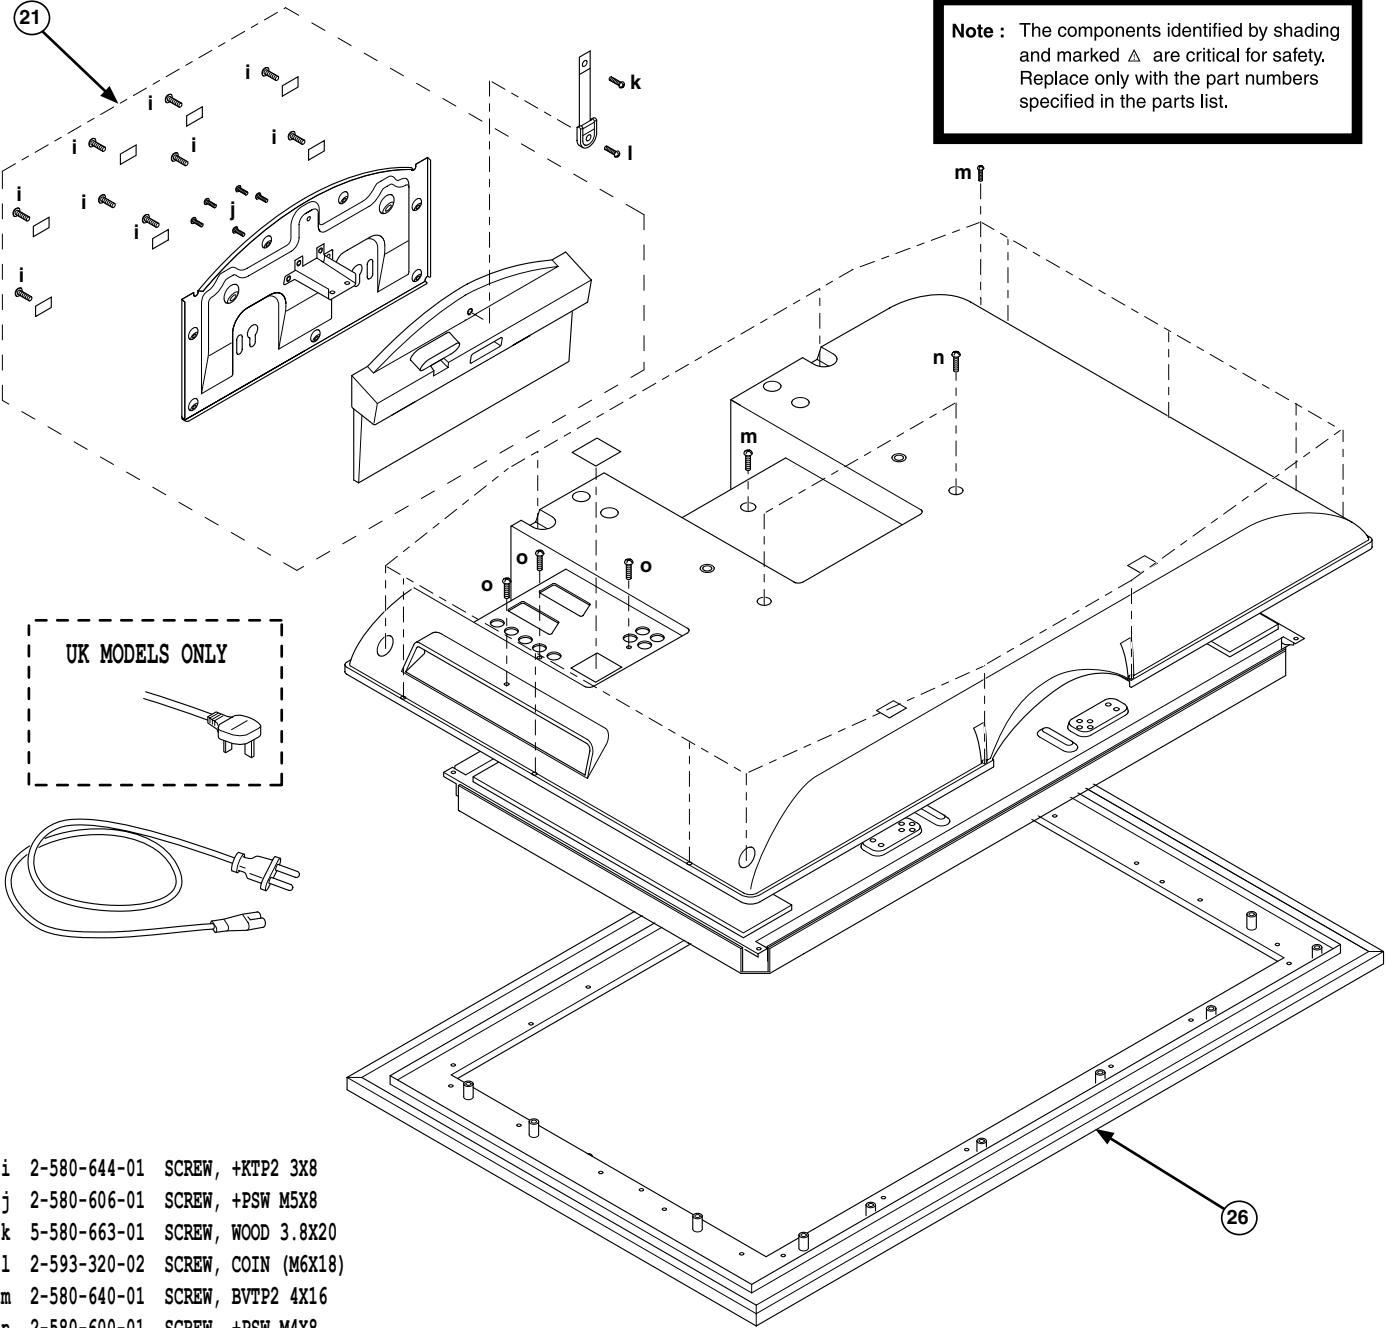


- i 2-580-644-01 SCREW, +KTP2 3X8
- j 2-580-606-01 SCREW, +PSW M5X8
- k 5-580-663-01 SCREW, WOOD 3.8X20
- l 2-593-320-02 SCREW, COIN (M6X18)
- m 2-580-640-01 SCREW, BVTP2 4X16
- n 2-580-600-01 SCREW, +PSW M4X8
- o 2-580-639-01 SCREW, +BVTP 4X12

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
21	*X-2178-409-2	STAND (M) ASSY	26/32P3020	26	X-2186-800-1	BEZEL (26P) ASSY	26 inches
	*X-2188-783-1	STAND (M_WS) ASSY	26/32P302H		X-2186-730-1	BEZEL (32P) ASSY	32 inches

5-4. REAR COVER, STAND & BEZEL (37 & 40 Inches)

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

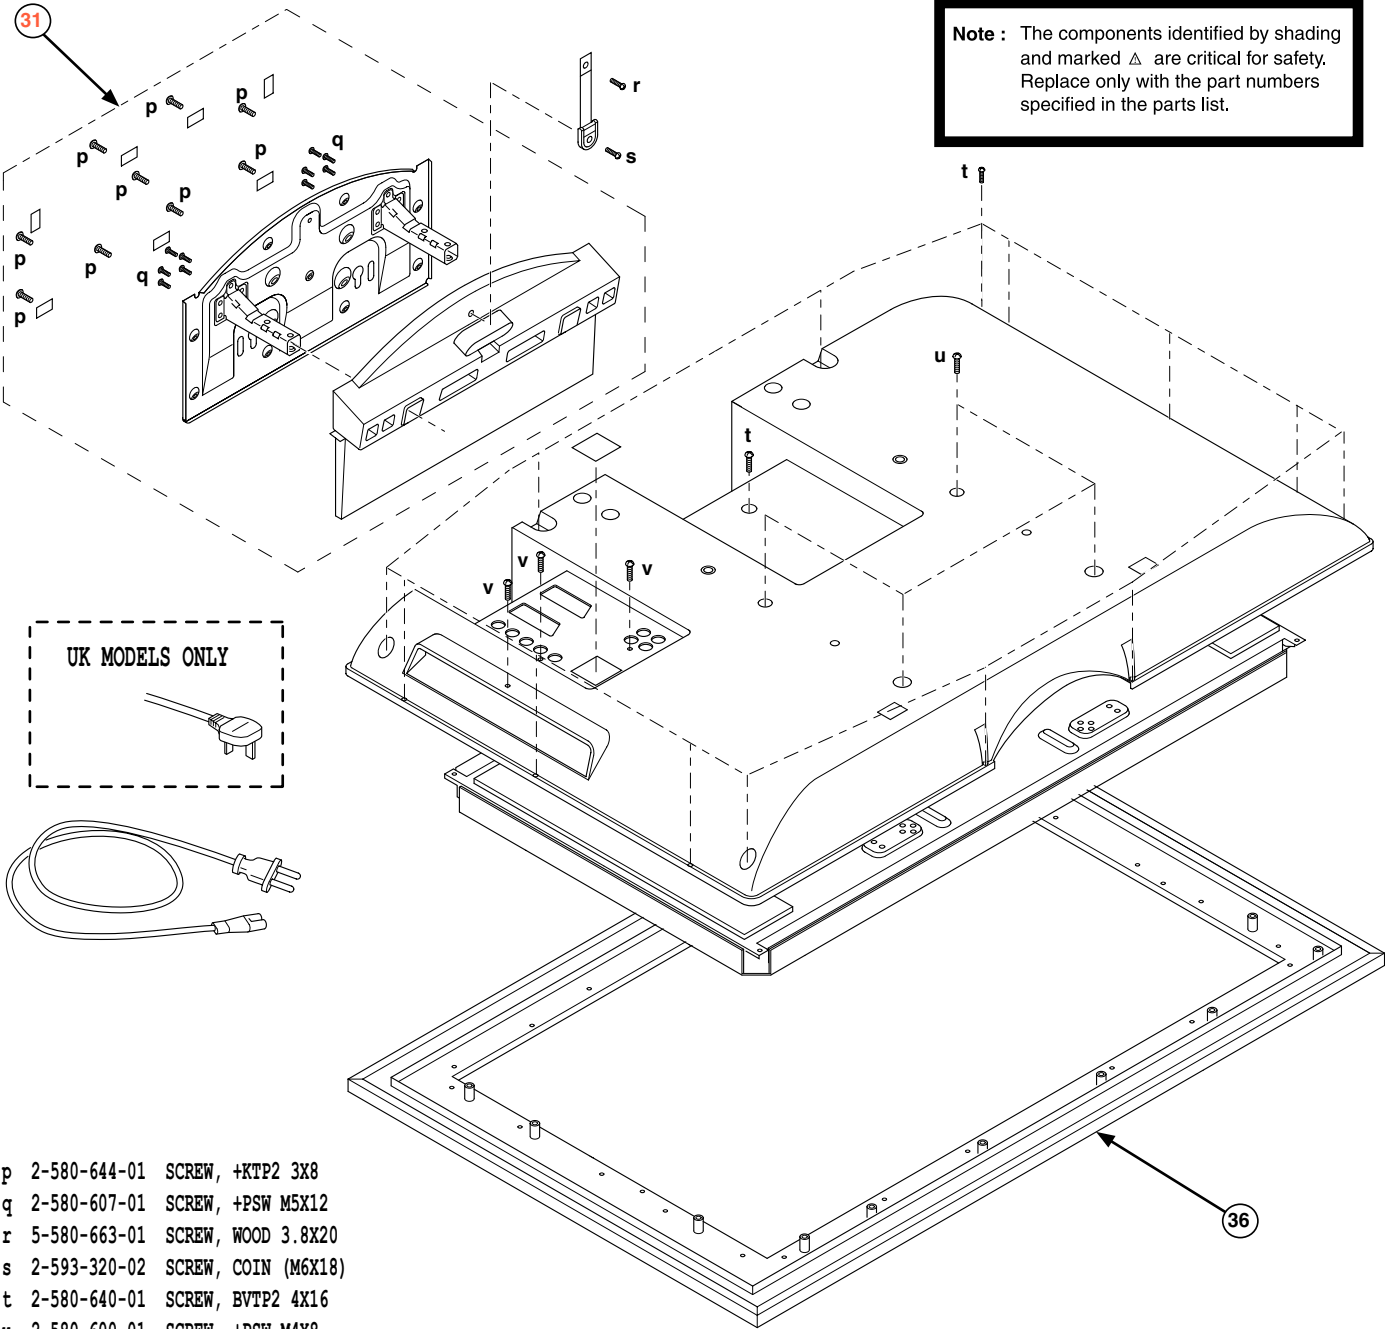

- p 2-580-644-01 SCREW, +KTP2 3X8
- q 2-580-607-01 SCREW, +PSW M5X12
- r 5-580-663-01 SCREW, WOOD 3.8X20
- s 2-593-320-02 SCREW, COIN (M6X18)
- t 2-580-640-01 SCREW, BVTP2 4X16
- u 2-580-600-01 SCREW, +PSW M4X8
- v 2-580-639-01 SCREW, +BVTP 4X12

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
31	*X-2187-520-2	STAND (ML) ASSY	37/40P3020	36	X-2186-732-1	BEZEL (37P) ASSY	37 inches
	*X-2188-762-1	STAND (ML) ASSY	37/40P302H		X-2186-809-1	BEZEL (40P) ASSY	40 inches

HISTORY

Model Name : KDL-26/32/37/40P3000 & KDL-26/32/37/40P300H
SERVICE MANUAL

Click on Page Number to display detail of changes.

[illegible]

SERVICE MANUAL

SE2 CHASSIS

MODEL	COMMANDER	DEST	MODEL	COMMANDER	DEST
KDL-26P3000	RM-ED009	AEP	KDL-26P3000	RM-ED009	UK
KDL-32P3000	RM-ED009	AEP	KDL-32P3000	RM-ED009	UK
KDL-37P3000	RM-ED009	AEP	KDL-37P3000	RM-ED009	UK
KDL-40P3000	RM-ED009	AEP	KDL-40P3000	RM-ED009	UK
KDL-26P300H	RM-ED009	AEP	KDL-26P300H	RM-ED009	UK
KDL-32P300H	RM-ED009	AEP	KDL-32P300H	RM-ED009	UK
KDL-37P300H	RM-ED009	AEP	KDL-37P300H	RM-ED009	UK
KDL-40P300H	RM-ED009	AEP	KDL-40P300H	RM-ED009	UK



KDL-26P3000 / KDL-32P3000 / KDL-37P3000 / KDL-40P3000
KDL-26P300H / KDL-32P300H / KDL-37P300H / KDL-40P300H



RM-ED009

FLAT PANEL COLOR TV
SONY®

TABLE OF CONTENTS

<i>Section</i>	<i>Title</i>	<i>Page</i>	<i>Section</i>	<i>Title</i>	<i>Page</i>
1. GENERAL		3	4. DIAGRAMS		
	Caution	3	4-1.	Block Diagram	19
	Specifications	5	4-2.	Circuit Board Location	20
	Connectors	6	4-3.	Schematic Diagrams and Printed Wiring Boards	20
	Self Diagnosis	8		B1 Board Schematic Diagram	21
2. DISASSEMBLY				DS1 Board Schematic Diagram (40 inches)	46
2-1.	Rear Cover Removal	9		GS2 Board Schematic Diagram (26 & 32 inches)	50
2-2.	Stand Removal (26 & 32 inches)	9		GS3 Board Schematic Diagram (37 inches)	55
2-3.	Stand Removal (37 & 40 inches)	10		GS4 Board Schematic Diagram (40 inches)	60
2-4.	Loudspeaker Removal	10		H1PS Board Schematic Diagram	65
2-5.	B1 Board Removal	11		H3PS Board Schematic Diagram	65
2-6.	DS1 Board Removal (40 inches)	11		B1 Printed Wiring Board	66
2-7.	GS2 Board Removal (26 & 32 inches)	12		H1PS Printed Wiring Board	66
2-8.	GS3 (37 inches) or GS4 (40 inches) Board Removal	12		H3PS Printed Wiring Board	67
2-9.	H1PS Board Removal	13		DS1 Printed Wiring Board	68
2-10.	H3PS Board Removal	13		GS2 Printed Wiring Board	69
2-11.	LCD Panel Removal	14		GS3 Printed Wiring Board	70
3. CIRCUIT ADJUSTMENTS				GS4 Printed Wiring Board	72
3-1.	Electrical Adjustments	15	5. EXPLODED VIEWS		
3-2.	TT Mode	17	5-1.	Chassis (26 & 32 inches)	74
3-3.	TT OSD Labels	18	5-2.	Chassis (37 & 40 inches)	75
			5-3.	Rear Cover, Stand & Bezel (26 & 32 inches)	76
			5-4.	Rear Cover, Stand & Bezel (37 & 40 inches)	77
			6. ELECTRICAL PARTS LIST		78

WARNING !!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE WORK TO AVOID POSSIBLE SHOCK HAZARD DUE TO LIVE CHASSIS, THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARKED Δ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1 GENERAL


CAUTION

Lead Free Soldered Boards

The circuit boards used in these models have been processed using Lead Free Solder. The boards are identified by the LF logo located close to the board designation e.g. F1, H1 etc [see examples]. The servicing of these boards requires special precautions to be taken as outlined below.



example 1

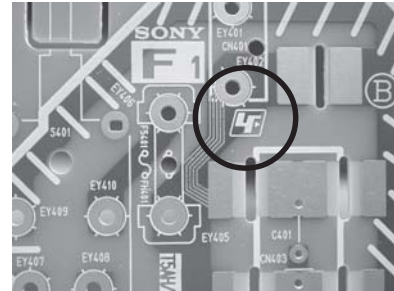

example 2



Lead Free Solder material must be used to comply with environmental requirements of new solder joints. Lead Free Solder is available under the following part numbers :

Partnumber	Diameter	Remarks
7-640-005-19	0.3mm	0.25Kg
7-640-005-20	0.4mm	0.50Kg
7-640-005-21	0.5mm	0.50Kg
7-640-005-22	0.6mm	0.25Kg
7-640-005-23	0.8mm	1.00Kg
7-640-005-24	1.0mm	1.00Kg
7-640-005-25	1.2mm	1.00Kg
7-640-005-26	1.6mm	1.00Kg

Due to the higher melting point of Lead Free Solder the soldering iron tip temperature needs to be set to 370 degrees centigrade. This requires soldering equipment capable of accurate temperature control coupled with a good heat recovery characteristics.

For more information on the use of Lead Free Solder, please refer to <http://www.sony-training.com>

CAUTION**Rear Cover Removal**

When removing the rear cover it is important to ensure that the top button plate is fixed to the front cabinet and not removed with the rear cover. This is to avoid breaking the cable connected to the switch button board. It is also important to remember that whilst removing the rear cover it is kept parallel to the LCD plane.


SPECIFICATIONS

ITEM MODEL	Television System	Stereo System	Channel Coverage	Color System
E	Analogue: B/G/H, D/K, I, L Digital: DVB-T	GERMAN/NICAM Stereo	Analogue: VHF : E2-E12 UHF : E21-E69 CATV : S1-S20 HYPER : S21-S41 D/K: R1-R12, R21-R69 L: F2-F10, B-Q, F21-F69 I: UHF B21-B69 Digital: VHF/UHF	Analogue: PAL, SECAM NTSC 3.58/4.43 (VIDEO ONLY) Digital: MPEG-2 MP@ML
U	Analogue: I Digital: DVB-T	NICAM Stereo	Analogue: I: UHF B21-B69 Digital: VHF/UHF	Analogue: PAL, SECAM NTSC 3.58/4.43 (VIDEO ONLY) Digital: MPEG-2 MP@ML

Projected Picture Size	LCD(Liquid Crystal Display) Panel Approx 26 inches (KDL-26XXXXX) Approx 32 inches (KDL-32XXXXX) Approx 37 inches (KDL-37XXXXX) Approx 40 inches (KDL-40XXXXX)	Sound Output	
		Right and Left speaker Sub-woofer	2 x 10W (RMS)
Input/Output Terminals [REAR]		General Specifications	
1: 21-pin Euro connector (CENELEC standard)	Inputs for Audio and Video signals. Inputs for RGB. Outputs of TV Video and Audio signals.	Power Requirements	220 - 240V
		Power Consumption/ Standby	Approx 90W/0.7W or less (26 inches) Approx 130W/0.7W or less (32 inches) Approx 150W/0.6W or less (37 inches) Approx 165W/0.6W or less (40 inches)
2: 21-pin Euro connector (CENELEC standard)	Inputs for Audio and Video signals. Inputs for RGB. Outputs of Video and Audio signals (Selectable). SmartLink interface.	Dimensions	Approx 657x500x214mm (26 inches with stand) Approx 657x453x121mm (26 inches without stand) Approx 790x577x214mm (32 inches with stand) Approx 790x530x119mm (32 inches without stand) Approx 906x658x265mm (37 inches with stand) Approx 906x611x126mm (37 inches without stand) Approx 982x690x265mm (40 inches with stand) Approx 982x643x124mm (40 inches without stand)
		Weight	Approx 12.0kg (26 inches with stand) Approx 10.0kg (26 inches without stand) Approx 15.0kg (32 inches with stand) Approx 13.0kg (32 inches without stand) Approx 21.0kg (37 inches with stand) Approx 18.0kg (37 inches without stand) Approx 23.5kg (40 inches with stand) Approx 20.0kg (40 inches without stand)
Phono Jacks	Output Connectors variable for Audio Signals.	Supplied Accessories	RM-ED009 Remote Commander (1) IEC designated R06 battery (2) Support belt (1) and screws (2)
HDMI Inputs	HDMI Connectors	Other Features	Intergrated digital Tuner, High Picture Quality, Bravia Engine, BBE ViVA, 2 HDMI inputs, PC input.
PC Input	15 Pin D Sub Connector		
CAM Slot	Conditional Access Module		
Input/Output Terminals [SIDE]		Remote control system : Infrared control	
Headphone jack	Stereo mini jack	Power requirements	3V dc 2 batteries IEC designation R06 (size AA)
Audio input	Phono jacks		
Video input	Phono jack		
S Video input	4 pin mini DIN		
Design and specifications are subject to change without notice.			

CONNECTORS

21 Pin Connector (SCART)

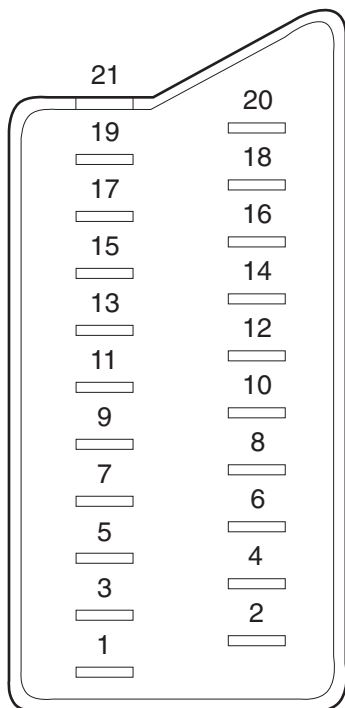

Pin No	1	2	Signal	Signal level
1	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedance : Less than 1kohm*
2	○	○	Audio input B (right)	Standard level : 0.5V rms Output impedance : More than 10kohm*
3	○	○	Audio output A (left)	Standard level : 0.5V rms Output impedance : Less than 1kohm*
4	○	○	Ground (audio)	
5	○	○	Ground (blue)	
6	○	○	Audio input A (left)	Standard level : 0.5V rms Output impedance : More than 10kohm*
7	○	○	Blue input	0.7 +/- 3dB, 75 ohms positive
8	○	○	Function select (AV control)	High state (9.5-12V) : Part mode Low state (0-2V) : TV mode Input impedance : More than 10K ohms Input capacitance : Less than 2nF
9	○	○	Ground (green)	
10	●	○	AVlink	
11	○	○	Green	Green signal : 0.7 +/- 3dB, 75 ohms, positive
12	●	●	Open	
13	○	○	Ground (red)	
14	○	○	Ground (blanking)	
15	○	○	Red input	0.7 +/- 3dB, 75 ohms, positive
	-	-	(S signal Chroma input)	0.3 +/- 3dB, 75 ohms, positive
16	○	○	Blanking input (Ys signal)	High state (1-3V) Low state (0-0.4V) Input impedance : 75 ohms
17	○	○	Ground (video output)	
18	○	○	Ground (video input)	
19	○	○	Video output	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
20	○	○	Video input	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
	-	-	Video input Y (S signal)	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
21	○	○	Common ground (plug, shield)	

○ Connected ● Not Connected (open) * at 20Hz - 20kHz


UK PLUG WARNING

WARNING (UK Models only)

The flexible mains lead is supplied connected to a **B.S. 1363** fused plug having a fuse of the correct rating for the set. Should the fuse need to be replaced, use a fuse of the same rating approved by ASTA to **BS 1362**, ie one that carries the  mark.


IF THE PLUG SUPPLIED WITH THIS APPLIANCE IS NOT SUITABLE FOR THE OUTLET SOCKETS IN YOUR HOME, IT SHOULD BE CUT OFF AND AN APPROPRIATE PLUG FITTED. THE PLUG SEVERED FROM THE MAINS LEAD MUST BE DESTROYED AS A PLUG WITH BARED WIRES IS DANGEROUS IF ENGAGED IN A LIVE SOCKET.

When an alternative type of plug is used, it should be fitted with the correct rating fuse, otherwise the circuit should be protected by the same rating fuse at the distribution board.

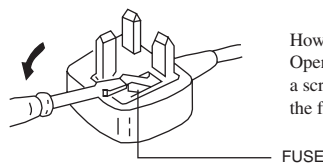


How to replace the fuse.
Open the fuse compartment with a screwdriver blade and replace the fuse.

HDMI Connector

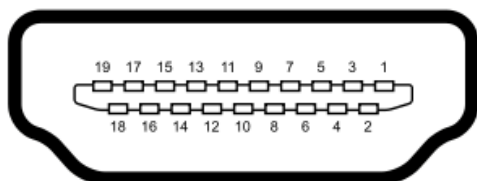

Pin No	Signal Assignment	Pin No	Signal Assignment
1	TMDS Data2+	11	TMDS Clock Shield
2	TMDS Data2 Shield	12	TMDS Clock-
3	TMDS Data2-	13	CEC
4	TMDS Data1+	14	Reserved (N.C. on device)
5	TMDS Data1 Shield	15	SCL
6	TMDS Data1-	16	SDA
7	TMDS Data0+	17	DDC/CEC Ground
8	TMDS Data0 Shield	18	+5V Power
9	TMDS Data0-	19	Hot Plug Detect
10	TMDS Clock+		

15 Pin D Sub Connector (PC)

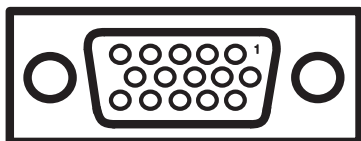

Pin No	Signal Assignment	Pin No	Signal Assignment
1	Red Out	9	+5V DC
2	Green Out	10	Sync Return (Ground)
3	Blue Out	11	Monitor ID0 in Display
4	Unused	12	DCC Serial Data
5	Ground	13	Horizontal Sync
6	Red Return	14	Vertical Sync
7	Green Return (Ground)	15	DCC Serial Clock
8	Blue Return (Ground)		

Rear Connection Panel



Side Connection Panel



S-Video socket

S Video socket pin configuration		
Pin No	Signal	Signal Level
1	Ground	-
2	Ground	-
3	Y (S signal) input	1V+/- 3dB 75ohm, positive Sync. 0.3V -3 +10dB
4	C (S signal) input	0.3V+/- 3dB 75ohm, positive Sync.

SE2 SELF DIAGNOSTIC SOFTWARE

The identification of errors within the SE2 chassis is triggered in one of two ways :- 1: Busy or 2: Device failure to respond to IIC. In the event of one of these situations arising the software will first try to release the bus if busy (Failure to do so will report with a continuous flashing LED) and then communicate with each device in turn to establish if a device is faulty. If a device is found to be faulty the relevant device number will be displayed through the LED (Series of flashes which must be counted).

LED Error Code


Number of LED Flashes	Error Description	Checked	Action
02	Balancer error.	In normal mode.	Goes into standby.
03	Power supply protection error.	In normal mode.	Goes into standby.
04	Inverter error.	In normal mode.	Goes into standby.
05	NVM error.	In initialisation state.	Adds error to error menu.
06	IIC error.	In normal mode.	Adds error to error menu.
07	HDMI error.	In initialisation state.	Adds error to error menu.
08	Digital error.	In normal mode.	Adds error to error menu.
09	Tuner Error	In initialisation state.	Adds error to error menu.
10	Sound processor	In initialisation state.	Adds error to error menu.
13	Real time clock error	In initialisation state.	Adds error to error menu.

Error Descriptions


Error Description	Meaning/Related Fault
Balancer error.	Balancer error/PANEL_DET (PMUX2.0) to low level, between 2.48V and 0.83V.
Power supply protection error.	5V, 3.3V or 1.8V failure/POWER_DET (P3_6) to high level.
Panel error.	Inverter failure/PANEL_DET (PMUX2.0) to low level, less than 0.83V.
NVM error.	EEPROM cannot be read or written.
IIC error.	IIC bus cannot be correctly initialised.
HDMI error.	HDCP cannot be set-up correctly.
Digital error.	Digital CPU does not respond by DPI communication (Only for digital models).
Tuner Error	IF circuit or PLL circuit does not respond to IIC commands.
Sound processor	MSP3410G IC does not respond to IIC commands.
Real time clock error	RTC IC does not respond to IIC commands (Only for digital models).

SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

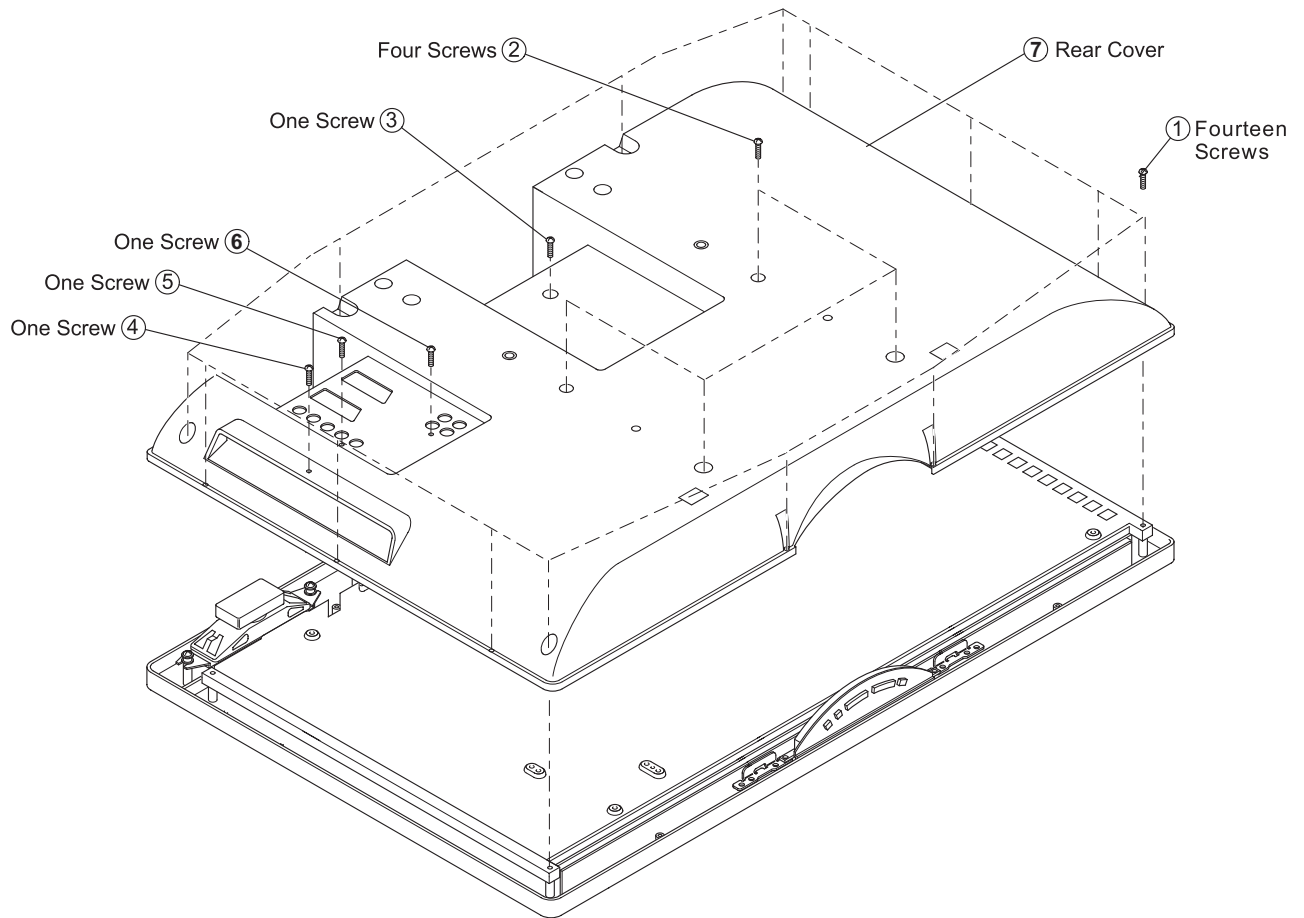


2-2. STAND REMOVAL (26 & 32 inches)

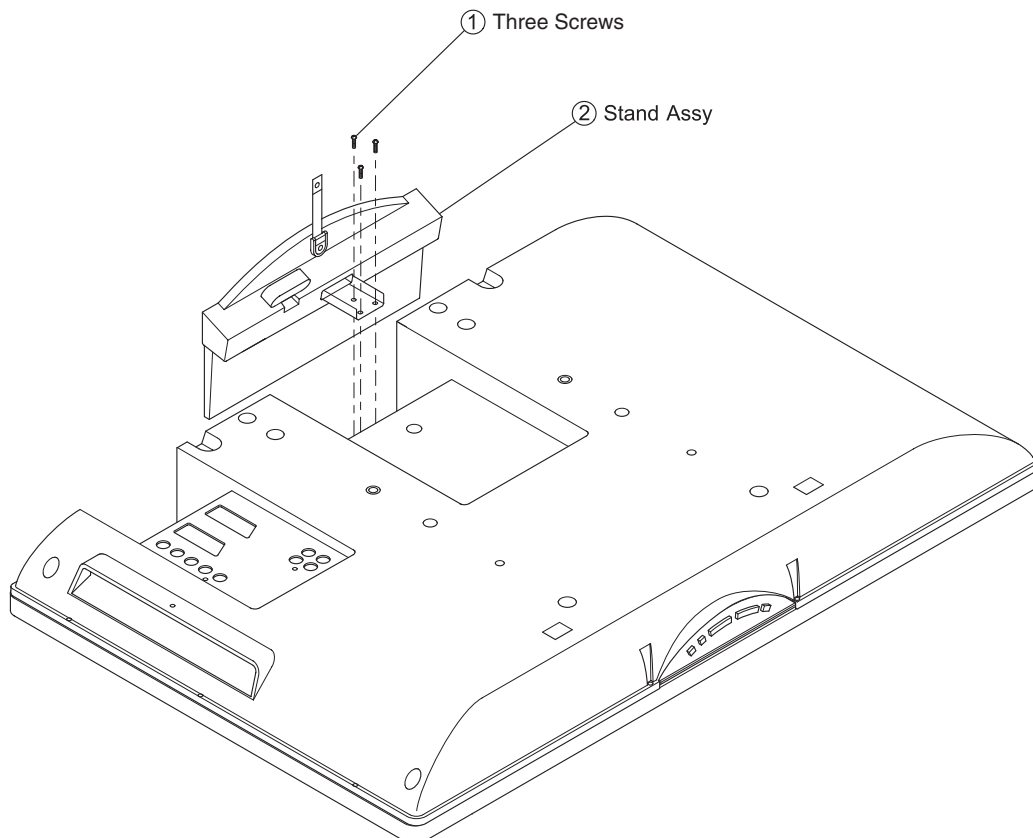


2-3. STAND REMOVAL (37 & 40 inches)

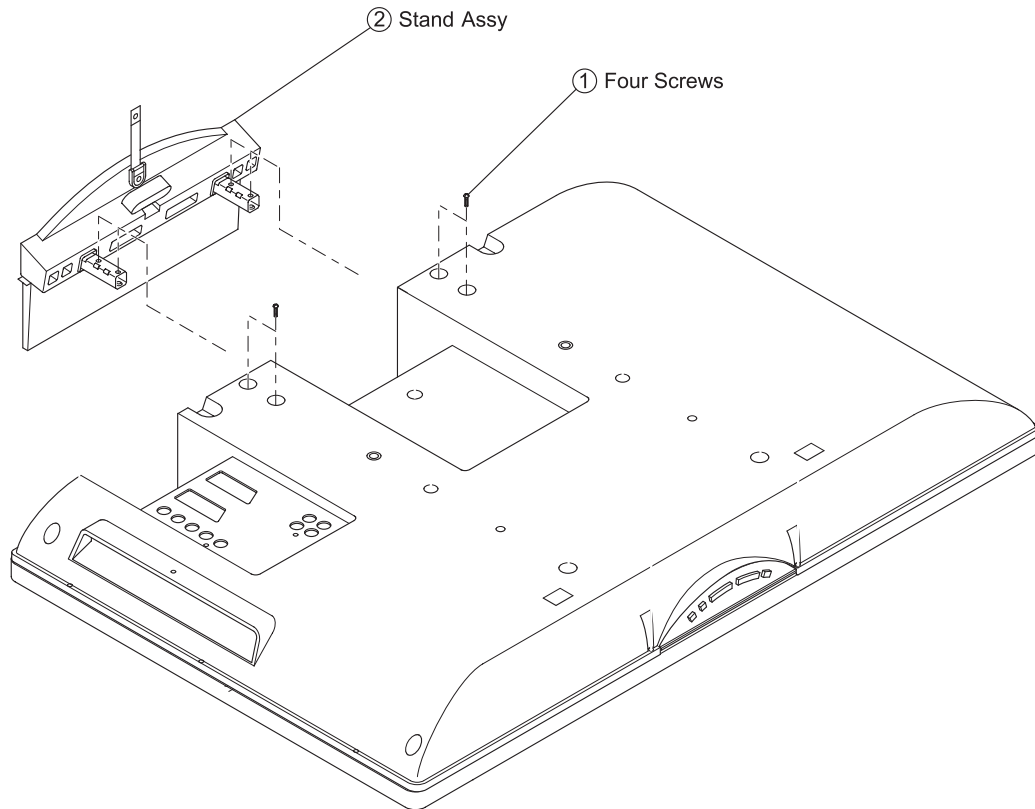


2-4. LOUDSPEAKER REMOVAL

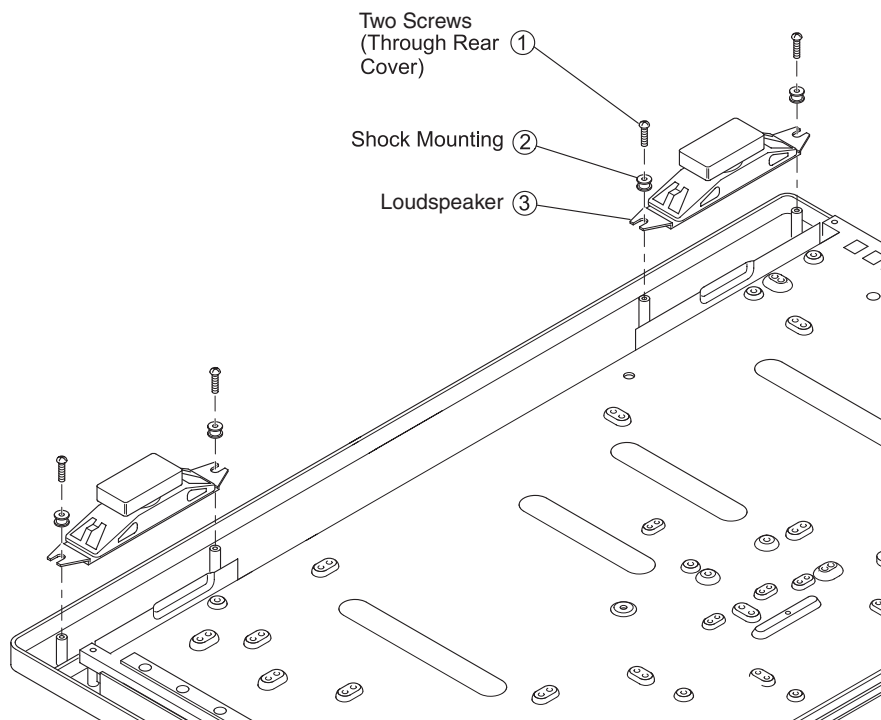


2-5. B1 BOARD REMOVAL

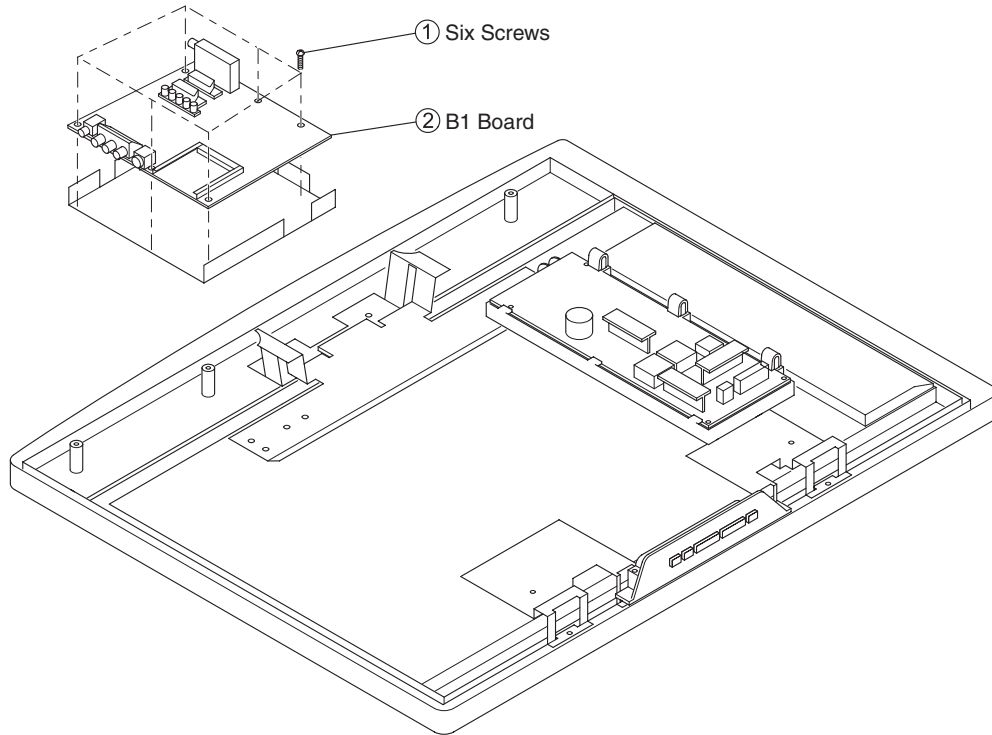


2-6. DS1 BOARD REMOVAL (40 inches)

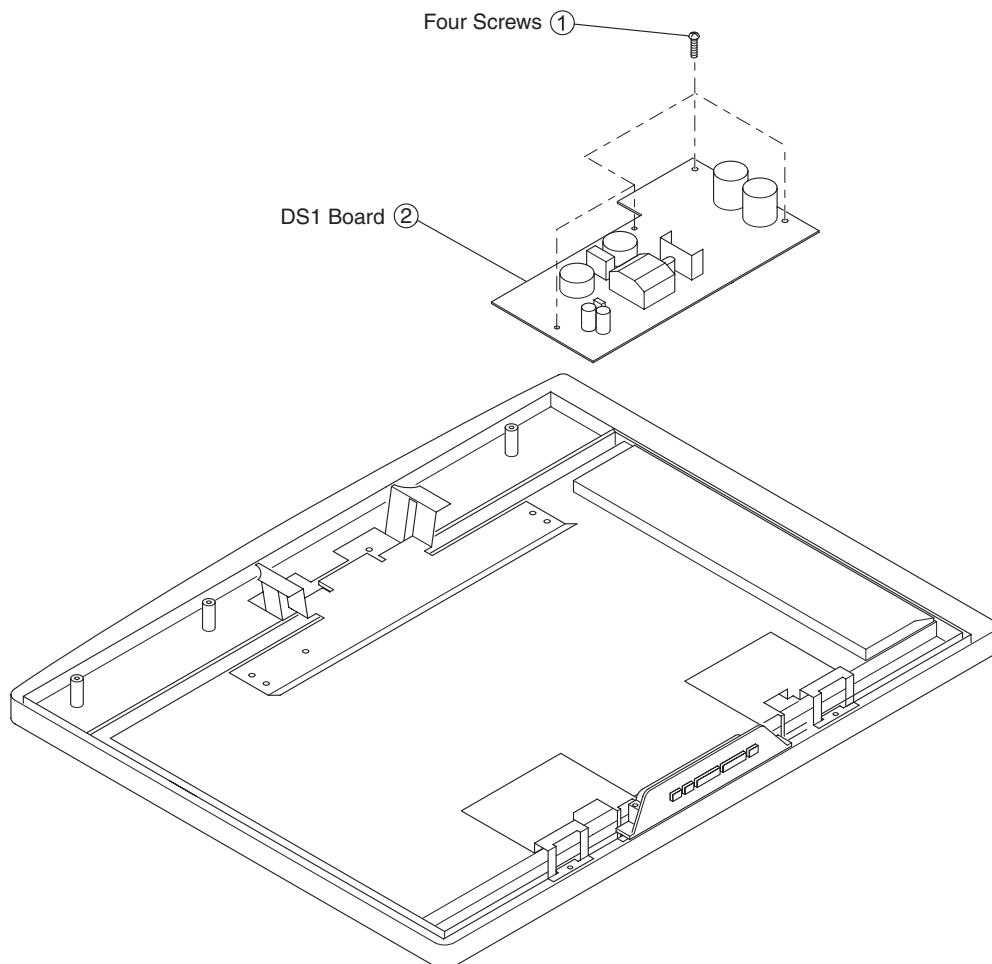


2-7. GS2 BOARD REMOVAL (26 & 32 inches)

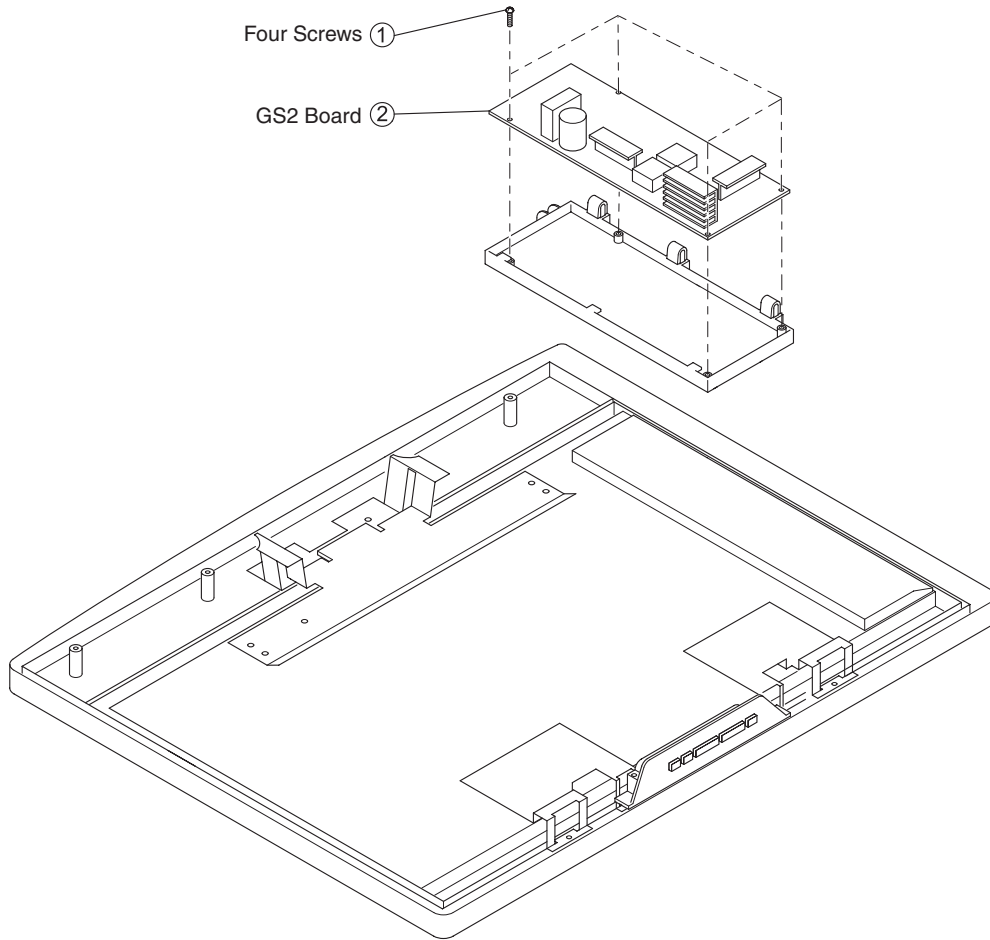


2-8. GS3/GS4 BOARD REMOVAL (37/40 inches)

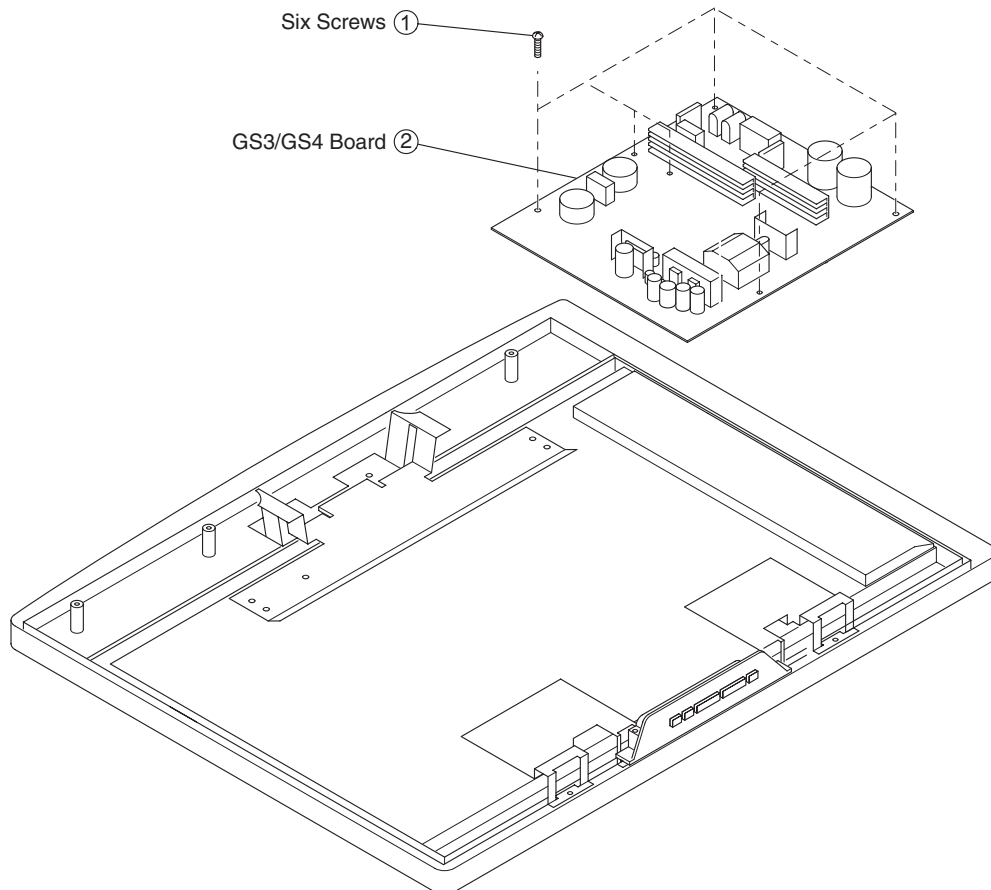


2-9. H1PS BOARD REMOVAL

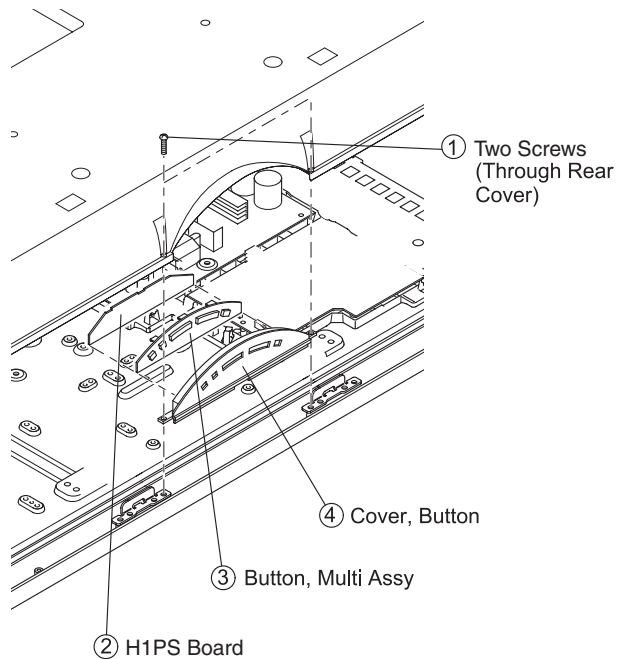

2-10. H3PS BOARD REMOVAL

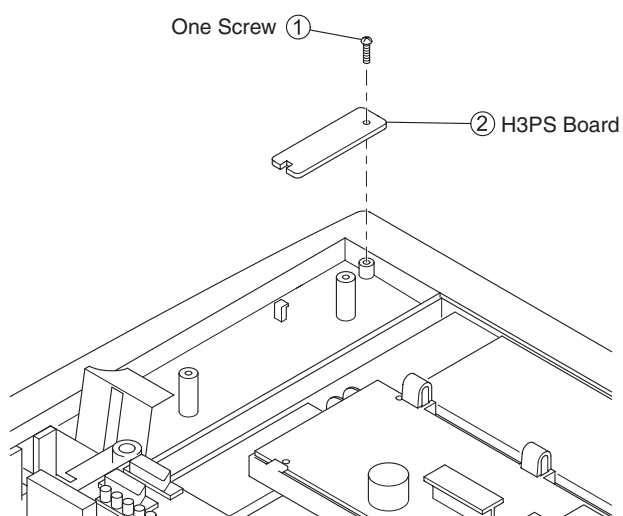

2-11. LCD PANEL REMOVAL

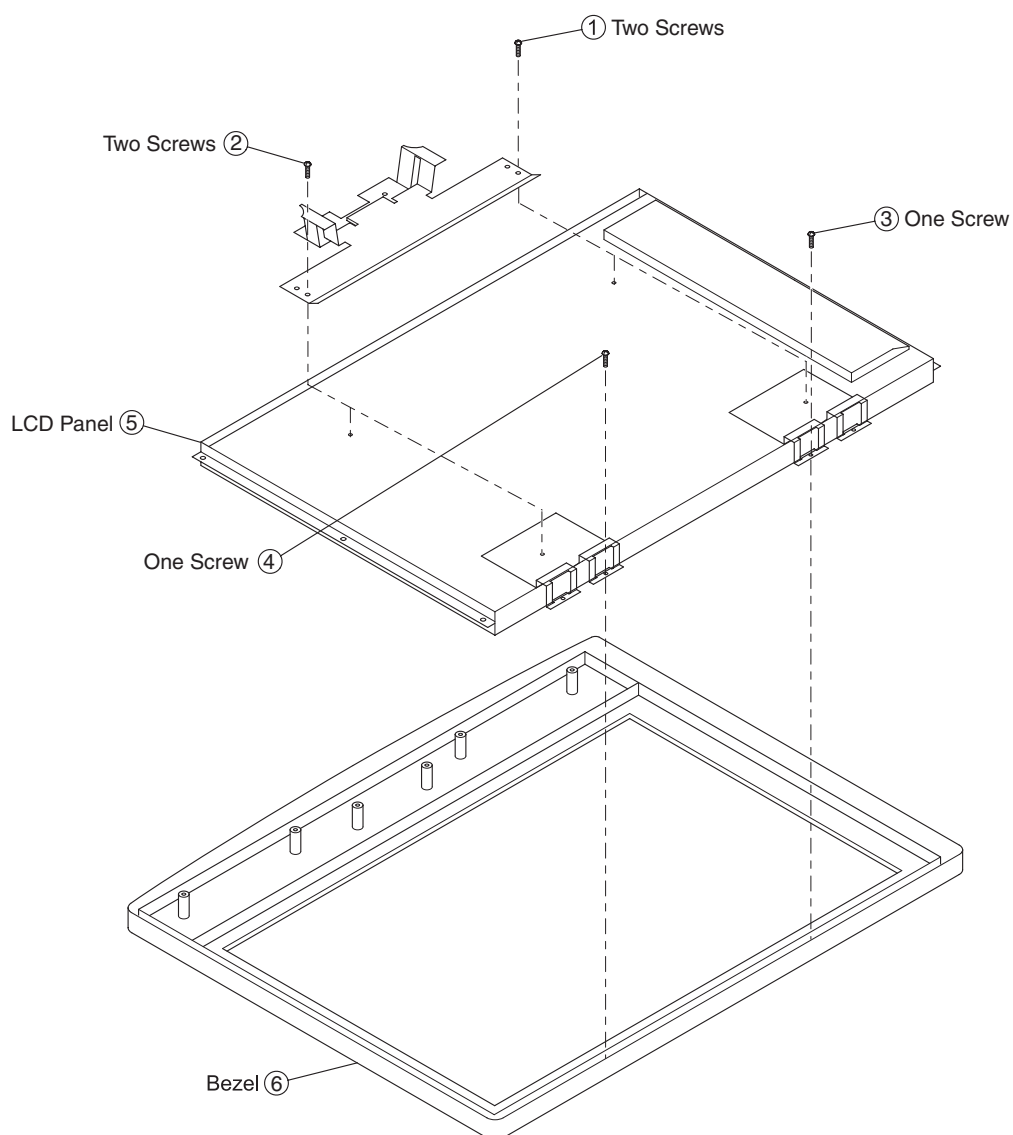


SECTION 3 CIRCUIT ADJUSTMENTS

3-1. Electrical Adjustments

Service adjustments to this model can be performed using the supplied remote commander RM-ED009.

How to enter into the Service Mode

1. Turn on the power to the TV set and enter into the stand-by mode.
2. Press the following sequence of buttons on the remote commander.

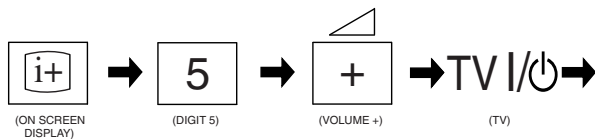

‘TT—’ will appear in the upper right corner of the screen.
Other status information will also be displayed (See 3-3 page 18).

3. Press ‘MENU’ on the remote commander to obtain the following menu on the screen.

BACKLIGHT
HDMI
SOUND
IF ADJUST
PANEL TEMP
ERROR MENU

SE2 v0.10
FACTORY DATA: 11111111
SERIAL NUMBER: 4294967295
WORKING TIME: 0:22

4. Move to the corresponding adjustment item using the up or down arrow buttons on the Remote Commander.
5. Press the right arrow button to enter into the required menu item.
6. Press the ‘Menu’ button on the Remote Commander to quit the Service Mode when all adjustments have been completed.

Note :

- After carrying out the service adjustments, to prevent the customer accessing the ‘Service Menu’ switch the TV set OFF and then ON again.

BACKLIGHT

BACKLIGHT	(0, 255)	235
U BACKLIGHT	(0, 10)	10
BL SETUDEN	(0, 255)	38
BL BOTTOM	(0, 255)	92
ECO MODE	(0, 1)	1
APL MAX	(0, 255)	140
DIMMER MIN	(-128, +127)	-32
APL FACTOR	(0, 255)	0
OSD CONTR MIN	(0, 255)	40
DIMMER	(0, 255)	186
APL MIN	(0, 255)	103

HDMI

VAI2	(0, 255)	0
VAI3	(0, 255)	0
Vper MSB	(0, 255)	3
Vper LSB	(0, 255)	31
Hper MSB	(0, 255)	0
HS Width MSB	(0, 255)	0
STM LSB	(0, 255)	176
Ri (MSB)	(0, 255)	218
Ri (LSB)	(0, 255)	101
Aksv_0	(0, 255)	0
Aksv_1	(0, 255)	0
Aksv_2	(0, 255)	0
Aksv_3	(0, 255)	0
Aksv_4	(0, 255)	0
An_0	(0, 255)	0
An_1	(0, 255)	0
An_2	(0, 255)	0
An_3	(0, 255)	0
An_4	(0, 255)	0
An_5	(0, 255)	0
An_6	(0, 255)	0
An_7	(0, 255)	0
Pj	(0, 255)	202
Ainfo	(0, 255)	0
Flags	(0, 255)	6

SOUND			
Lineout offset	(-80, +40)		+8
M-N	(0, 511)		192
M-D	(-128, -1)		-20
M-S	(+0, +127)		+20
S-M	(+0, +127)		+10
D-M	(-128, -1)		-10
N-M	(0, 1023)		496
Effect Mode	(+0, +2)		+1
BBE Mode	(-0, +127)		+0
BBE Vol main	(+0, +255)		+3
BBE Vol res	(+0, +7)		+0
B1	(-96, +96)		+8
B2	(-96, +96)		+2
B3	(-96, +96)		-12
B4	(-96, +96)		-12
B5	(-96, +96)		+6
Loudness	(+0, +68)		+23
MB_STR	(+0, -127)		+0
MB_LIM	(-32, +0)		+0
MB_HMC	(+0, +127)		+0
MB_LP	(+5, +30)		+5
MB_HP	(+3, +30)		+3
SUBW_FREQ	(+5, +40)	00000	+5
NICAM C AD			
NICAM Error	(0, 2047)		2047
Stereo	(-128, +127)		+0
Status		0000000110	

IF ADJUST			
Automute		0	
Audio Gain		0	
L Gating		0	
Coincidence		0	
AFT window		1	
AFT Status		0111	
AGC TOP	(-16, +15)		+0

PANEL TEMP			
TEMPERATURE	(0, 125)		33

ERROR MENU			
E02: BALANCER	(0, 255)		0
E03: DC Fail	(0, 255)		0
E04: INVERTER	(0, 255)		0
E05: NVM	(0, 255)		0
E06: IIC	(0, 255)		0
E07: HDMI	(0, 255)		0
E08: DIGITAL	(0, 255)		0
E09: TUNER	(0, 255)		0
E10: SP	(0, 255)		0
E13: RTC	(0, 255)		0
WORKING TIME			
HOURS	(0, 65535)		0
MINUTES	(0, 59)		0

3-2.TT MODE

TT mode is available by setting the TV for operation in Service Mode [As shown on Page 15] , OSD 'TT' appears. The functions described below are available by selecting the two numbers. To release the 'Test mode 2', press 00, 10, 20 ... twice or switch the TV set into Stand-by mode. In 'TT Menu' mode, it is possible to remove the Menu from the screen by pressing the Speaker Off button once. Pressing the Speaker OFF button a second time will cause the Menu to reappear. The function is kept even when the menu is not displayed on screen !!.

00	'TT' mode off
03	Set volume to 35%
04	Set volume to 50%
05	Set volume to 65%
06	Set volume to 80%
07	Ageing mode on
08	Shipping Condition
09	WB adj initial conditions
14	Teletext centered
19	Factory toggle mode (on/off)
27	CBA mode toggle (ON/OFF)
31	ECS mode toggle (ON/OFF)
32	Set BCN channels preset
33	Connect/Disconnect EDID write o general I2C bus
34	HDMI log enable/disable
35	Hotel mode toggle
37	PC Monitor mode toggle
38	OTRUM mode
39	Enable Digital Test
41	Re-initialise NVM
43	Select Dual Sound "A"
44	Select Dual Sound "B"
45	Select Dual Sound "Mono"
46	Select Dual Sound "Stereo"
48	Set NVM as non-virgin
49	Set NVM as virgin
51	Hybrid/ALPS tuner selection
52	Temperature sensor enable/disable
53	Digital/Analog model
54	Watchdog toggle
55	Audio delay toggle
56	Set Bravia Model enable/disable
57	MSP Auto Carrier Mute function enable/disable
58	Chip select toggle

59	Visual I2C toggle
61	Set 15" 4:3 XGA settings
62	Set 20" 4:3 VGA settings
63	Set 20" WXGA settings
64	Set 23" WXGA settings
65	Set 26" WXGA settings
66	Set 32" WXGA settings
67	Set 37" WXGA settings
68	Set 40" WXGA settings
71	Auto AGC
72	AM from baseband (AFRIC dem) or fromRF (MSP dem)
73	HDMI number of inputs (0 to 2)
74	DDC enable
75	Set centred balance
76	Set volume to max
77	Set volume to min
78	Set balance full left
79	Set balance full right
81	Digital BER display
82	Digital Service menu
83	Digital colour bar output from DENC
84	TS CI path through
85	Digital tuner power down (Only 1 power cycle,default is no power down)
86	Switch between two digital SW banks
87	Local keys test
88	Digital shipping conditions (Clear tune database)
89	LED test
91	OAD enable/disable toggle
92	TS CI path through with Reed Solomon off
94	Spread spectrum toggle
96	Digital debug output enable/disable
97	Digital 656 output enable/disable
98	Digital auto reset function enable/disable
99	Display error and working time menu


3-3.TT OSD Labels

			(1)	2	6	*		D	(2)						T	T	-	-	(3)		
	E	C	S	(4)	C	B	A	(5)	B	(20)					N	o	r	m	(6)		
	D	D	C	(7)	2	(8)	E	(9)	S	(21)	H	(10)	C	(11)	M	(12)	L	(22)			
	-	(13)			T	(14)	W	(15)	C	(16)	V	(17)	D	(18)	K	(19)	X	(23)	H	(24)	


Key:

- Panel size configuration. Changed by TT61...TT68.
- D/A: D is shown when Digital mode is enabled; A is shown when Analogue mode is enabled. Changed by TT53.
- TT-- command prompt.
- ECS/---: ECS enabled/disabled (TT31).
- CBA/---: CBA is shown when the TV set is in CBA mode (This mode is available from Factory mode TT19). Changed by TT27.
- Norm/Fact: Normal or Factory mode. Changed by TT19.
- DDC/---: DDC enabled/disabled. Changed by TT74.
- 0/1/2: 0 or 2 HDMI inputs toggle. Changed by TT73.
- E/-: E is shown when EDID WP is enabled; - is shown otherwise. Changed by TT33.
- M/HO/-: M is shown when PC monitor mode is enabled changed by TT37; H is shown when Hotel mode is enabled changed by TT35; O is shown when OTRUM is enabled changed by TT38; - is shown otherwise.
- C/-: C (Default value) is shown when MSP Auto Carrier Mute function is enabled; - is shown otherwise. Changed by TT57.
- M/A: M (Default value) is shown when AM sound is demodulated in MSP; A is shown when AFRIC demodulator is used. Changed by TT72.
- N/A: Previously used to indicate Clk enabled.
- T/-: T is shown when digital test is enabled; - is shown otherwise. Changed by TT39.
- W/-: W is shown when watchdog is enabled; - is shown otherwise. Changed by TT54.
- C/-: C is shown when chip select is enabled; - is shown instead. This mode is only available in factory mode. Changed by TT58.
- V/-: V is shown when visual I2C is enabled; - is shown otherwise. Changed by TT59.
- D/-: D is shown when audio delay is enabled; - is shown otherwise. Changed by TT55.
- K/-: K is shown when spread spectrum is enabled; - is shown otherwise. Changed by TT94.
- B/-: B is shown for BRAVIA models; -is shown otherwise. This mode is only available in factory mode. Changed by TT56.
- S/-: S is shown if temperature sensor is enabled; - is shown otherwise. Changed by TT52.
- L/-: L is shown when HDMI is enabled; - is shown otherwise. Changed by TT34.
- X/-: X is shown when teletext is centered (Default value); - is shown otherwise. Changed by TT14.
- H/A: H is shown when Hybrid tuner is selected; A is shown if ALPS tuner is selected. Changed by TT51.

4-1. BLOCK DIAGRAM

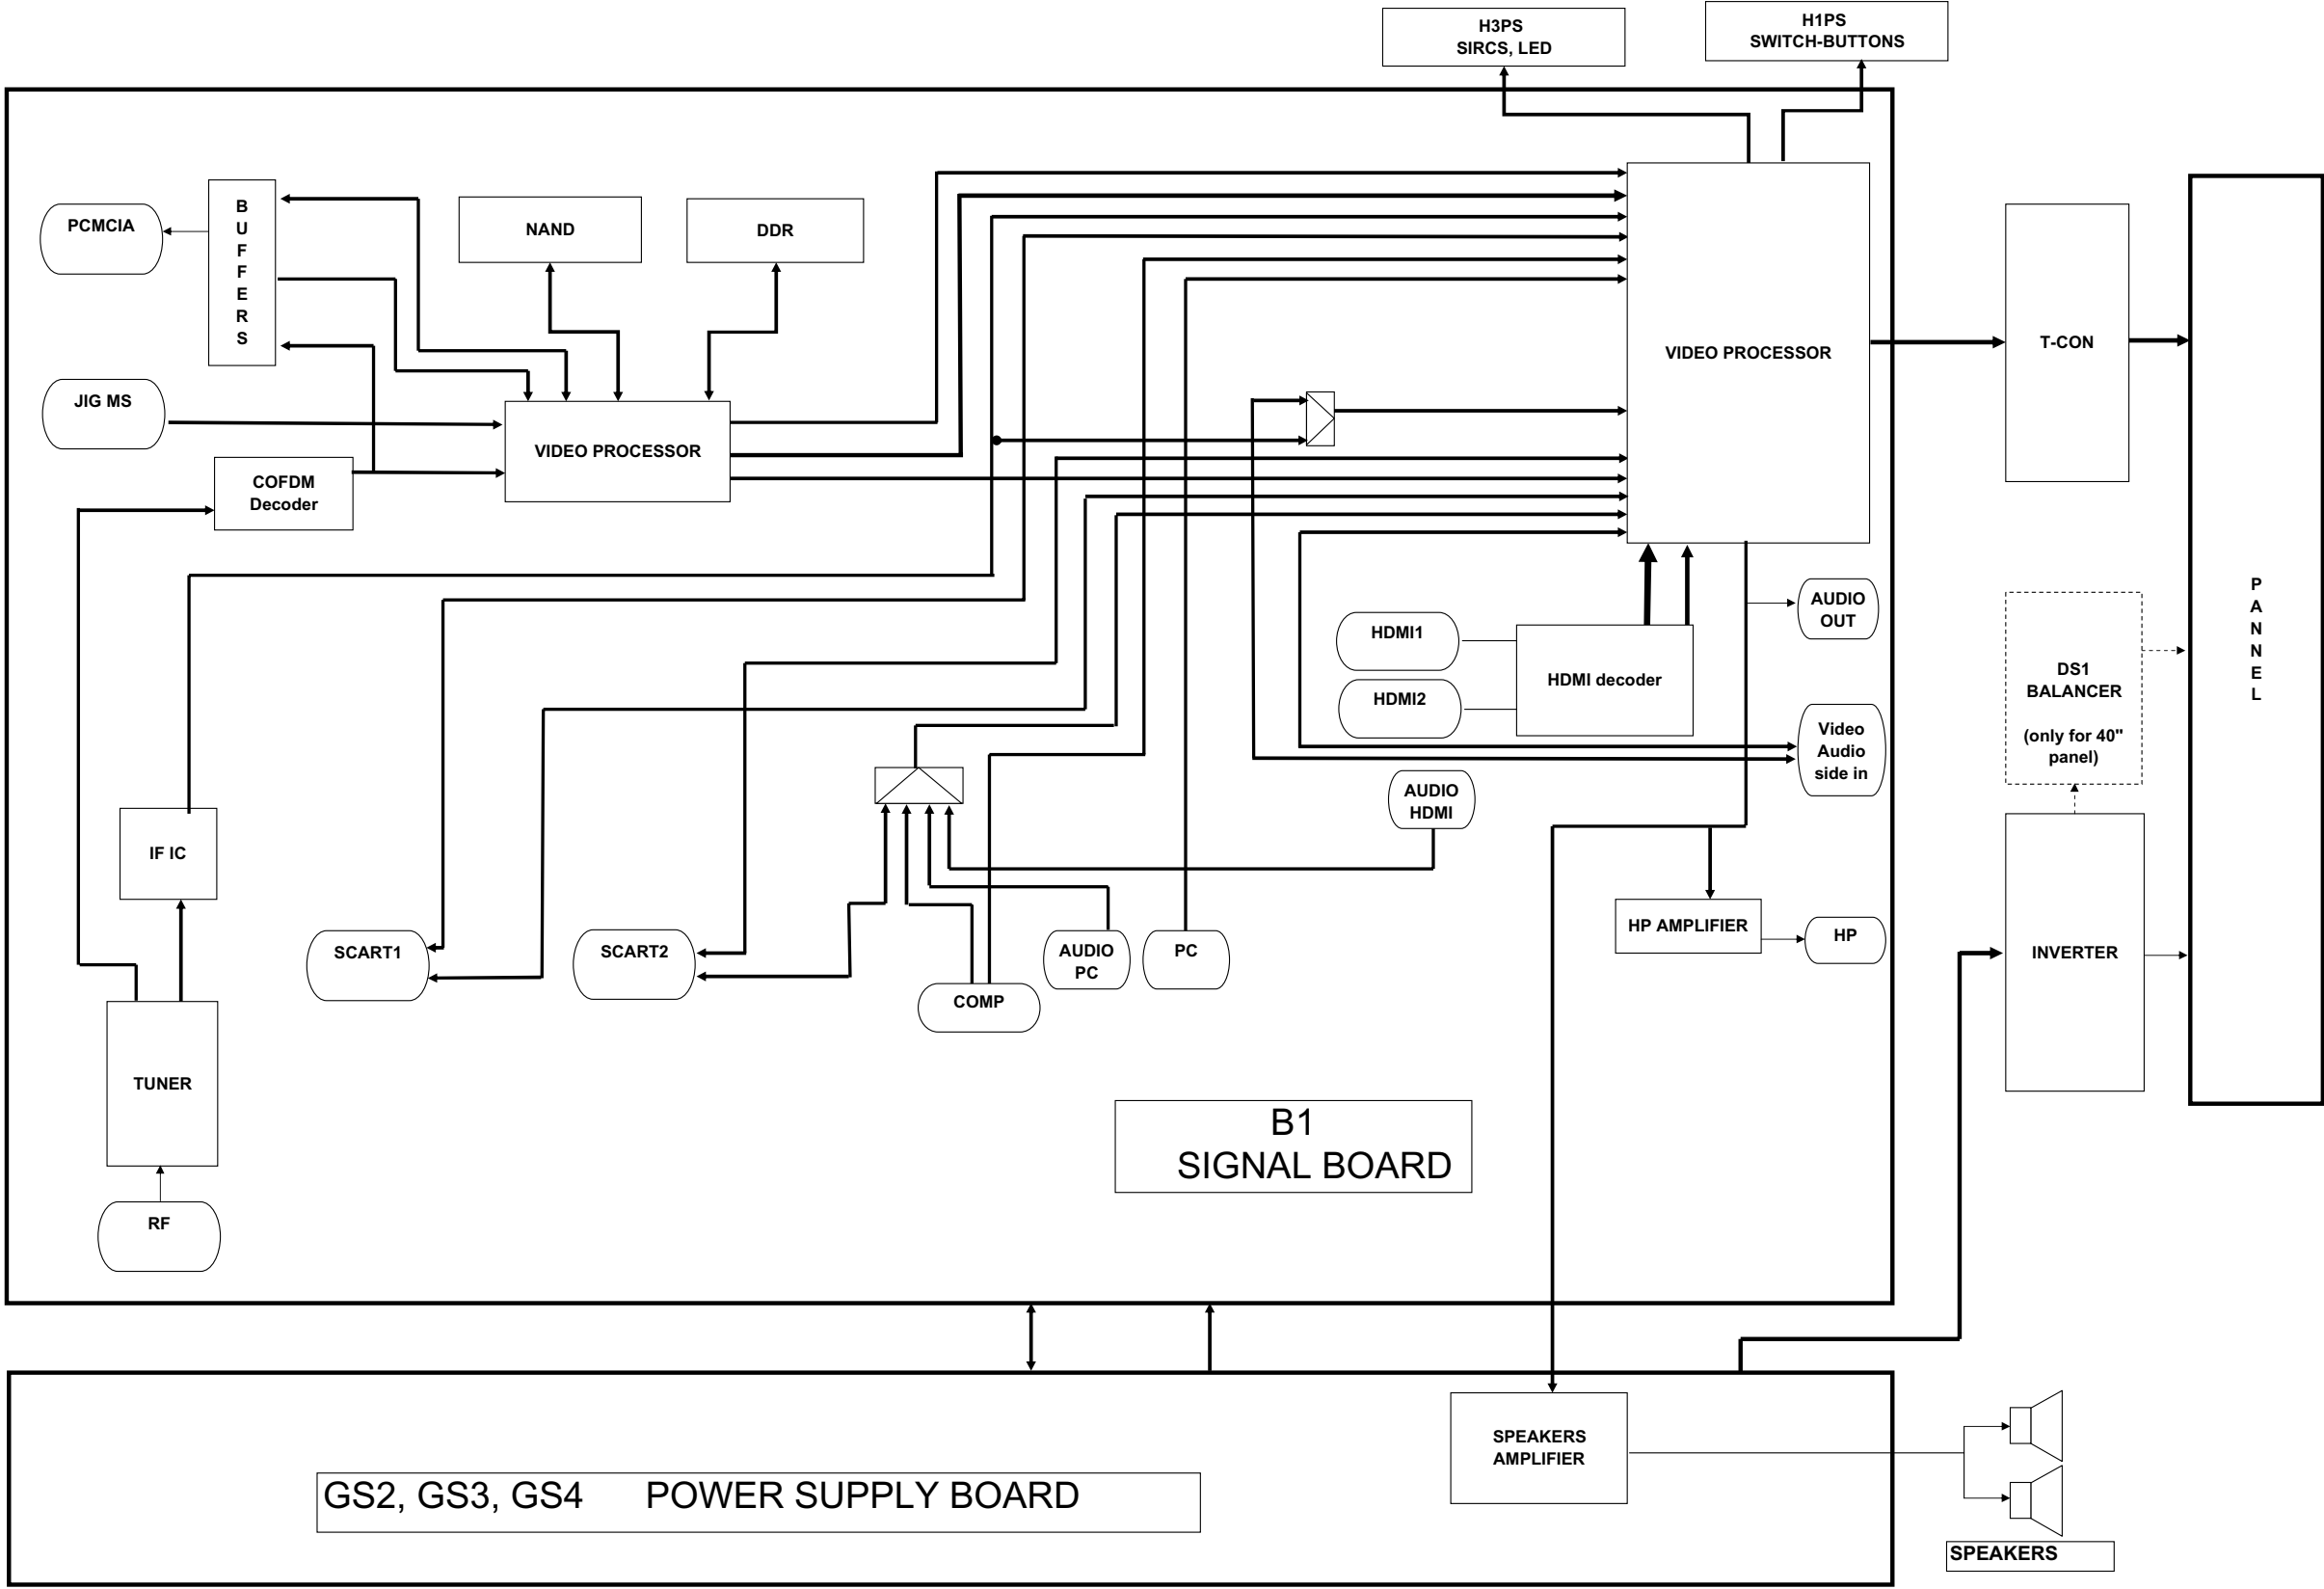

4-2. CIRCUIT BOARD LOCATION

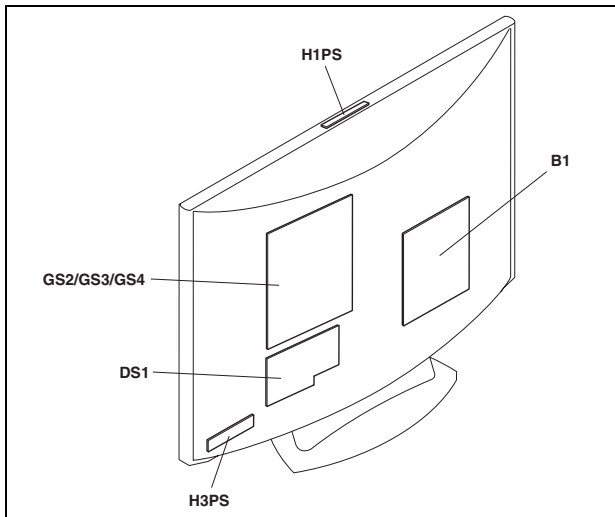

4-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note :

- All capacitors are in μF unless otherwise noted.
- pF : μF 50WV or less are not indicated except for electrolytic types.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5mm
Electrical power rating : 1/4W

- Chip resistors are 1/10W
- All resistors are in ohms.
k = 1000 ohms, M = 1000,000 ohms
- : nonflammable resistor.
- : fusible resistor.
- : internal component.
- : panel designation or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All voltages are in Volts.
- Readings are taken with a 10Mohm digital multimeter.
- Readings are taken with a color bar input signal.
- Voltage variations may be noted due to normal production tolerances.
- : B + bus.
- : B - bus.
- : RF signal path.
- : earth - ground.
- : earth - chassis.

Reference Information

RESISTOR	RN	: METAL FILM
	RC	: SOLID
	FPRD	: NON FLAMMABLE CARBON
	FUSE	: NON FLAMMABLE FUSIBLE
	RS	: NON FLAMMABLE METAL OXIDE
	RB	: NON FLAMMABLE CEMENT
	RW	: NON FLAMMABLE WIREWOUND
		: ADJUSTMENT RESISTOR
COIL	LF-8L	: MICRO INDUCTOR
CAPACITOR	TA	: TANTALUM
	PS	: STYROL
	PP	: POLYPROPYLENE
	PT	: MYLAR
	MPS	: METALIZED POLYESTER
	MPP	: METALIZED POLYPROPYLENE
	ALB	: BIPOLAR
	ALT	: HIGH TEMPERATURE
	ALR	: HIGH RIPPLE


Note : The components identified by shading and marked are critical for safety. Replace only with the part numbers specified in the parts list.

Note : Les composants identifiés par une trame et par une marque sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces de numéro spécifié.


Note : The components identified by mark contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced.

Note: Schematic diagrams are for reference only. Please refer to the electrical parts list for the correct value and part number of components.




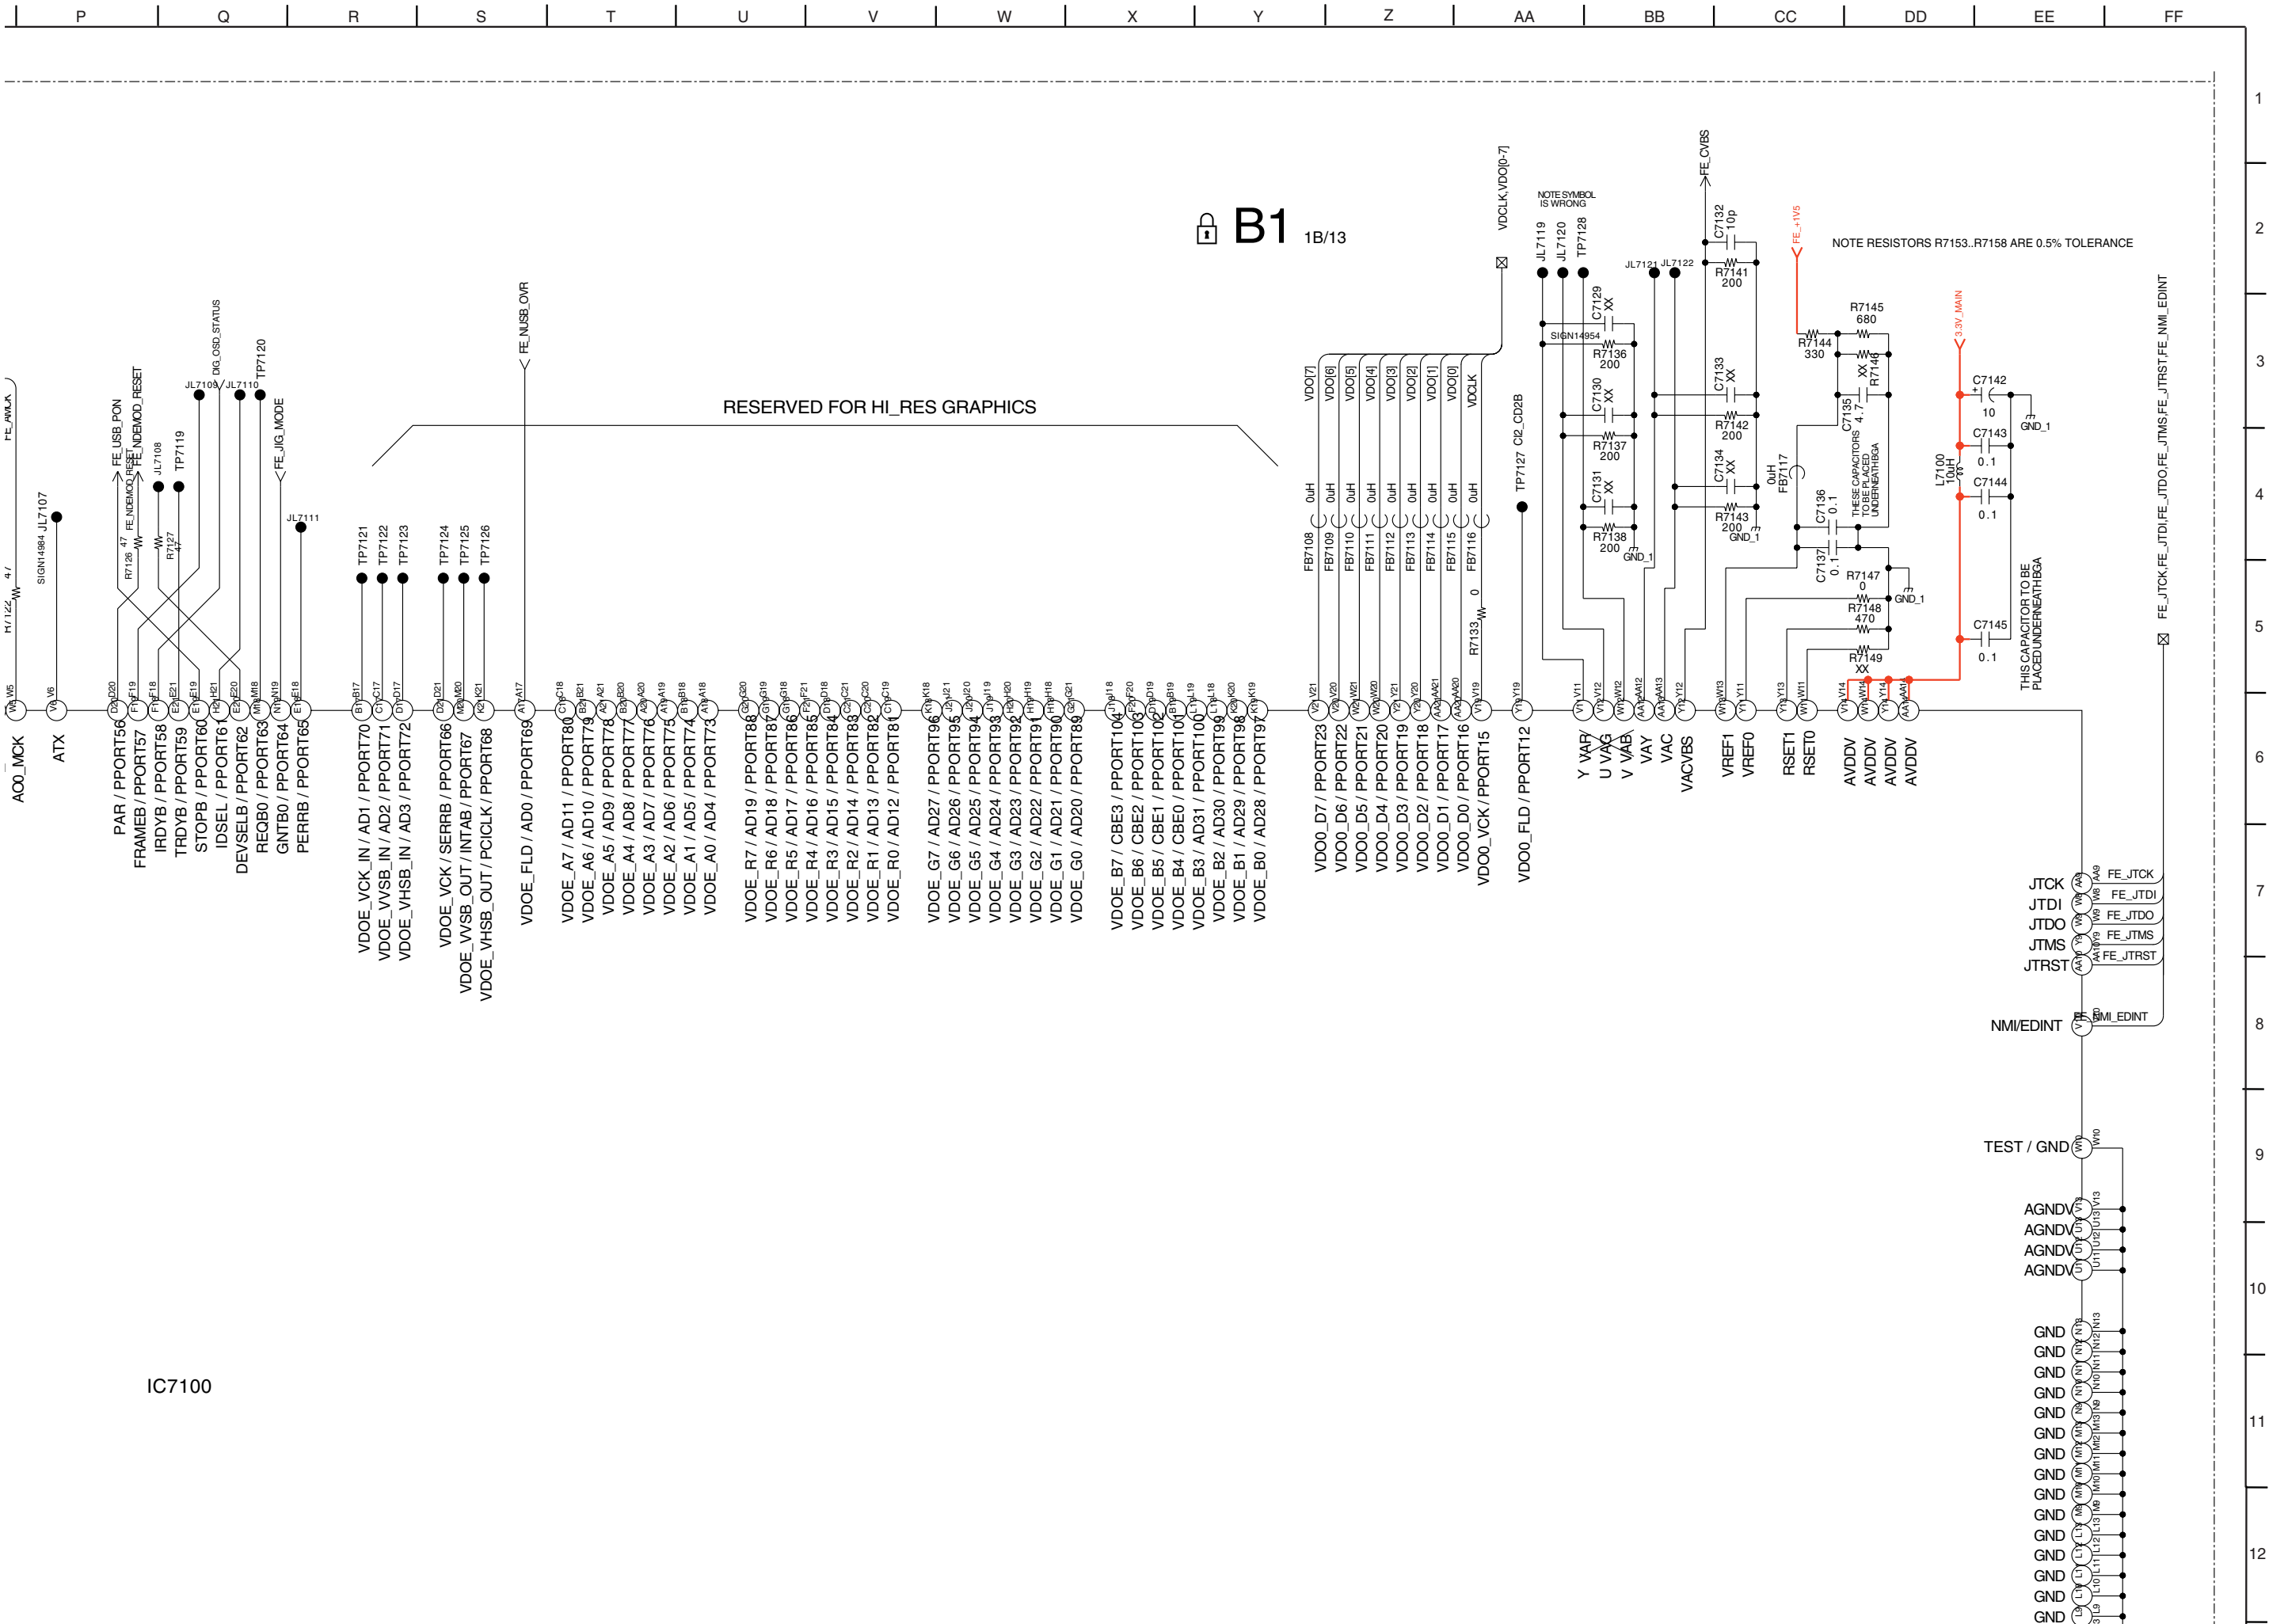



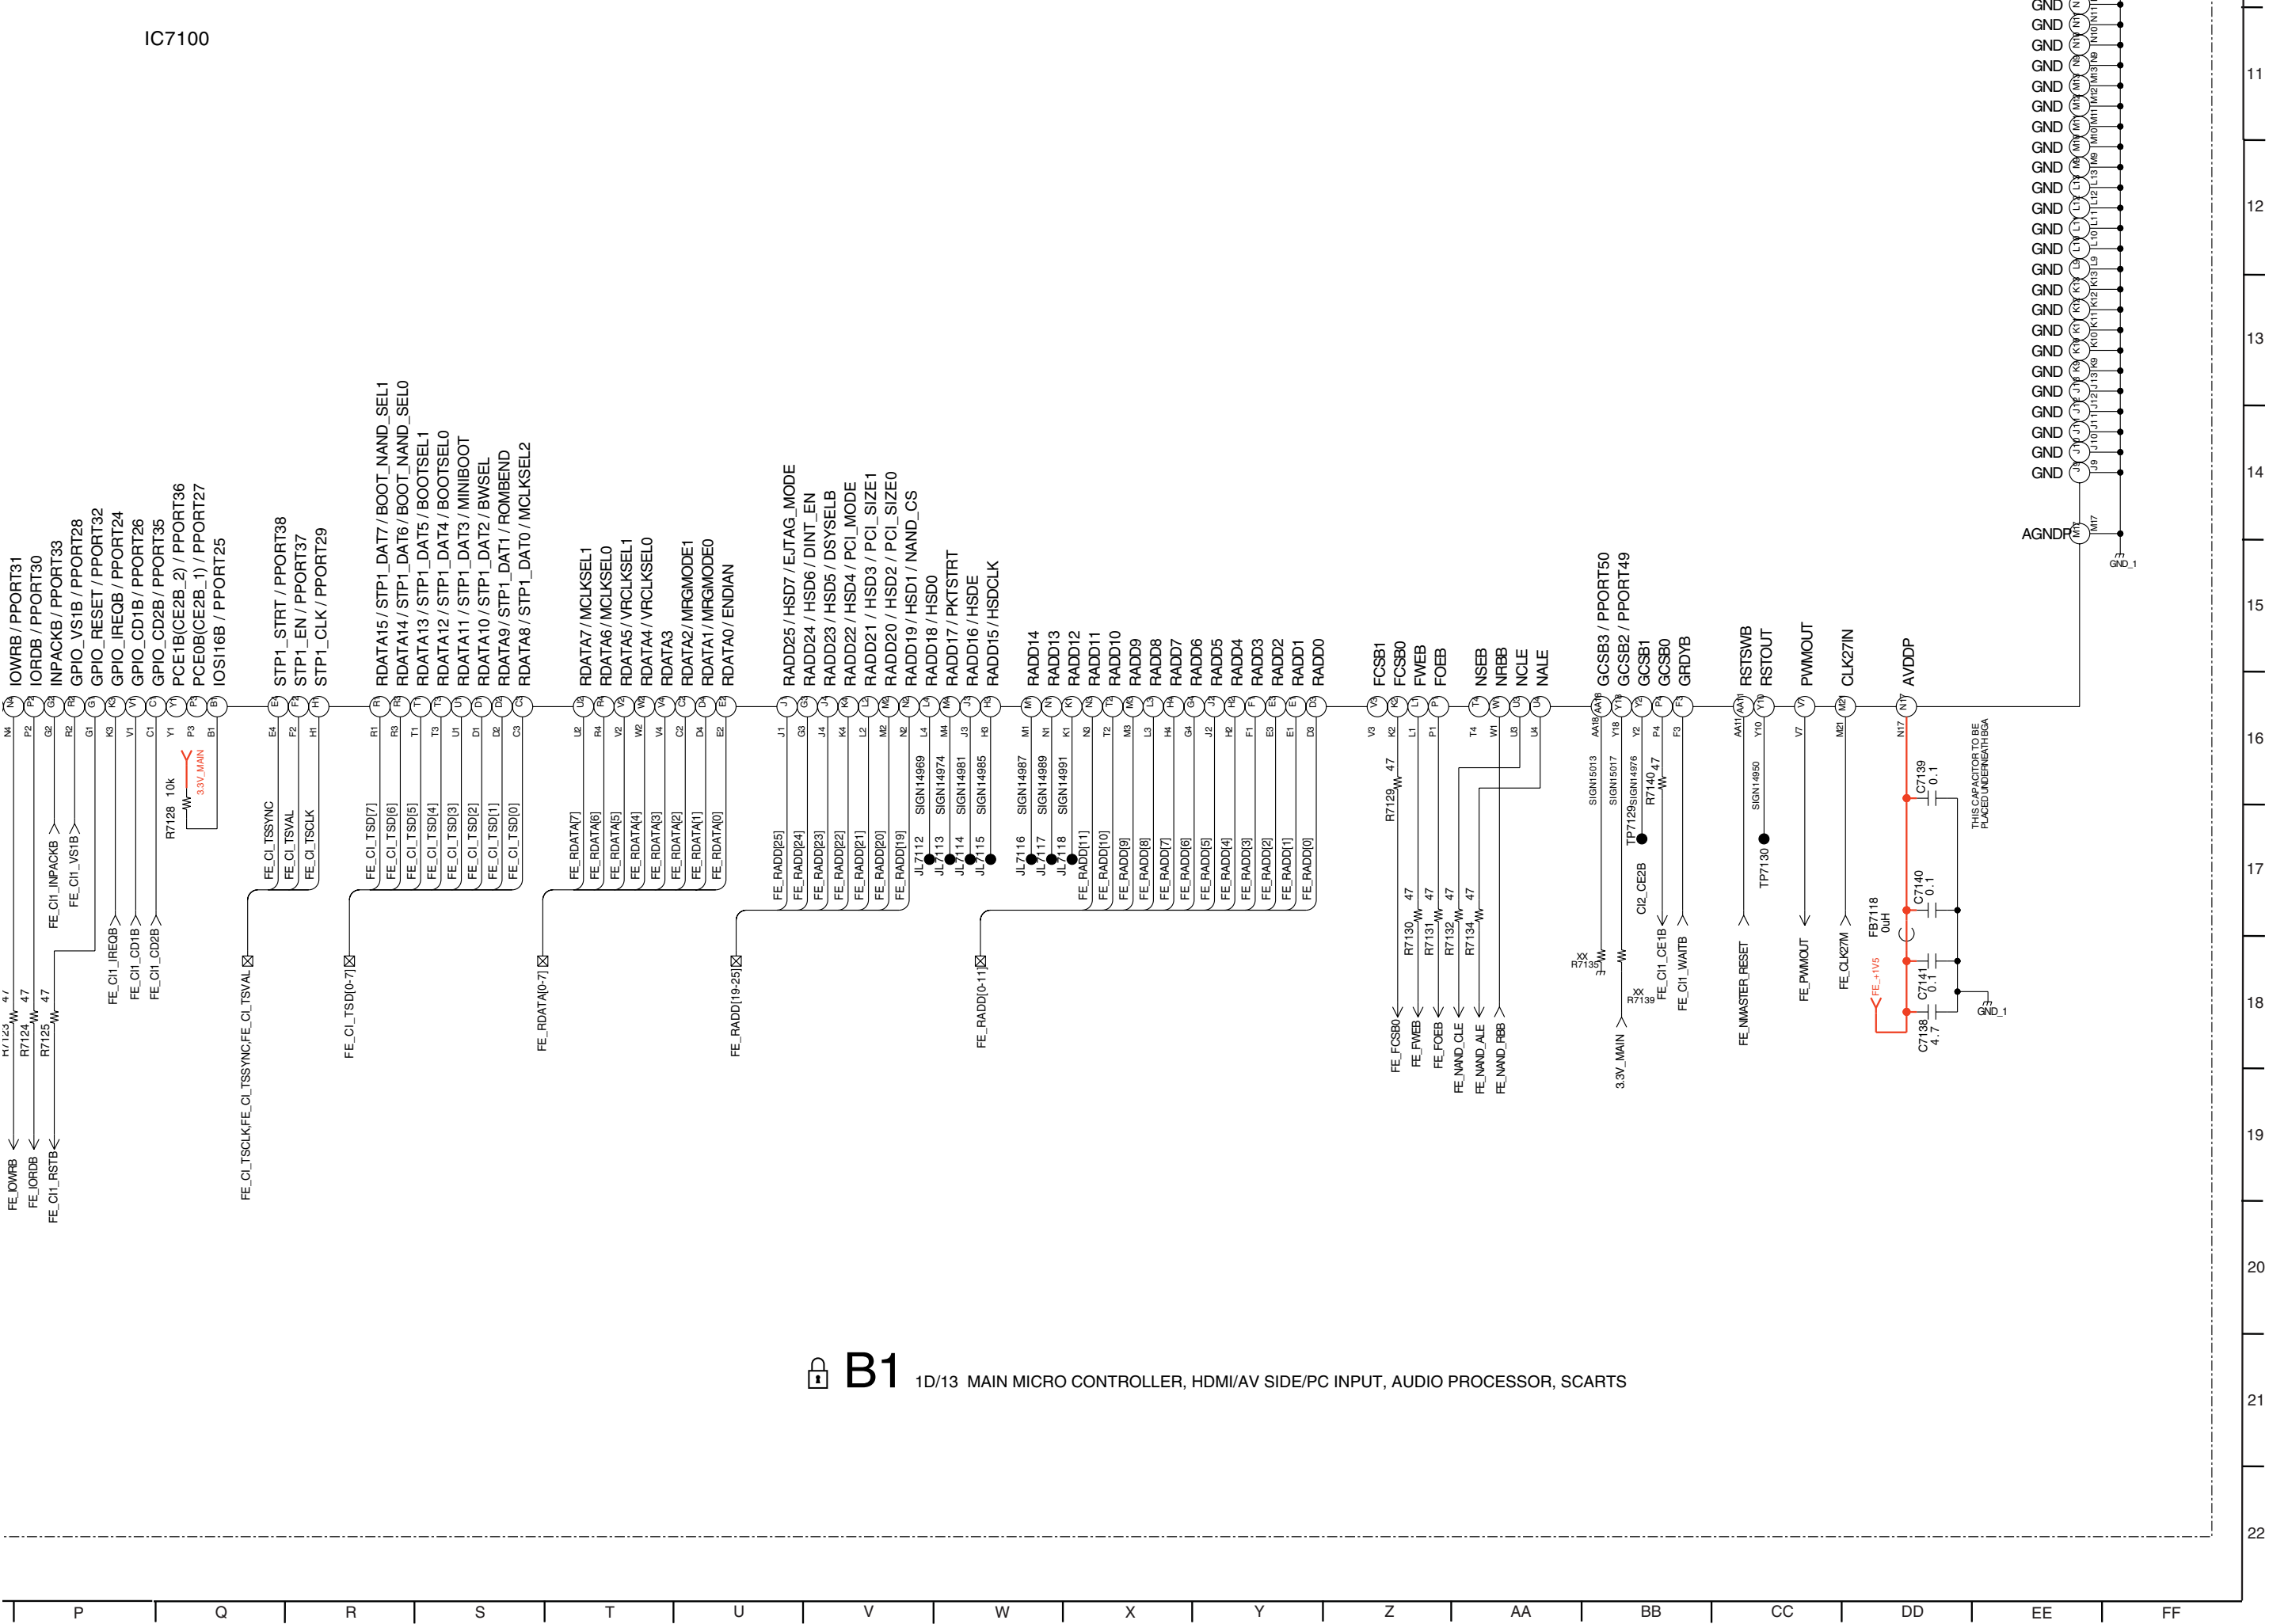


B1 1D/13 MAIN MICRO CONTROLLER, HDMI/AV SIDE/PC INPUT, AUDIO PROCESSOR, SCARTS

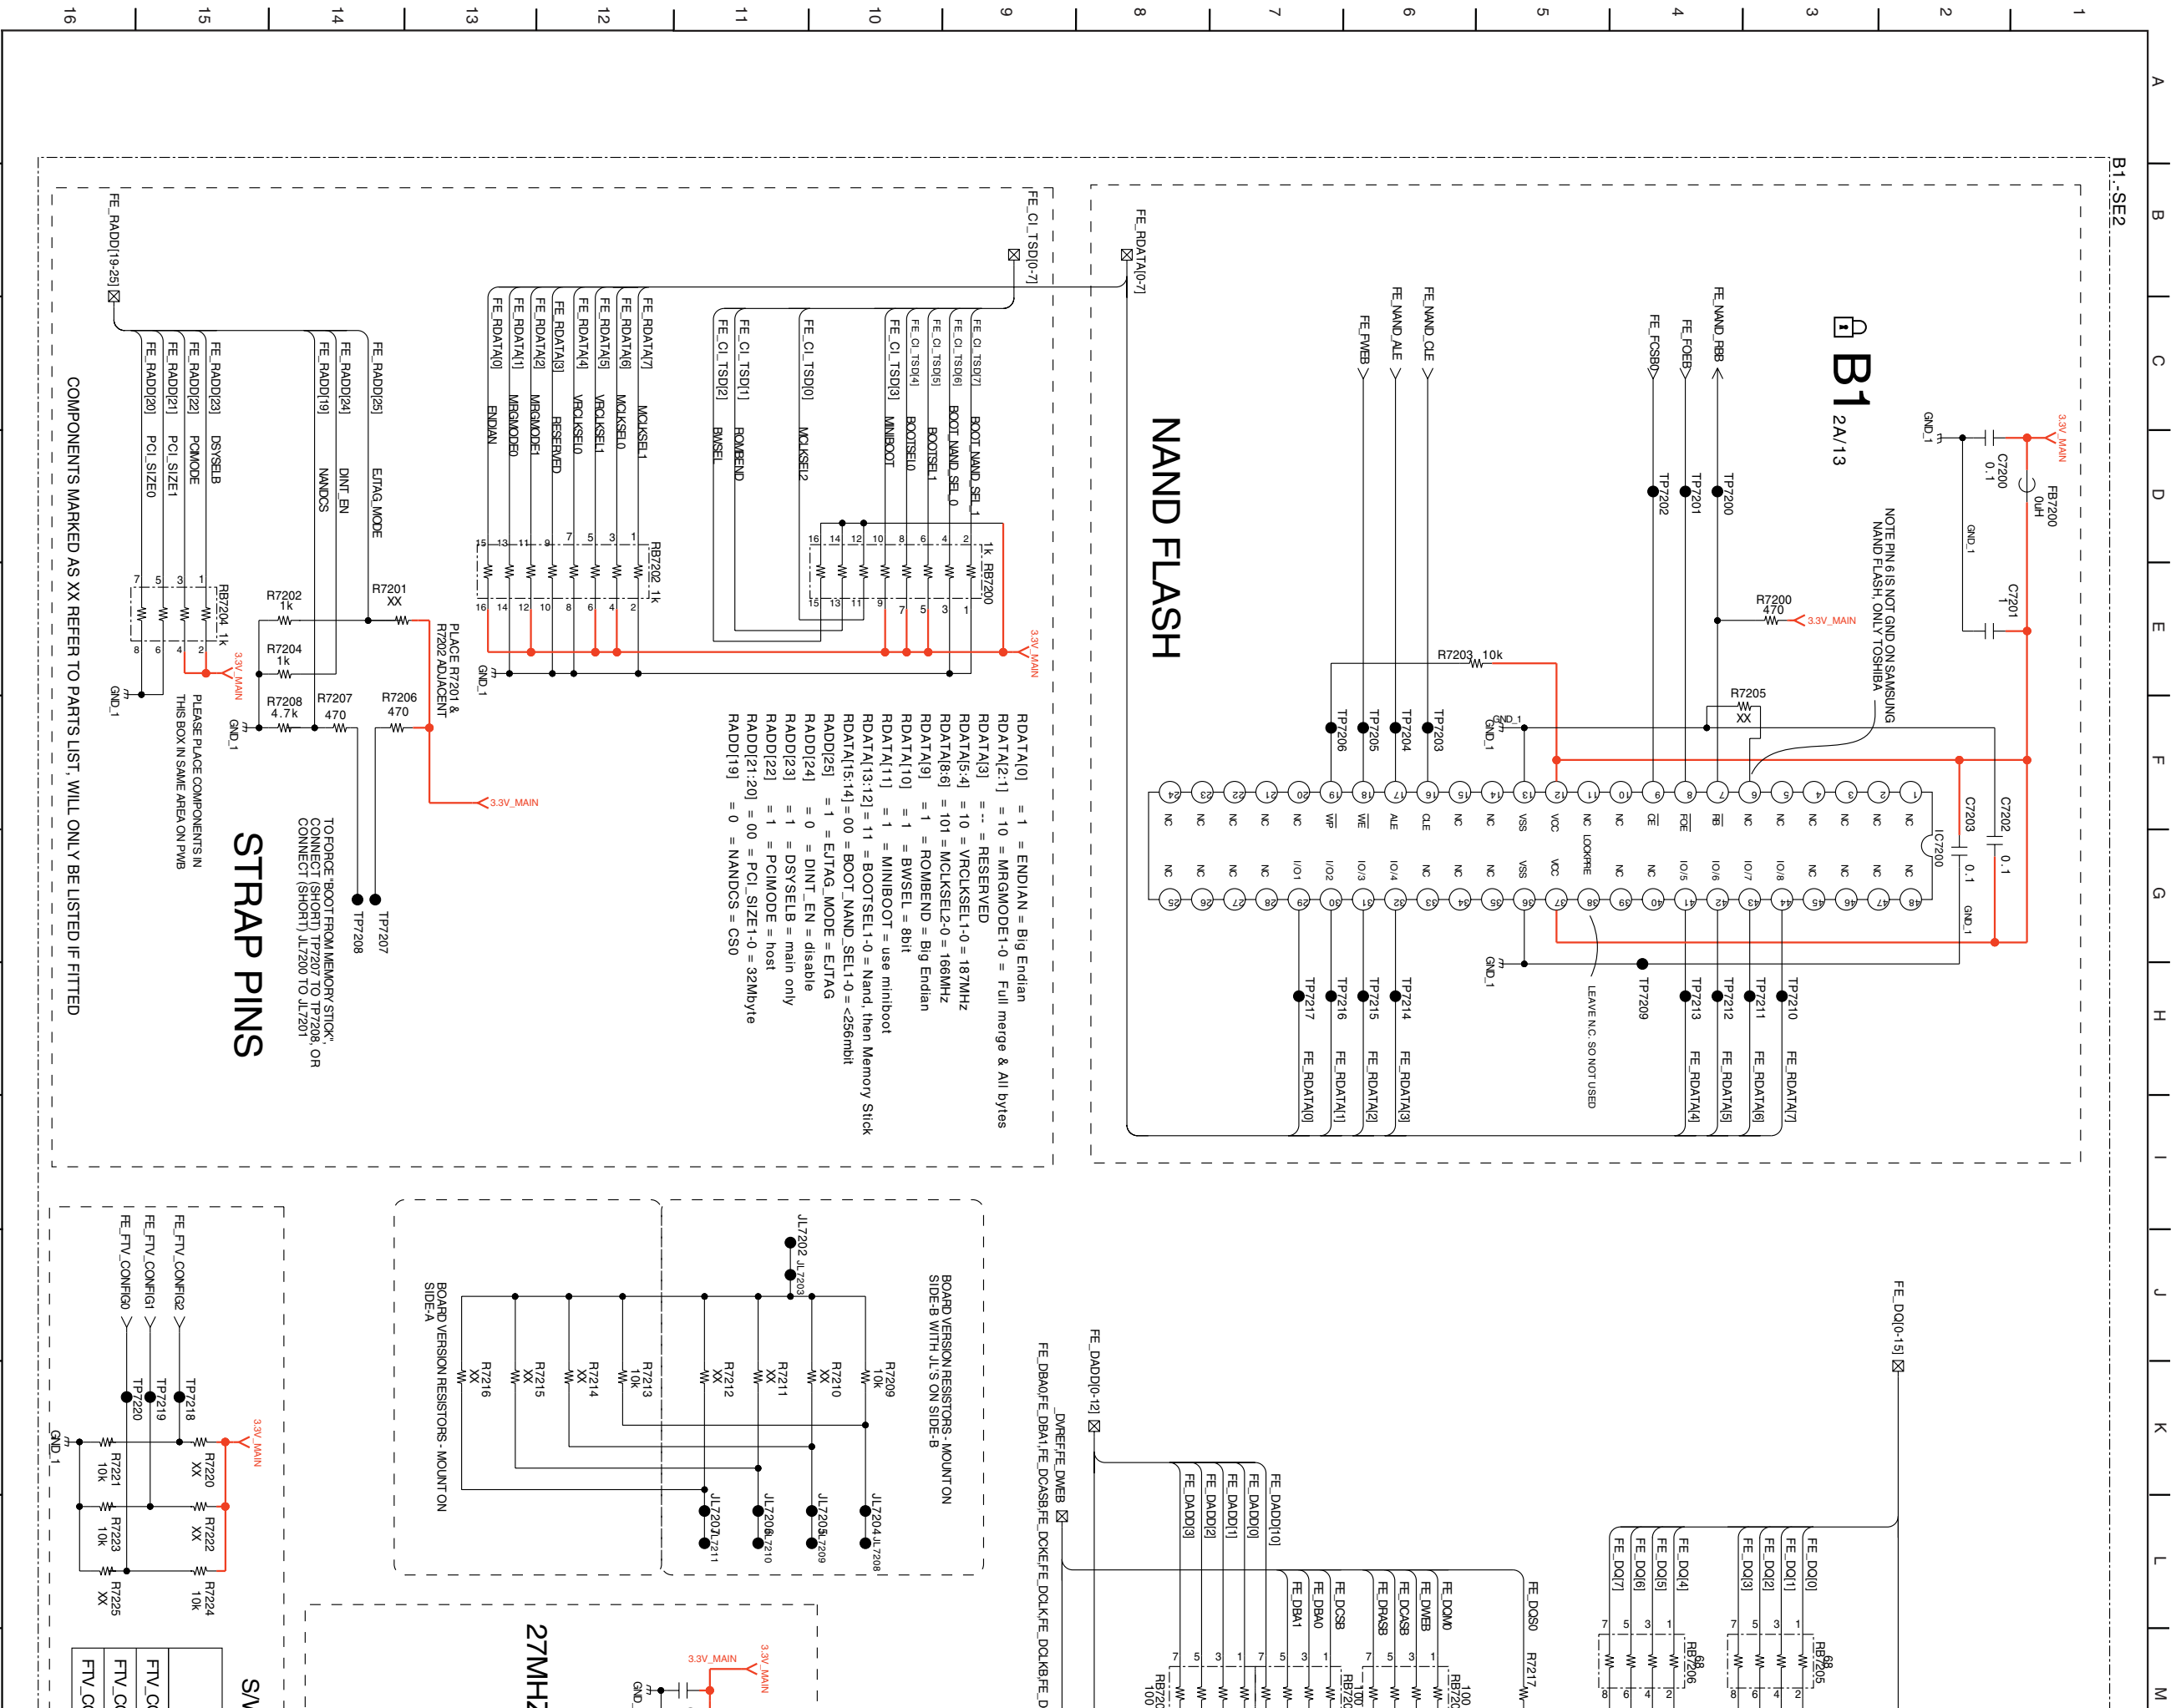







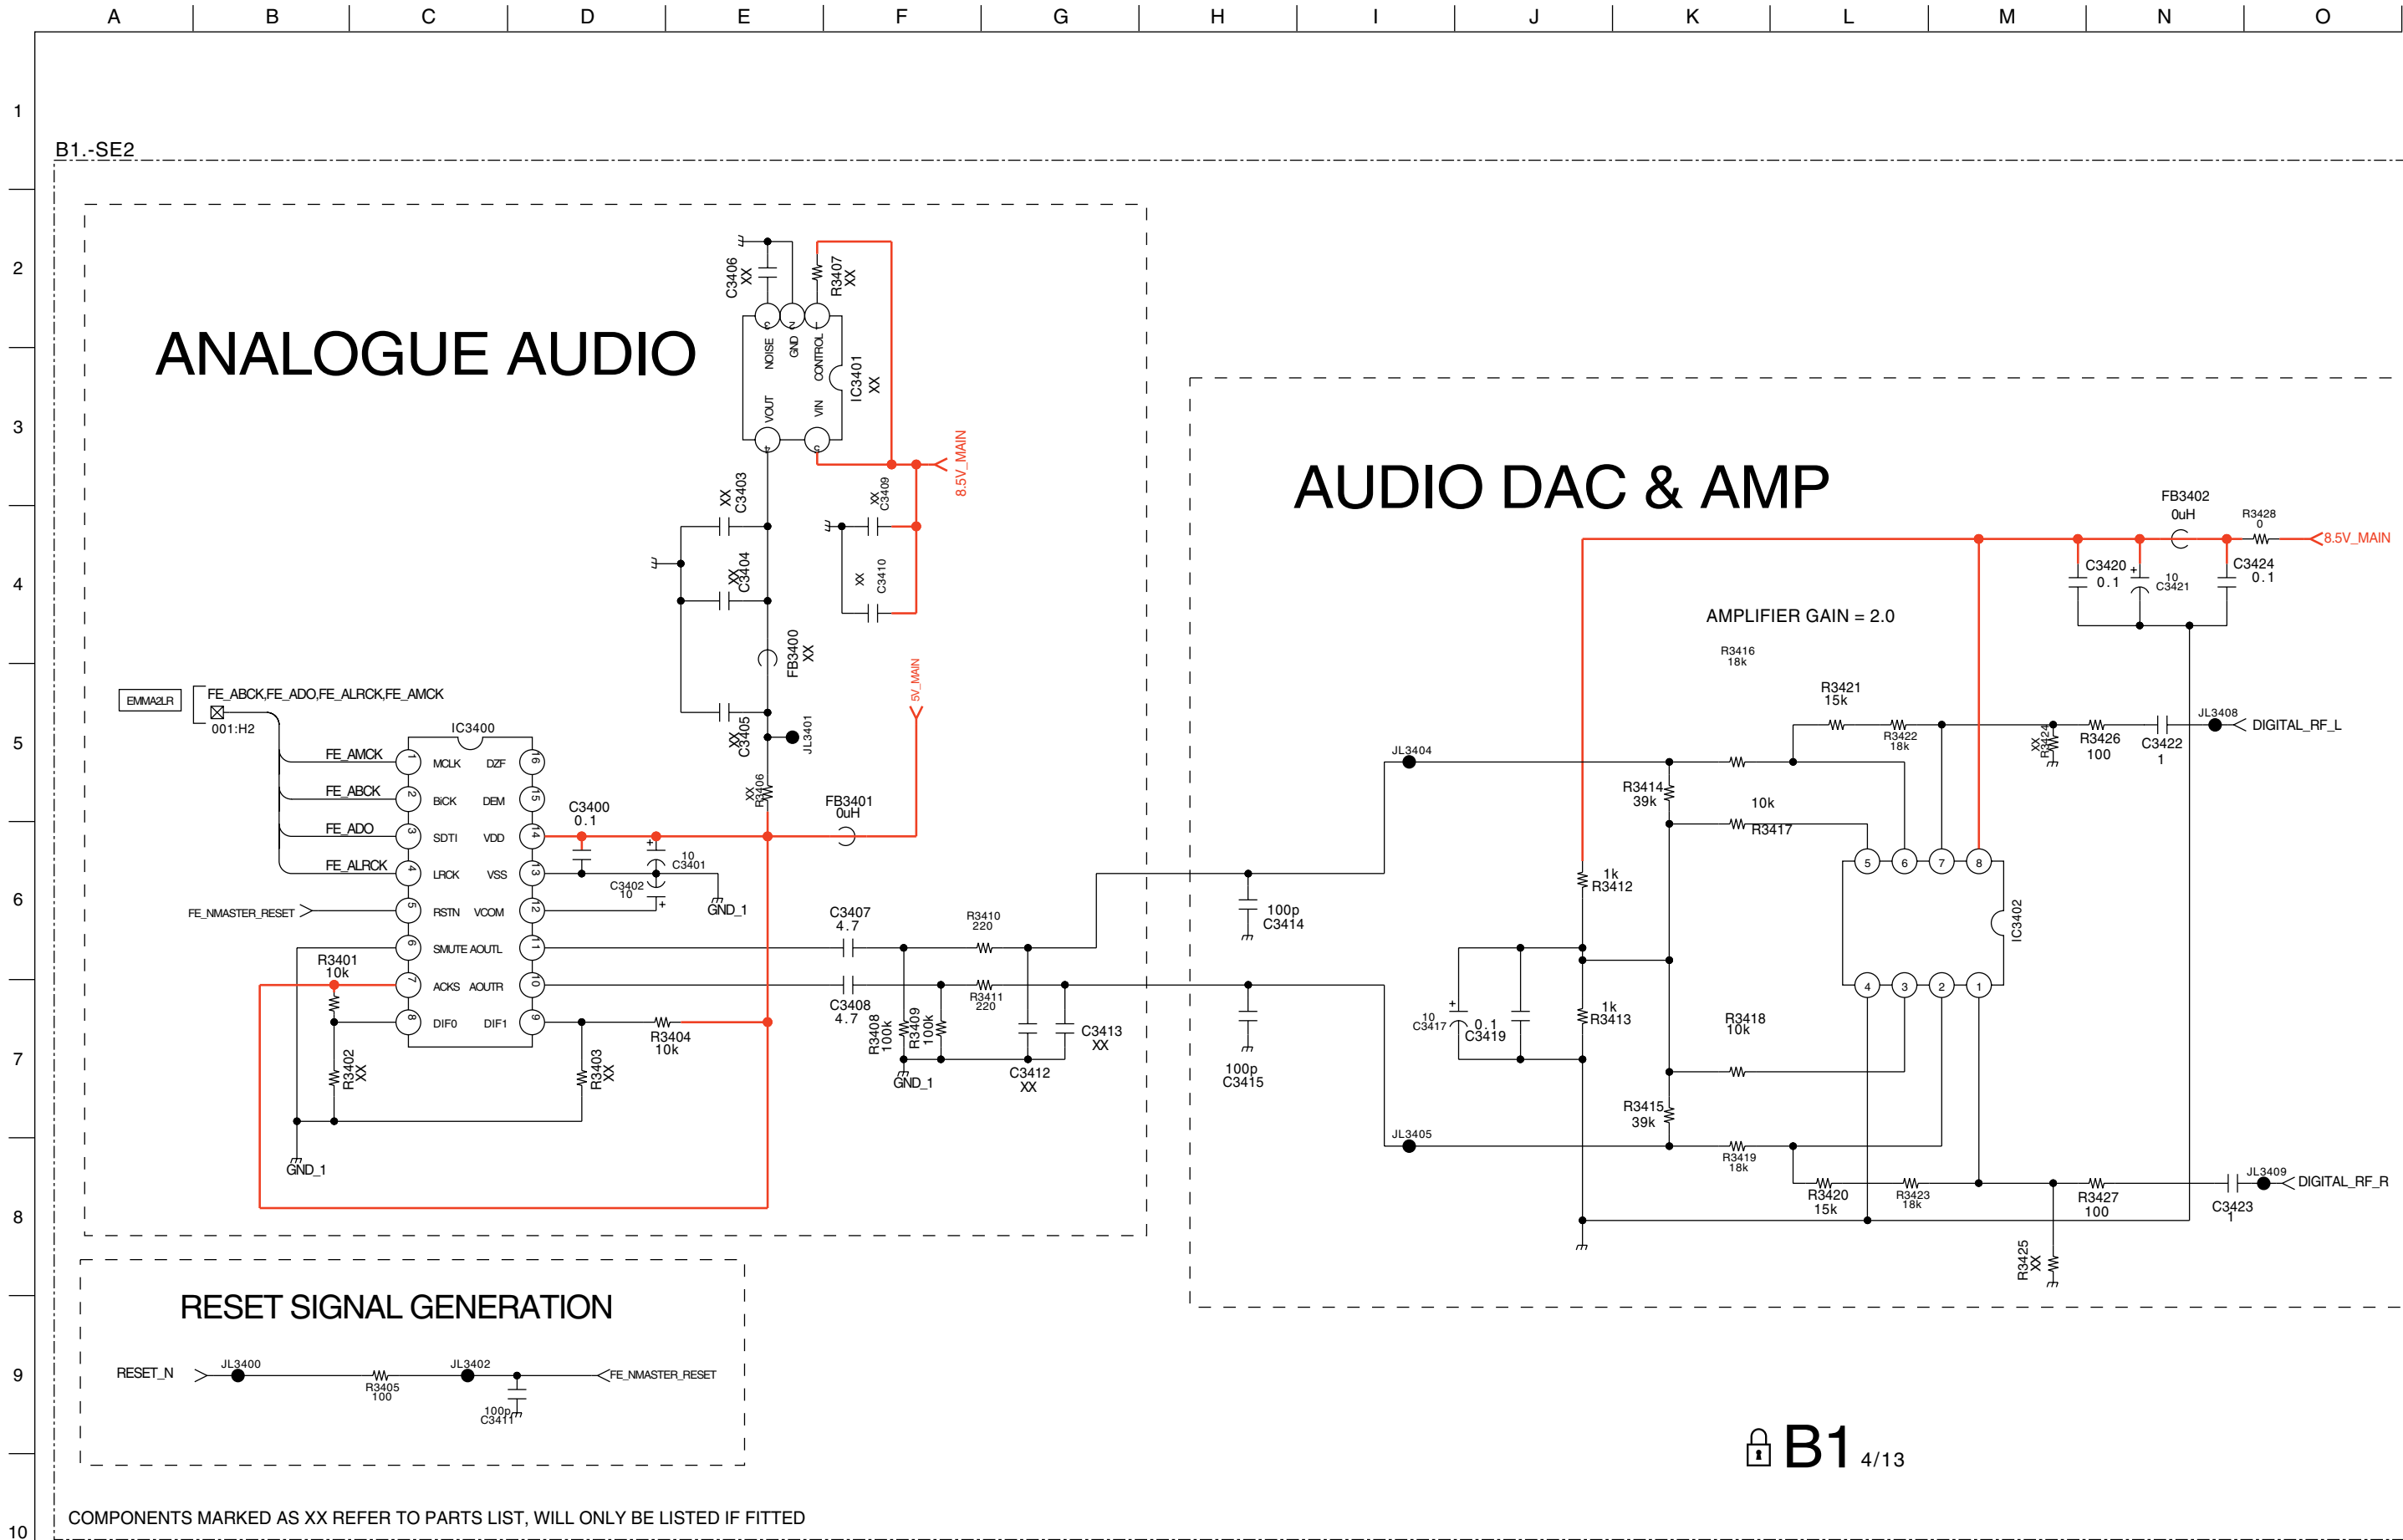



🔒 B1 4/13

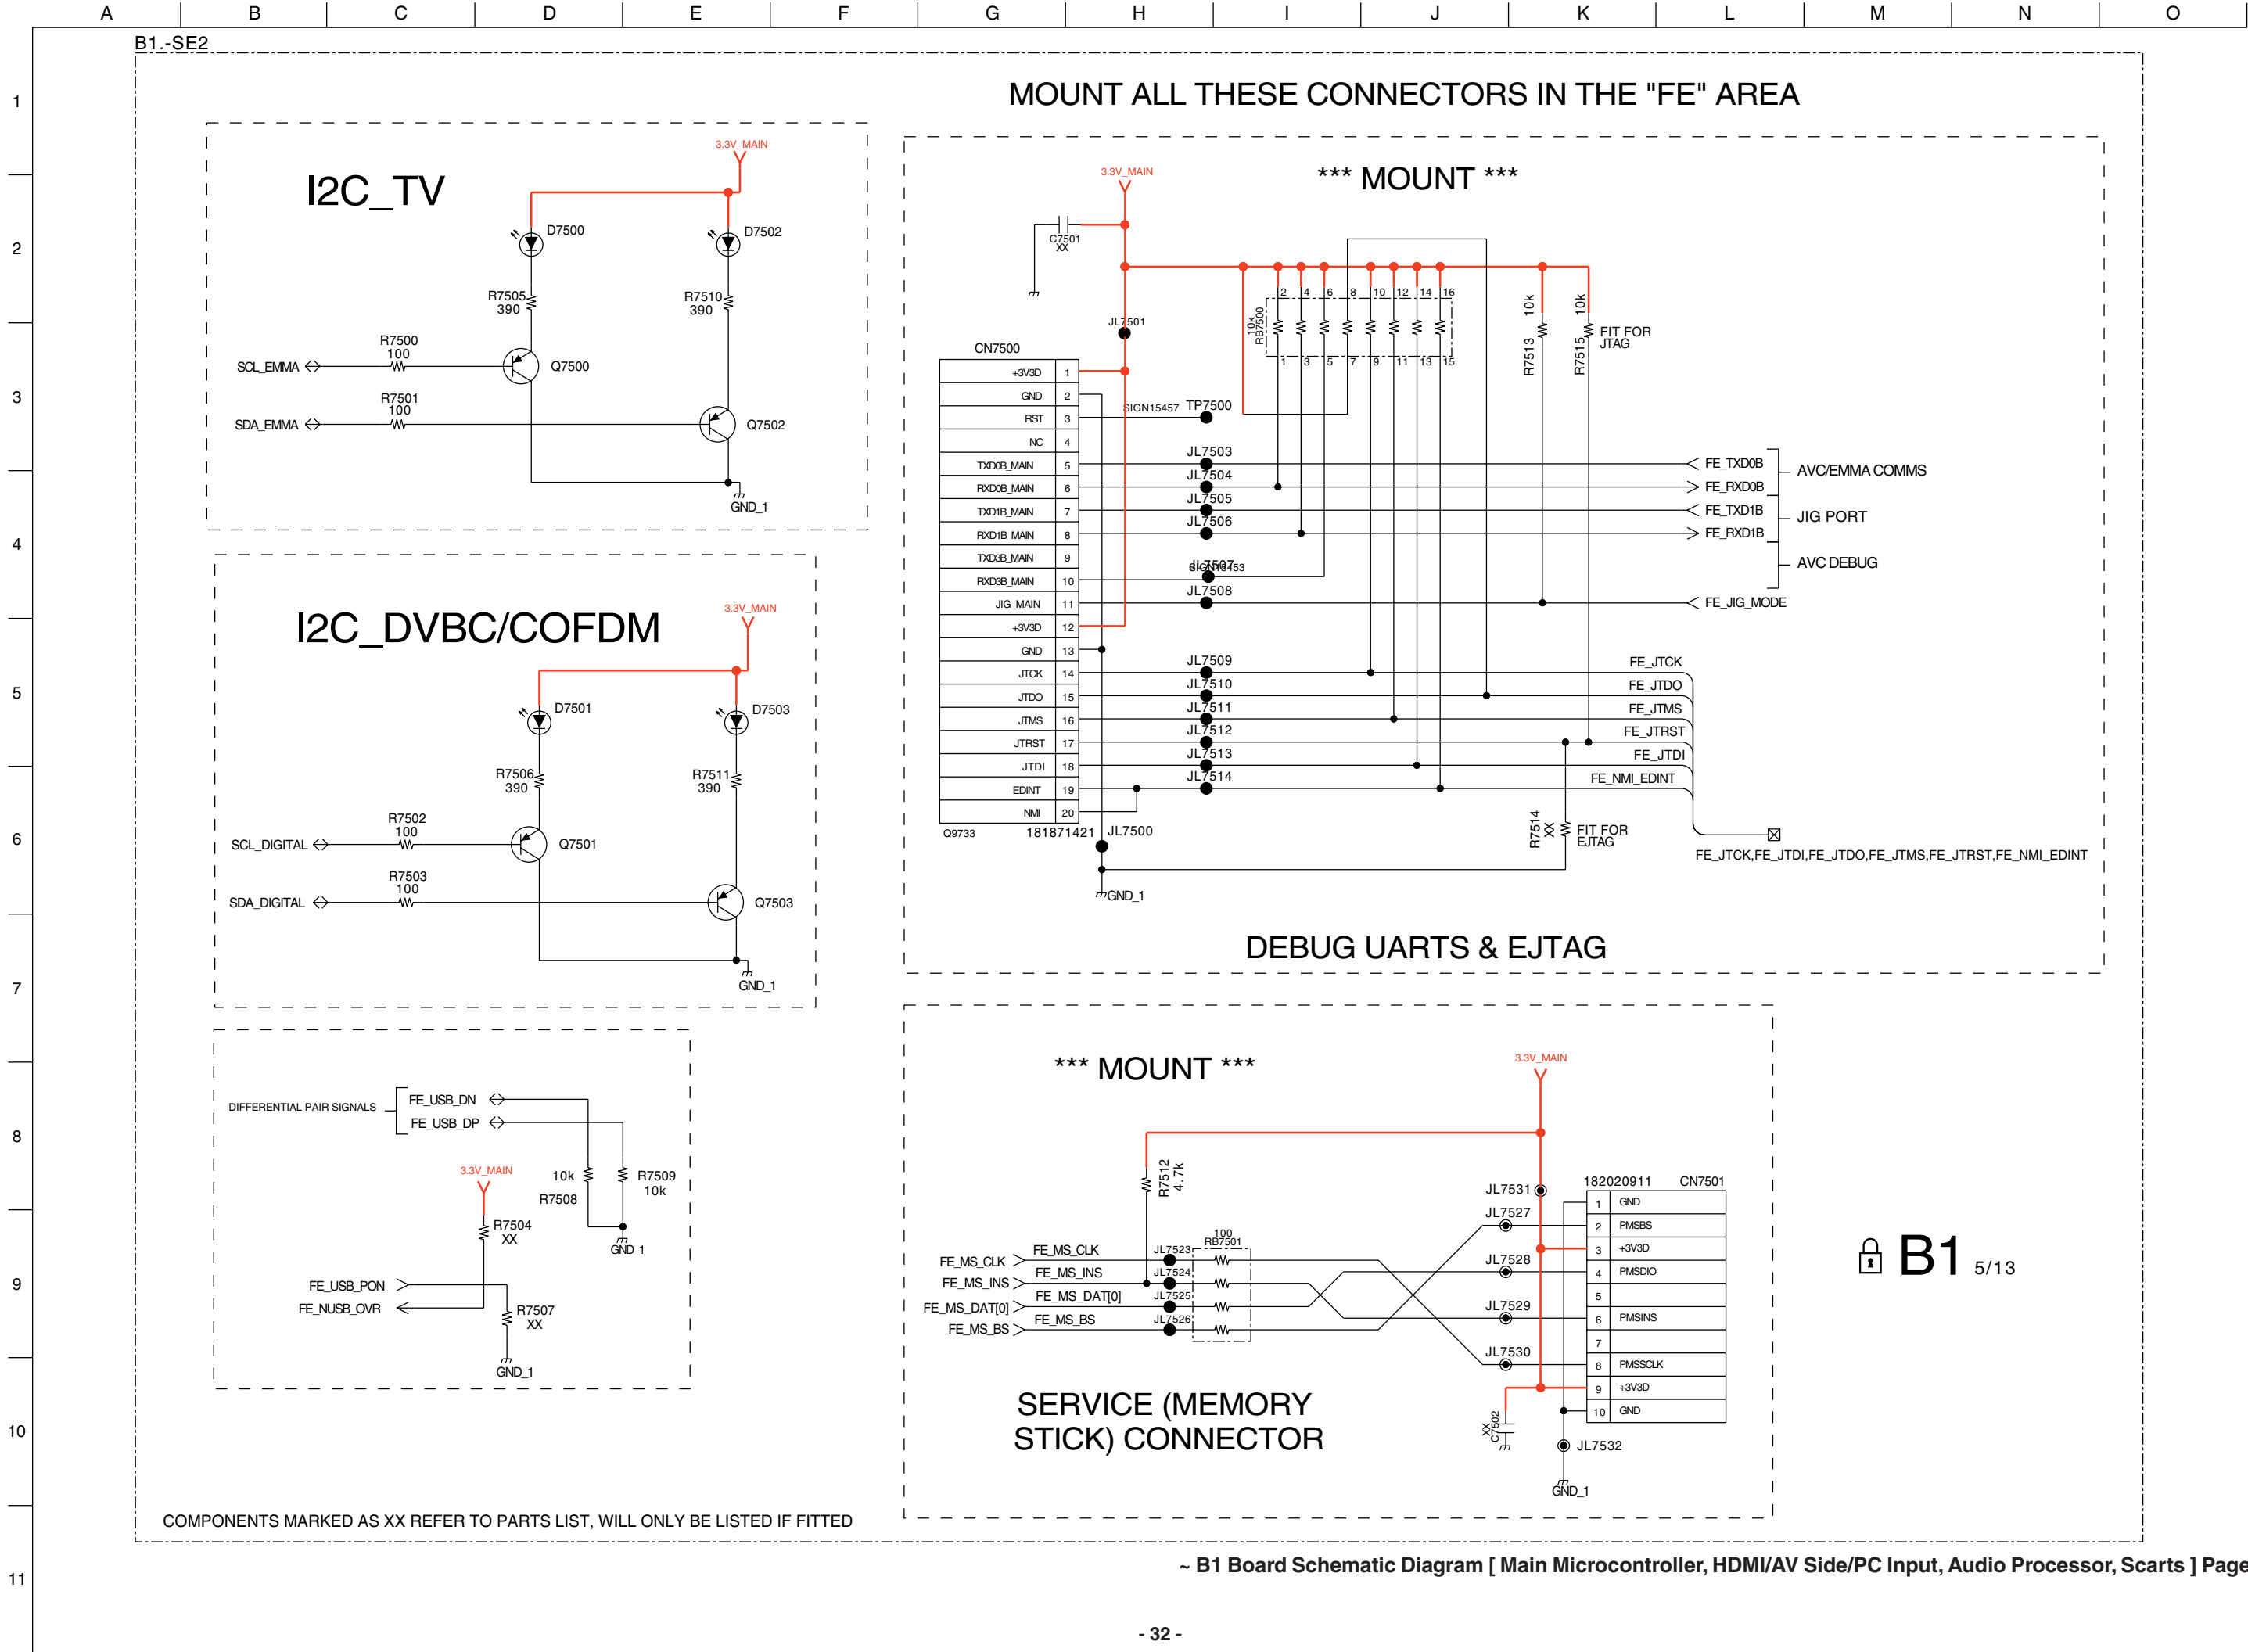





- 33 -




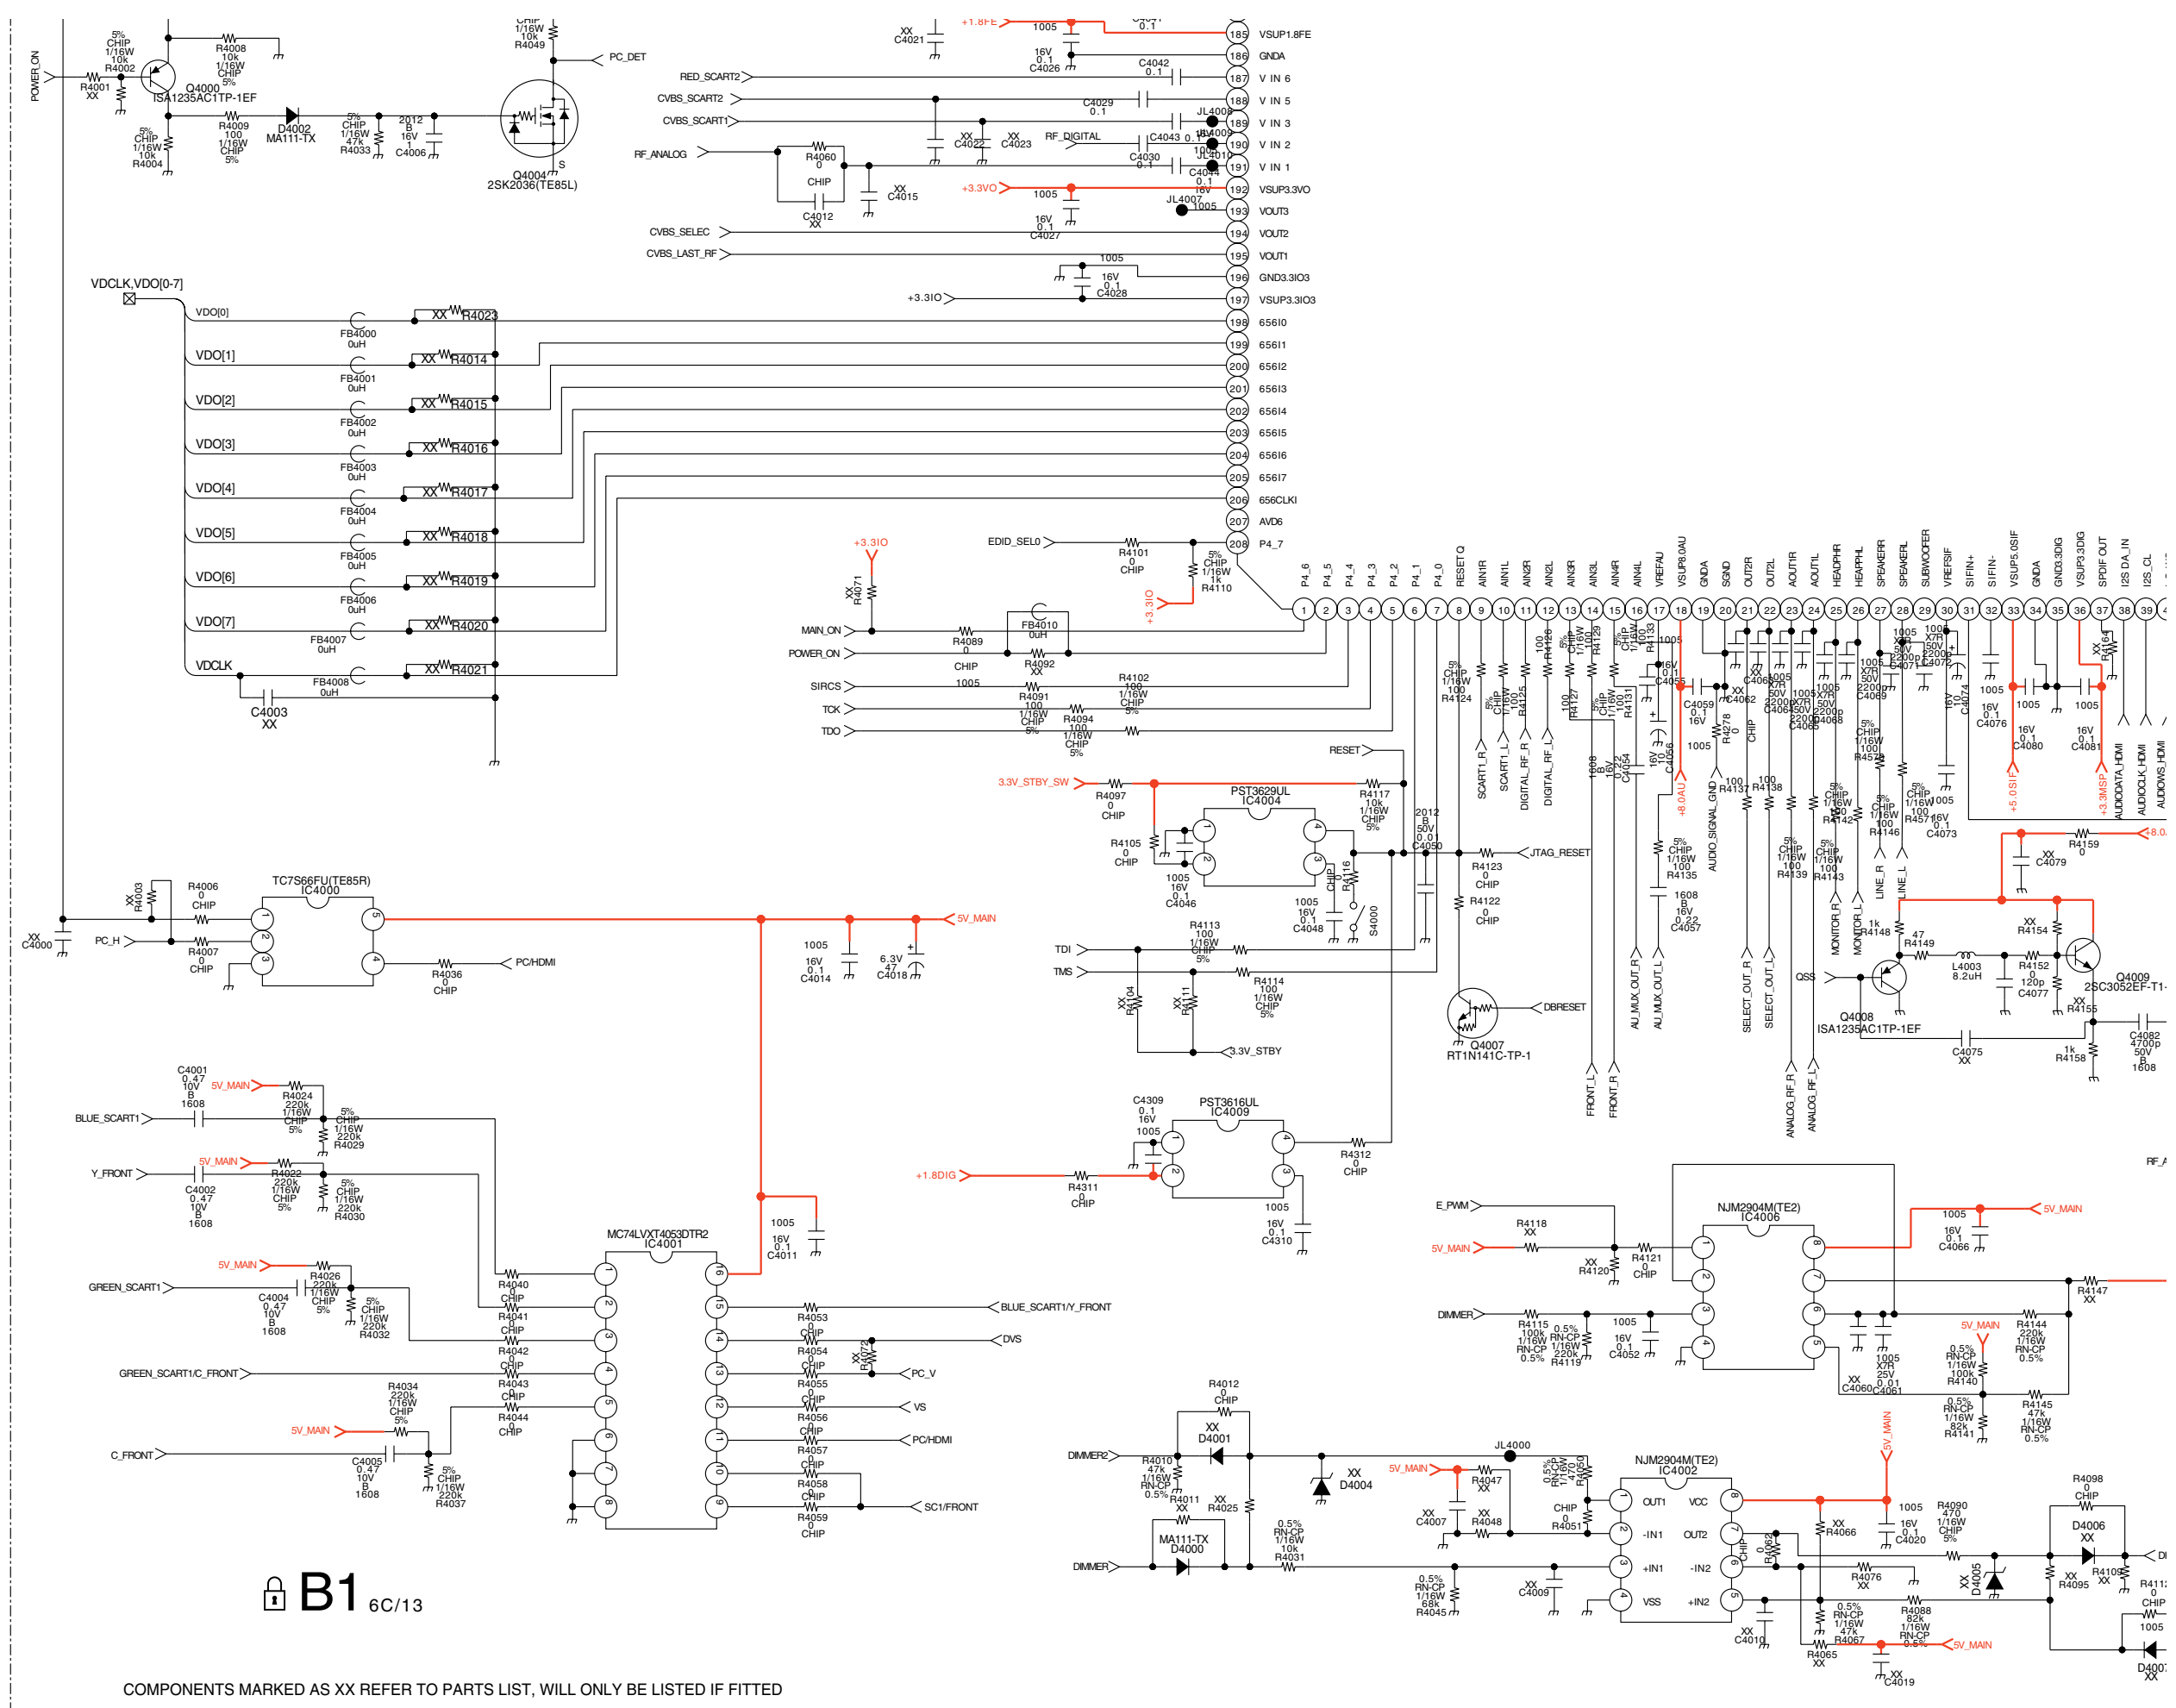


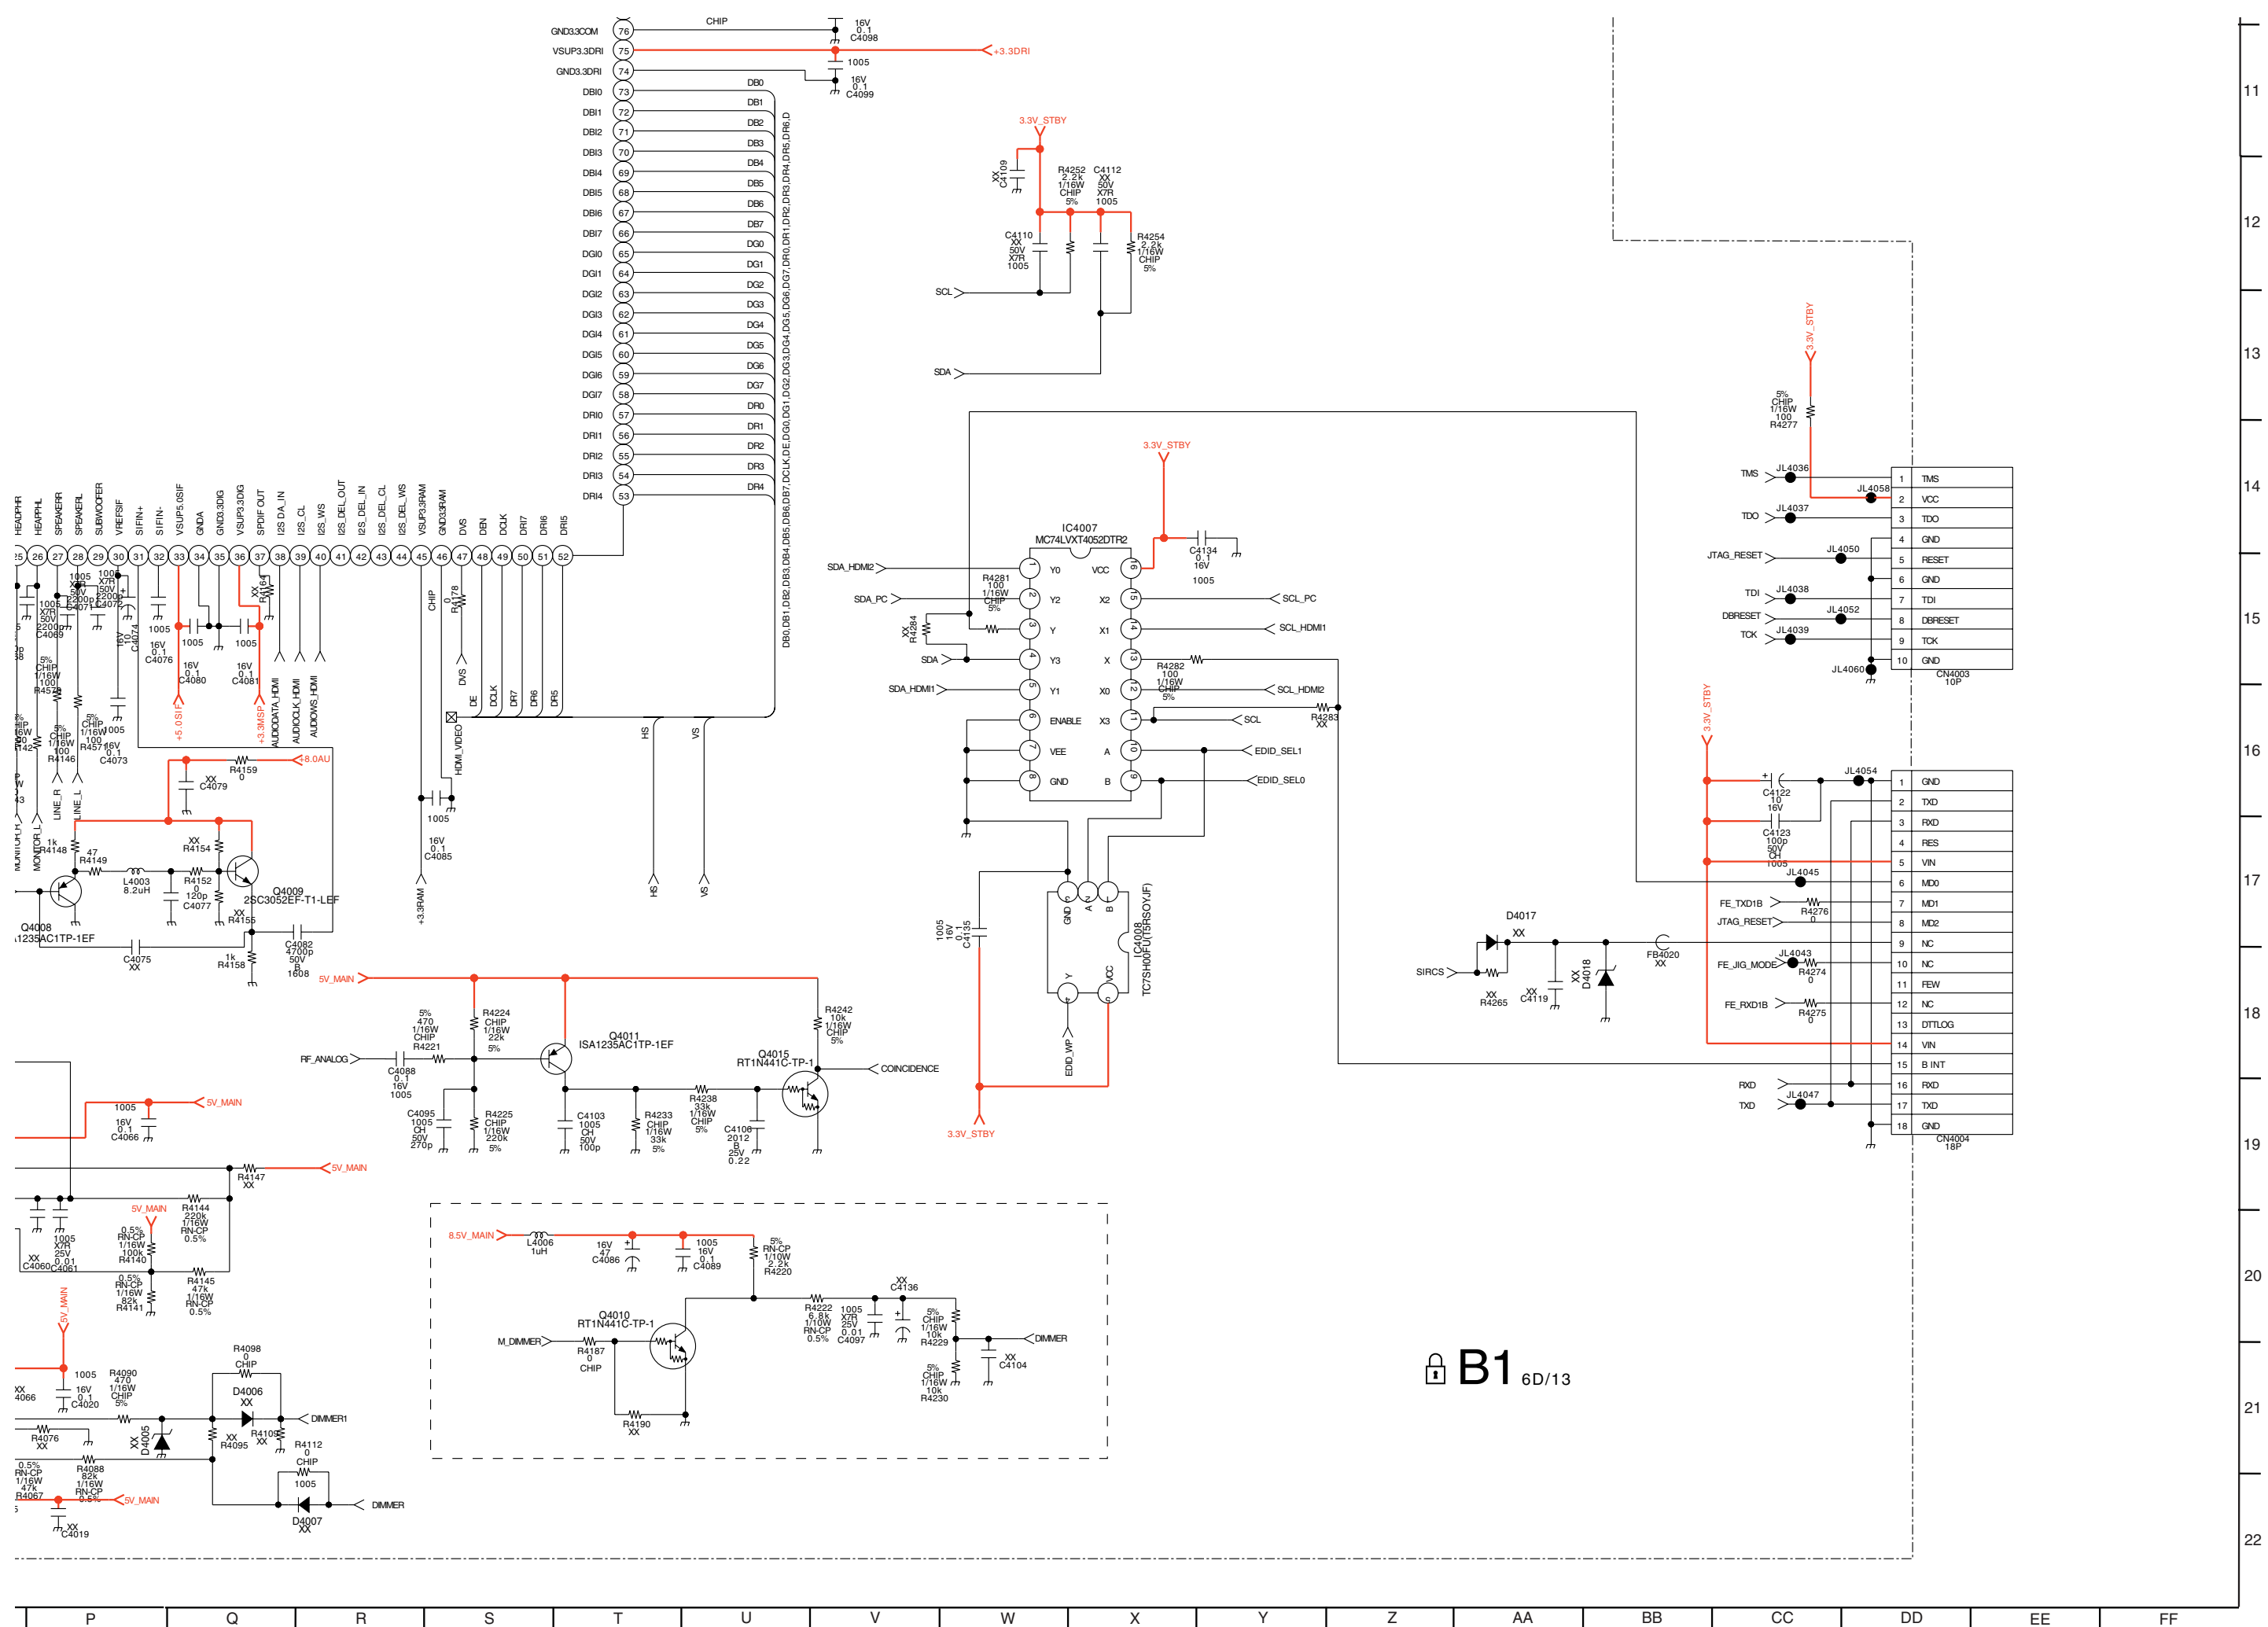


B1 6D/13

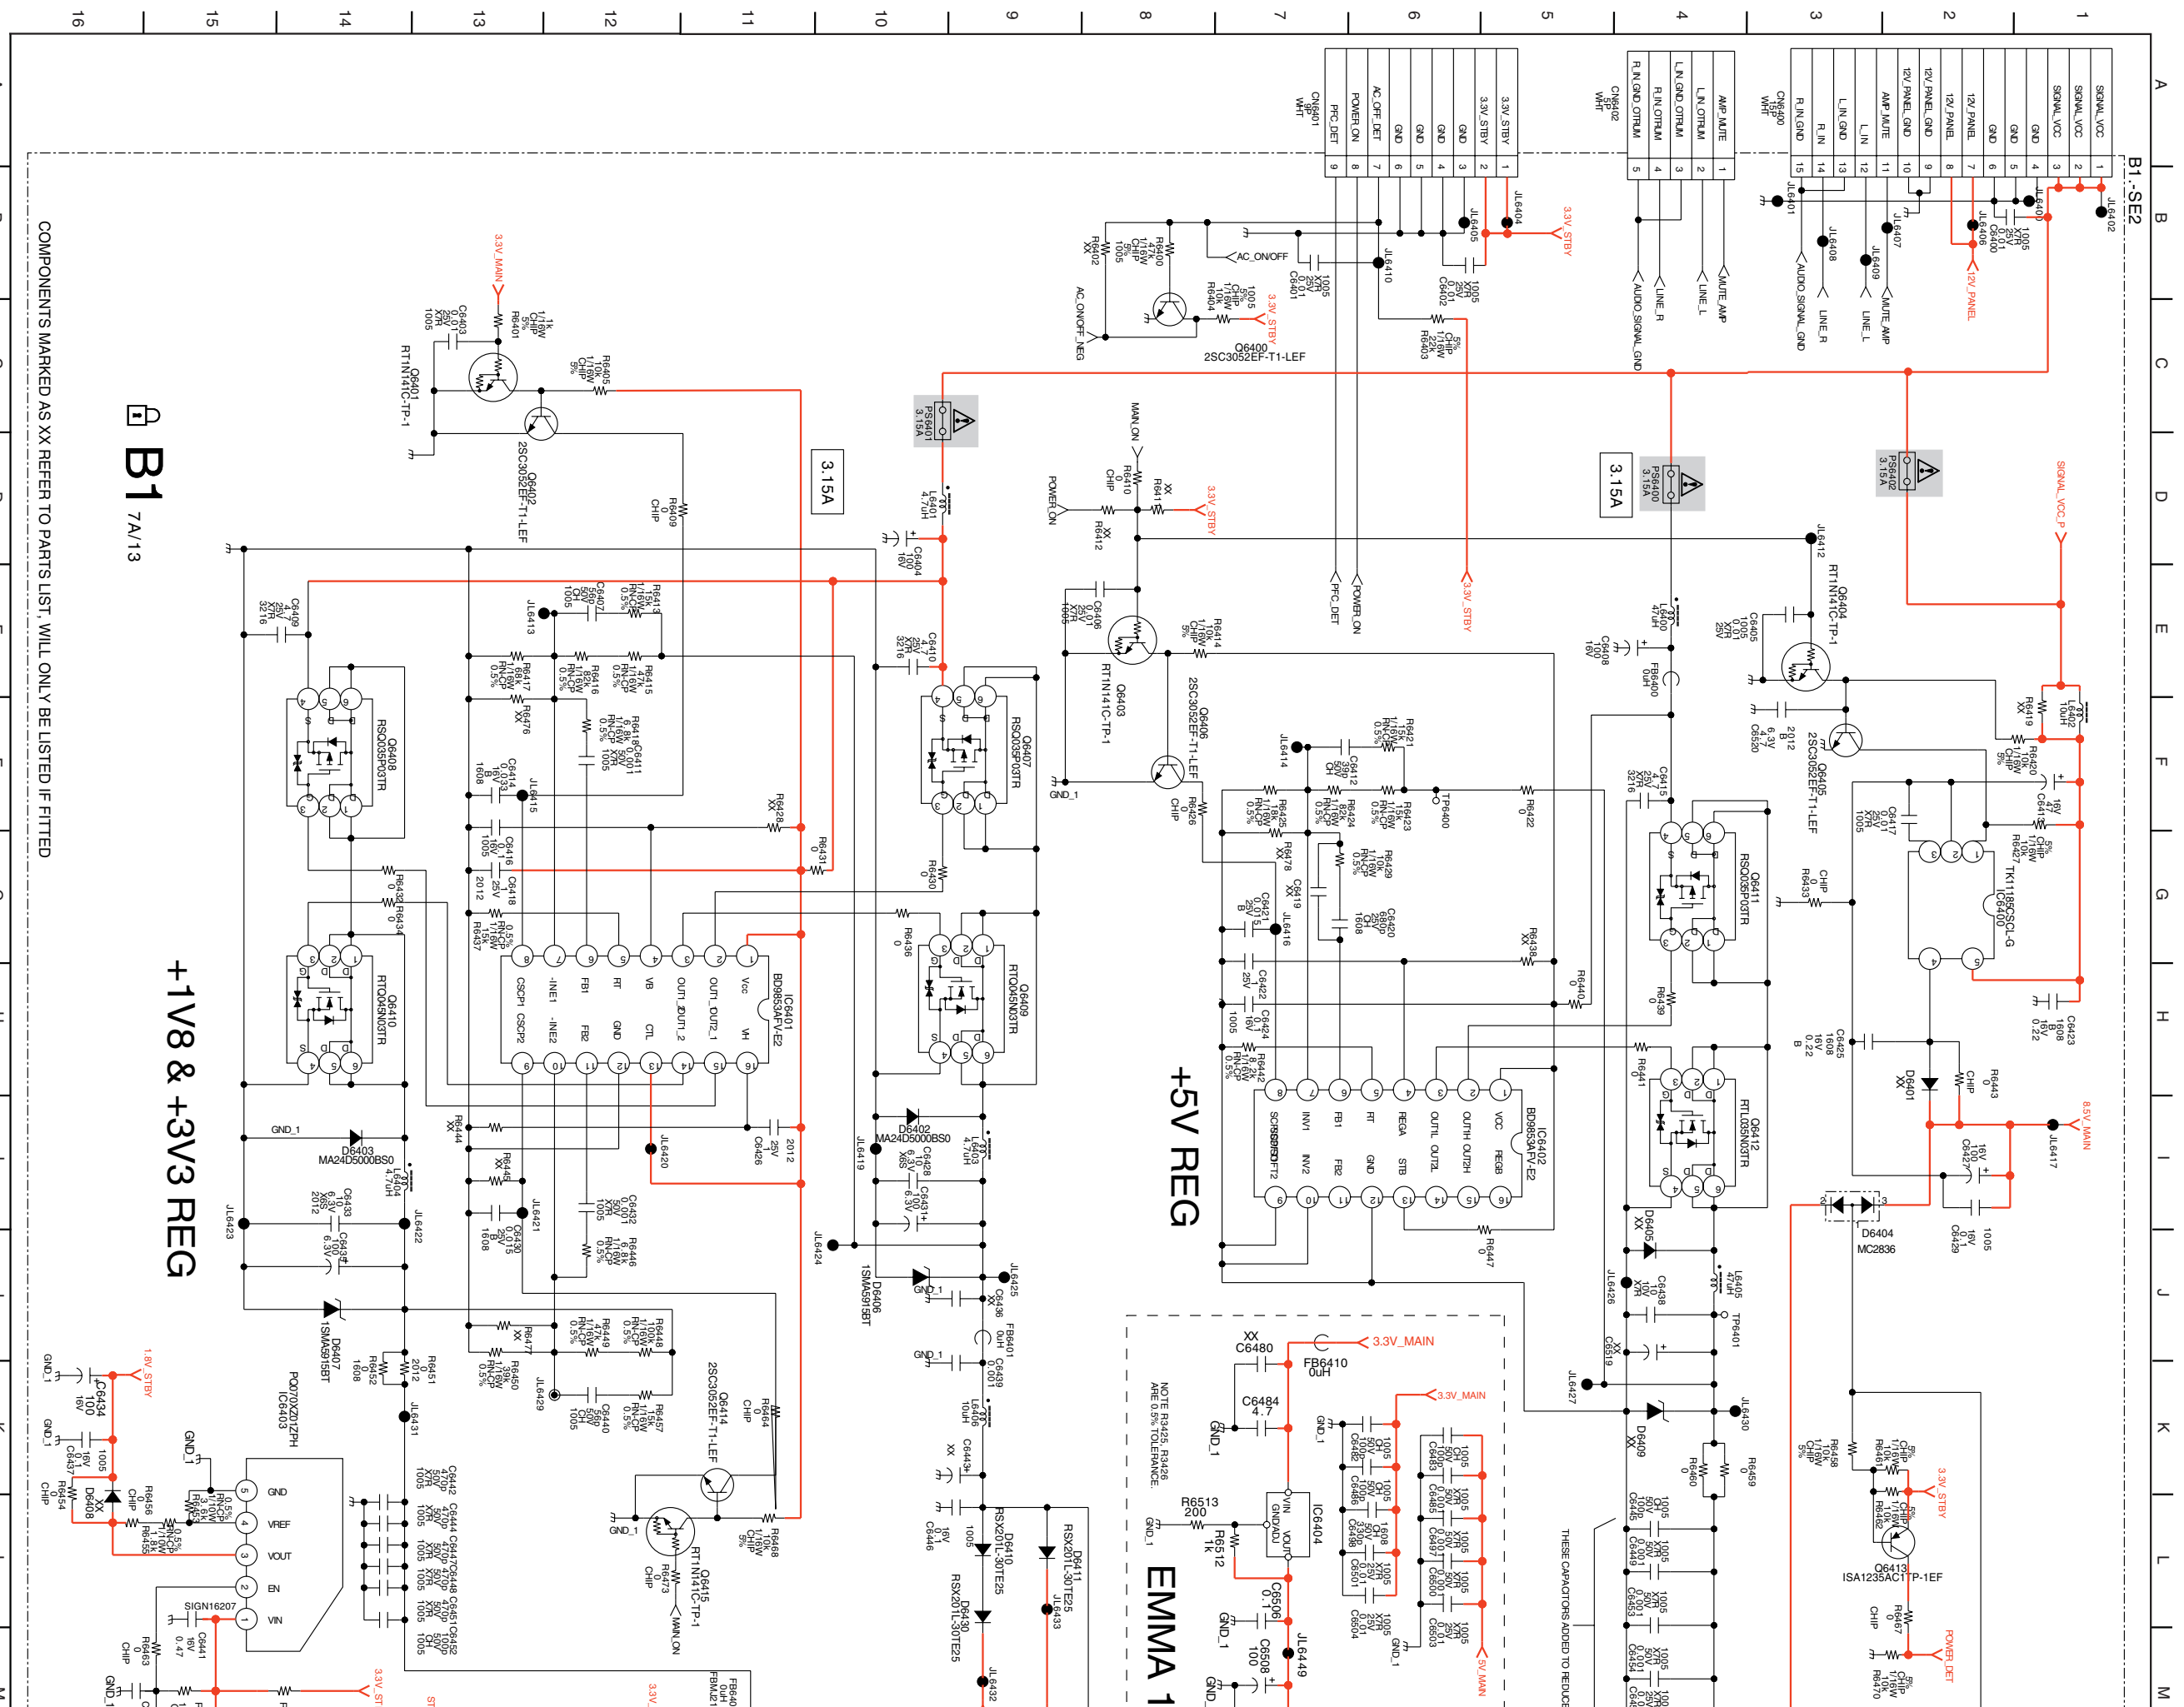


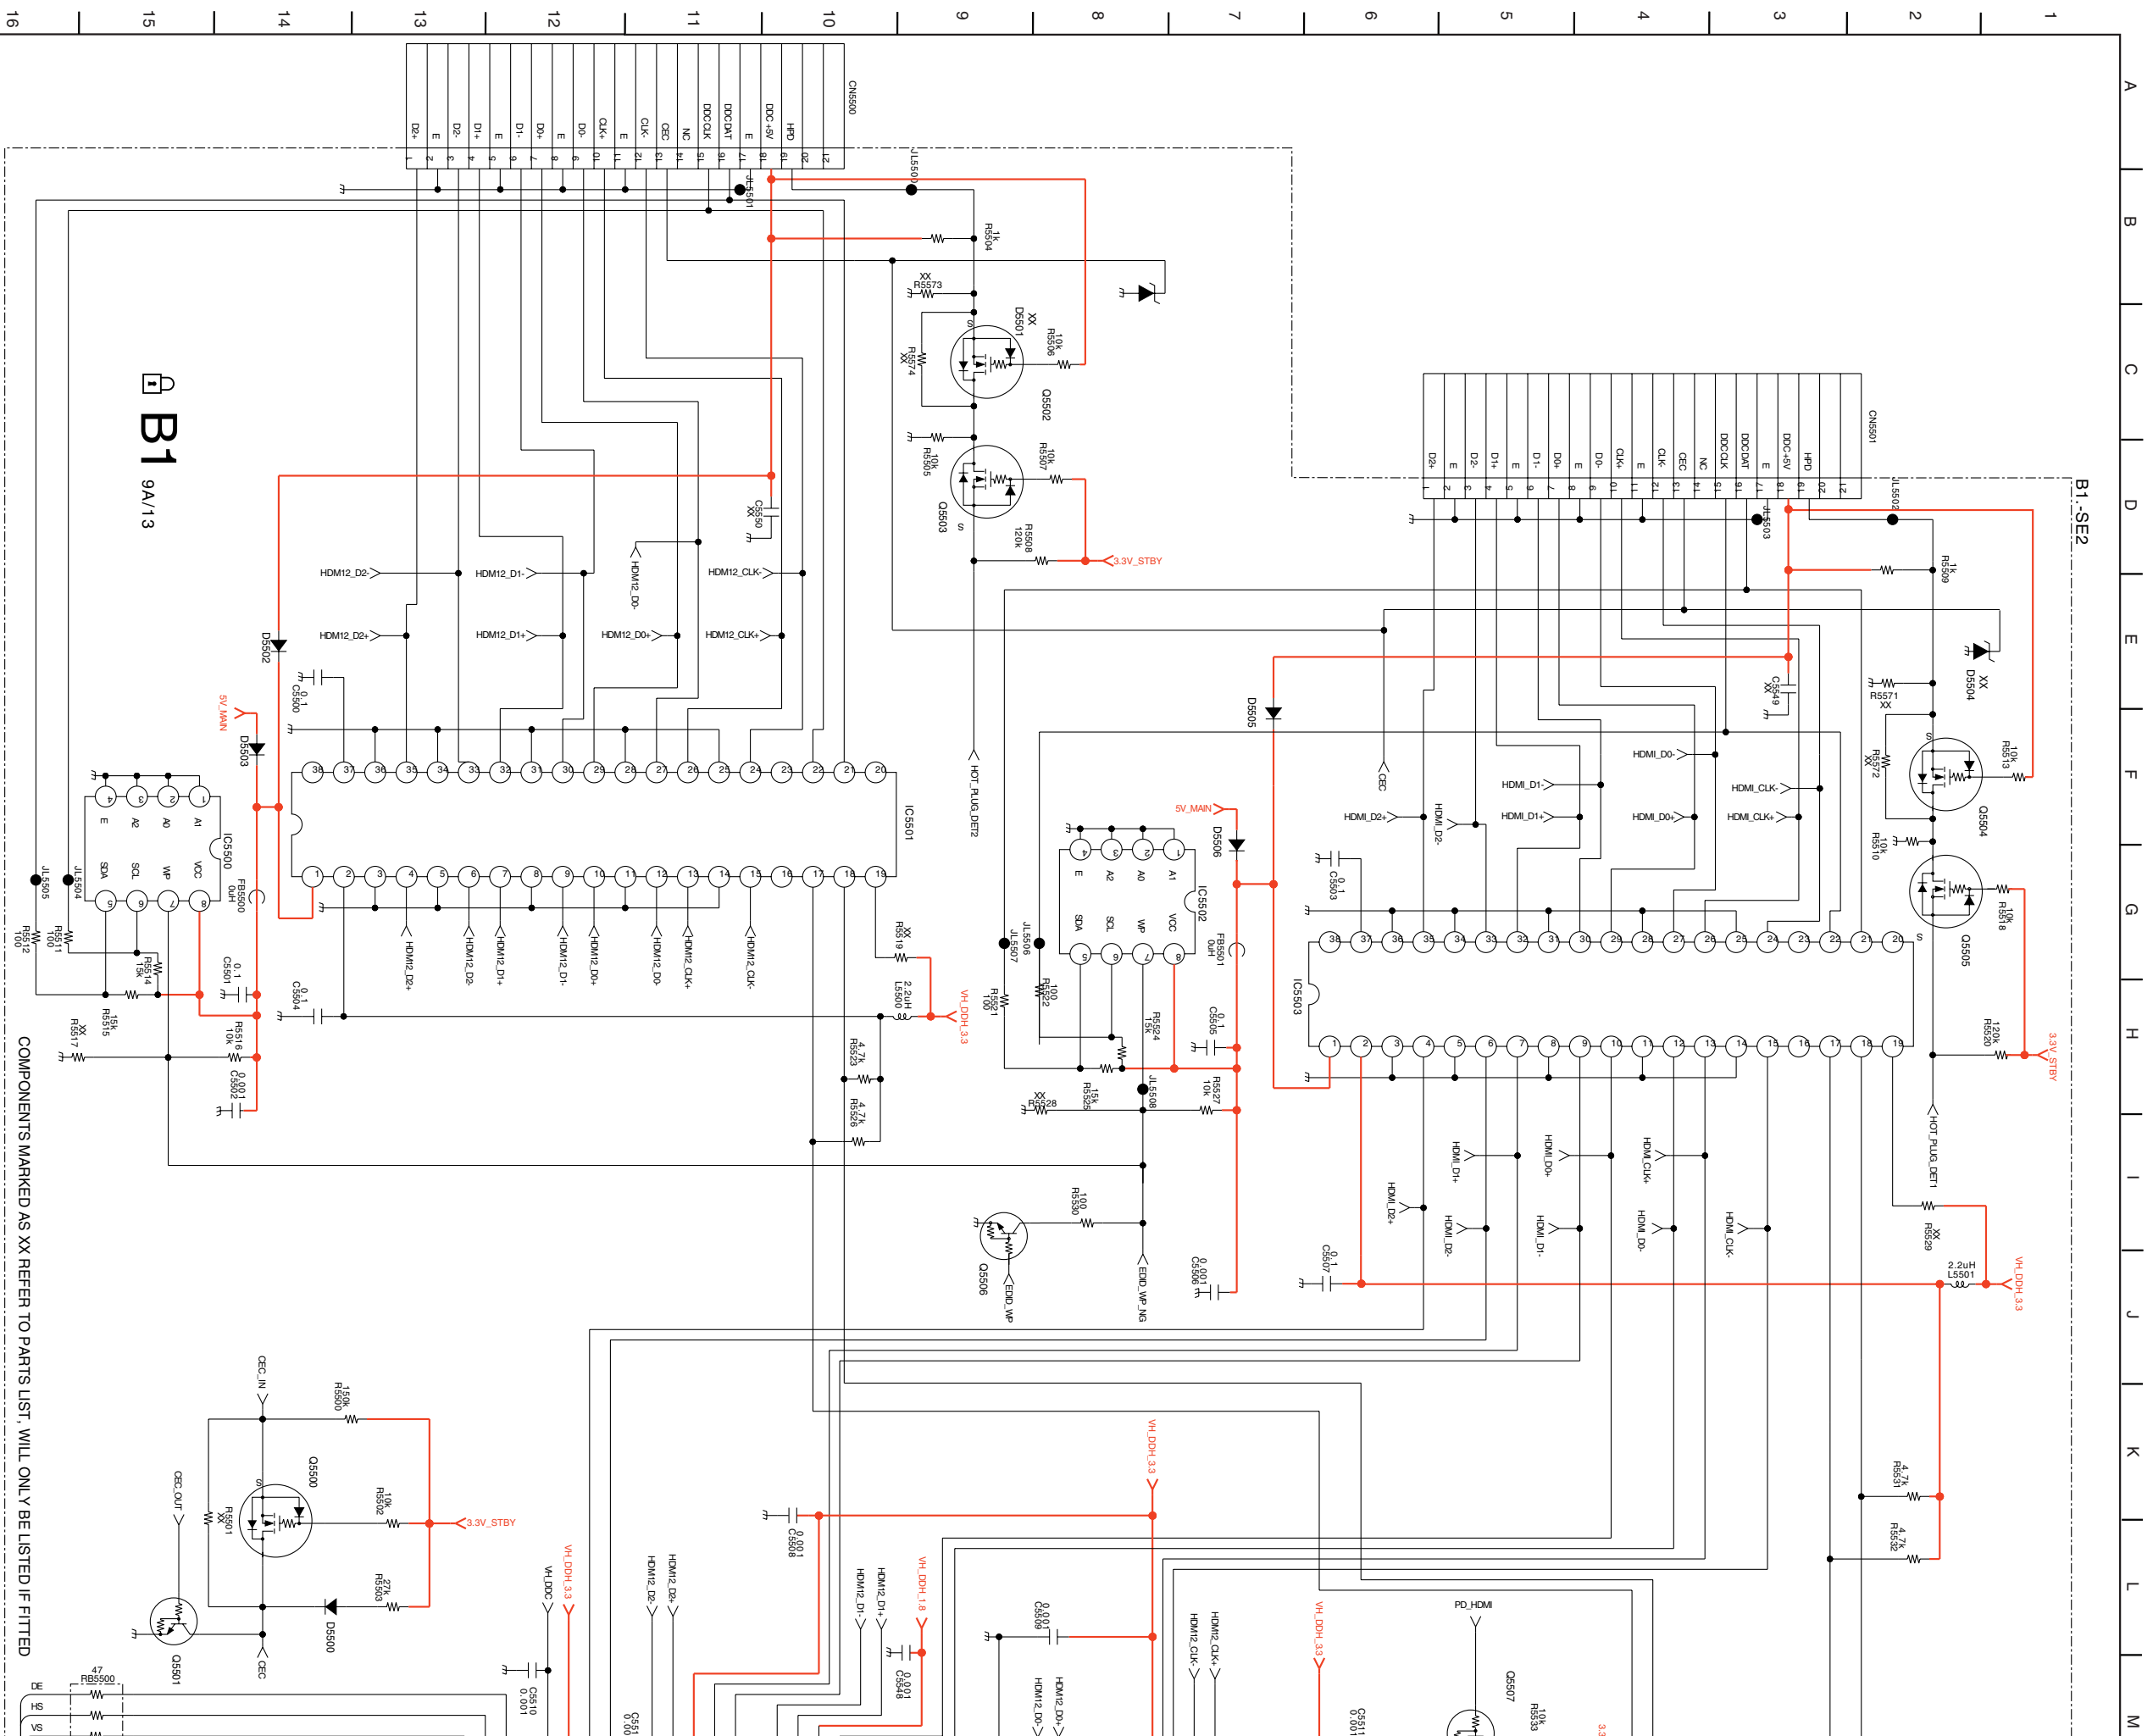


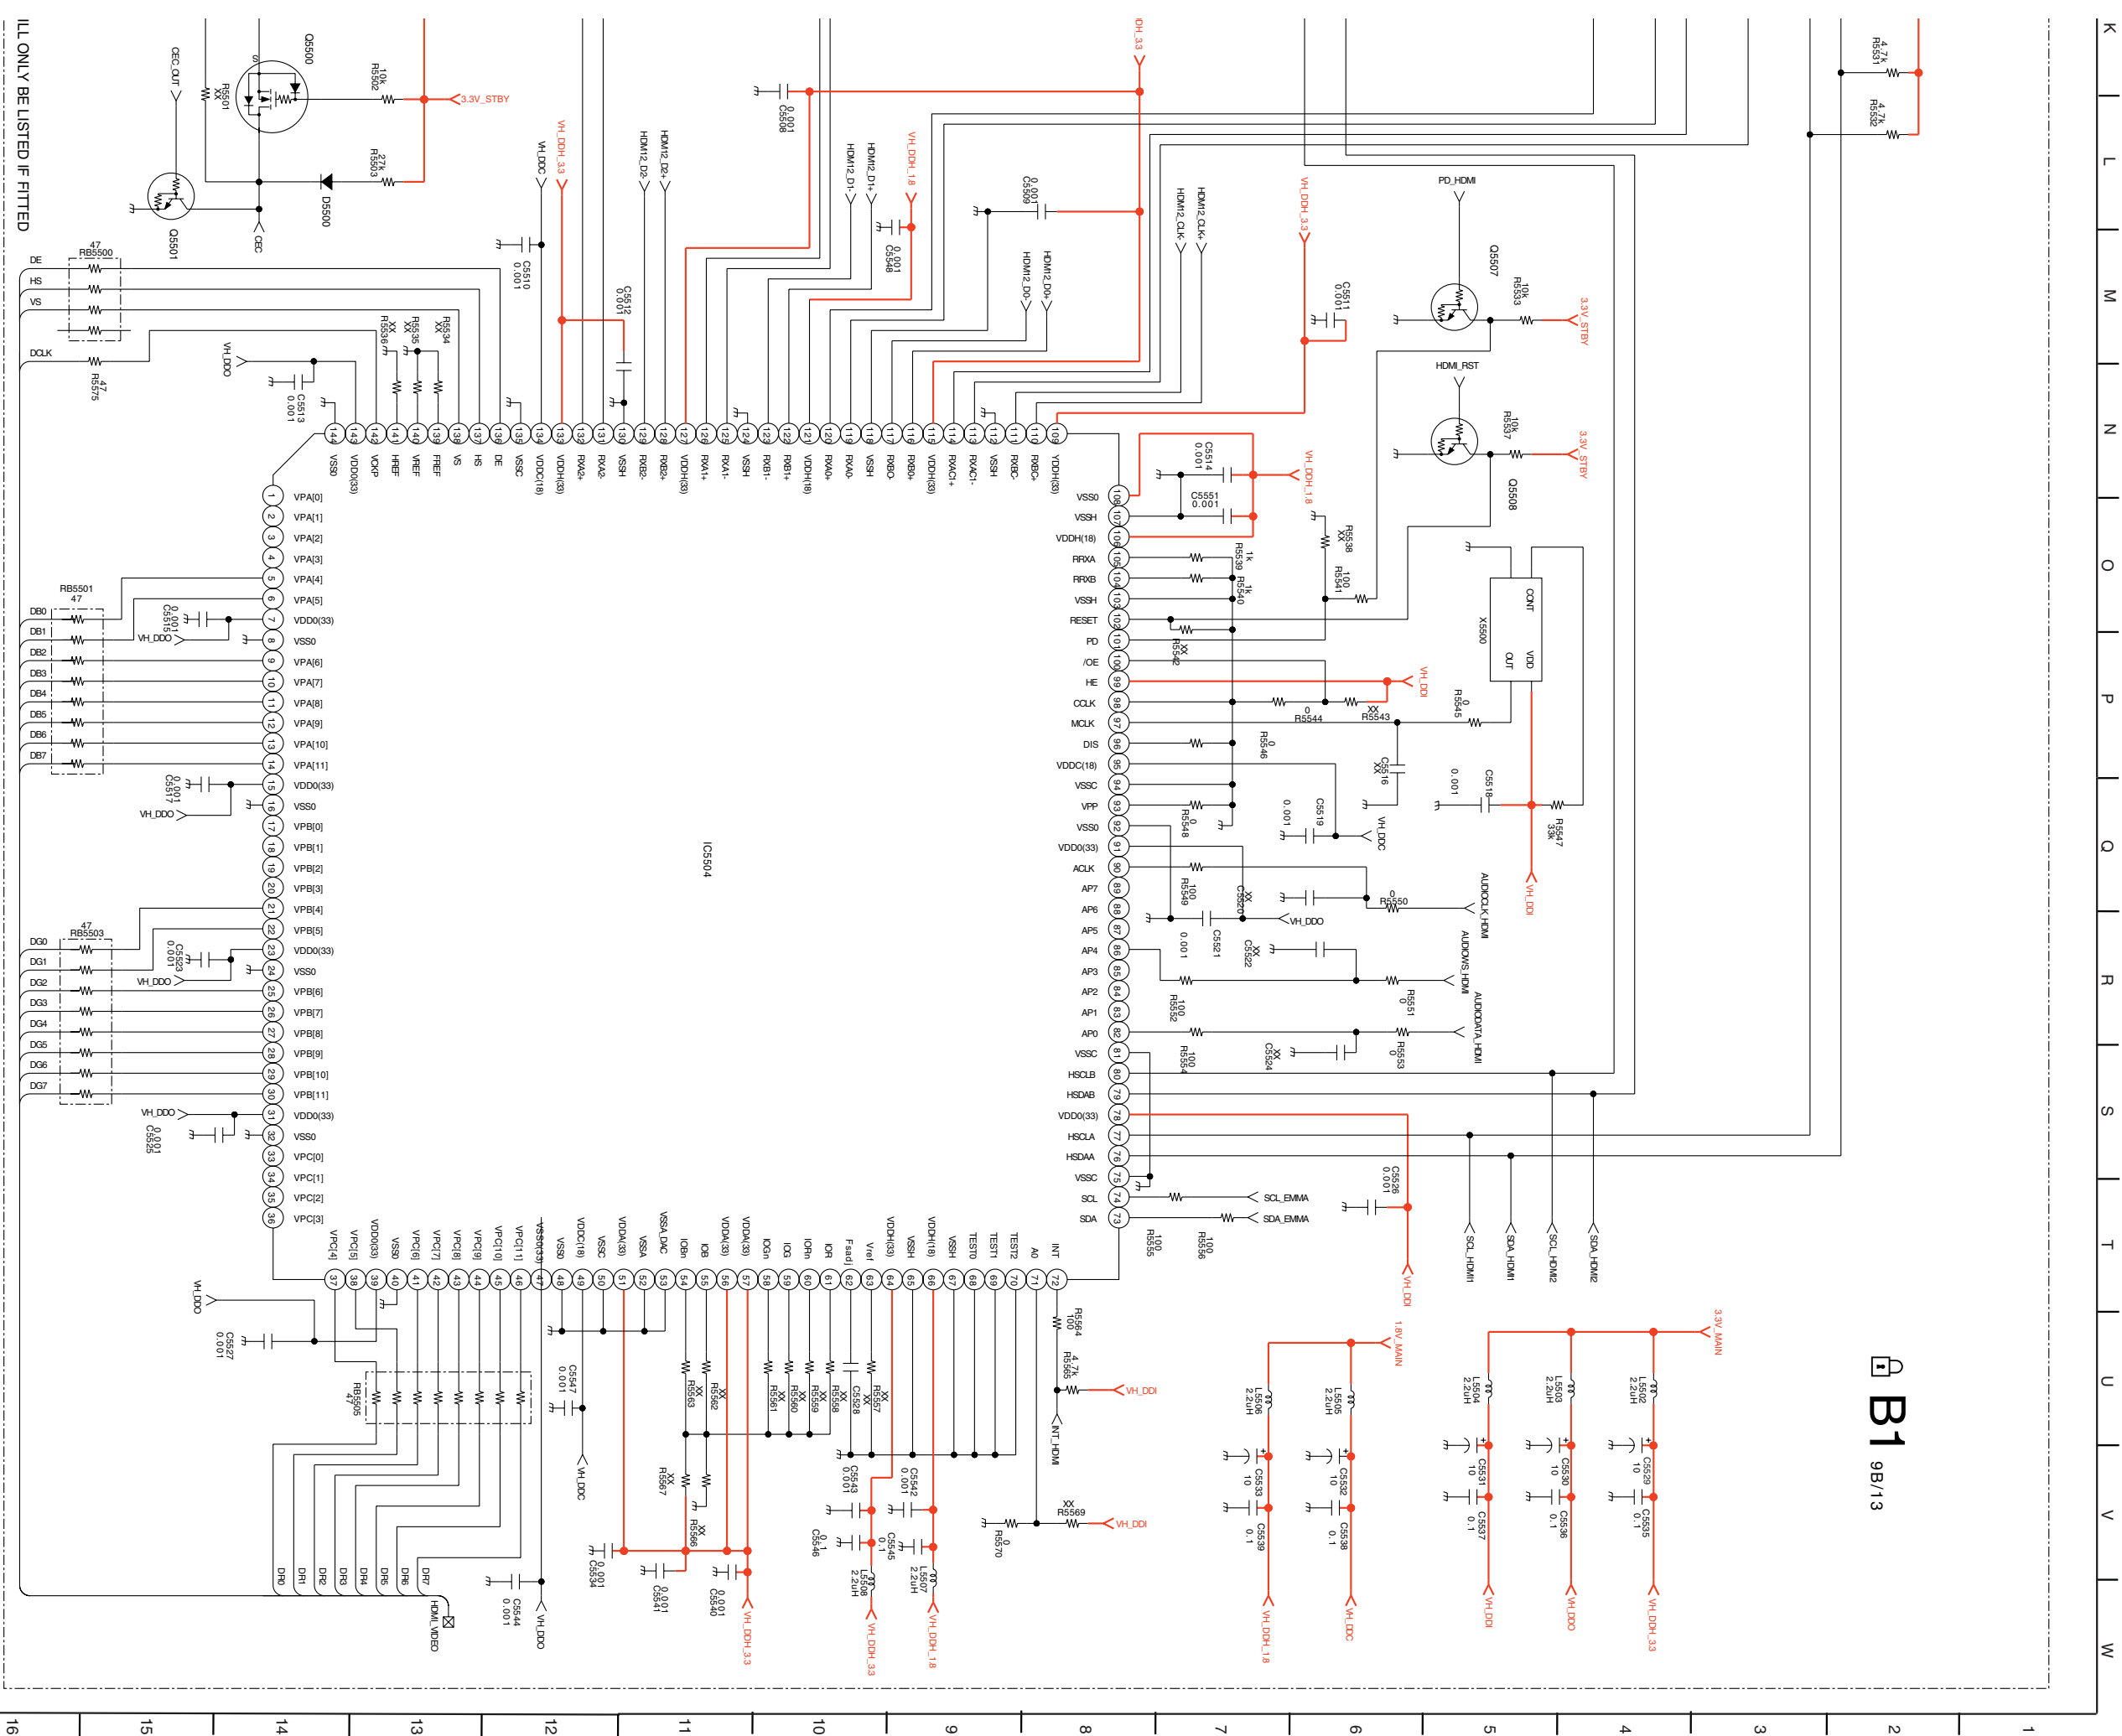

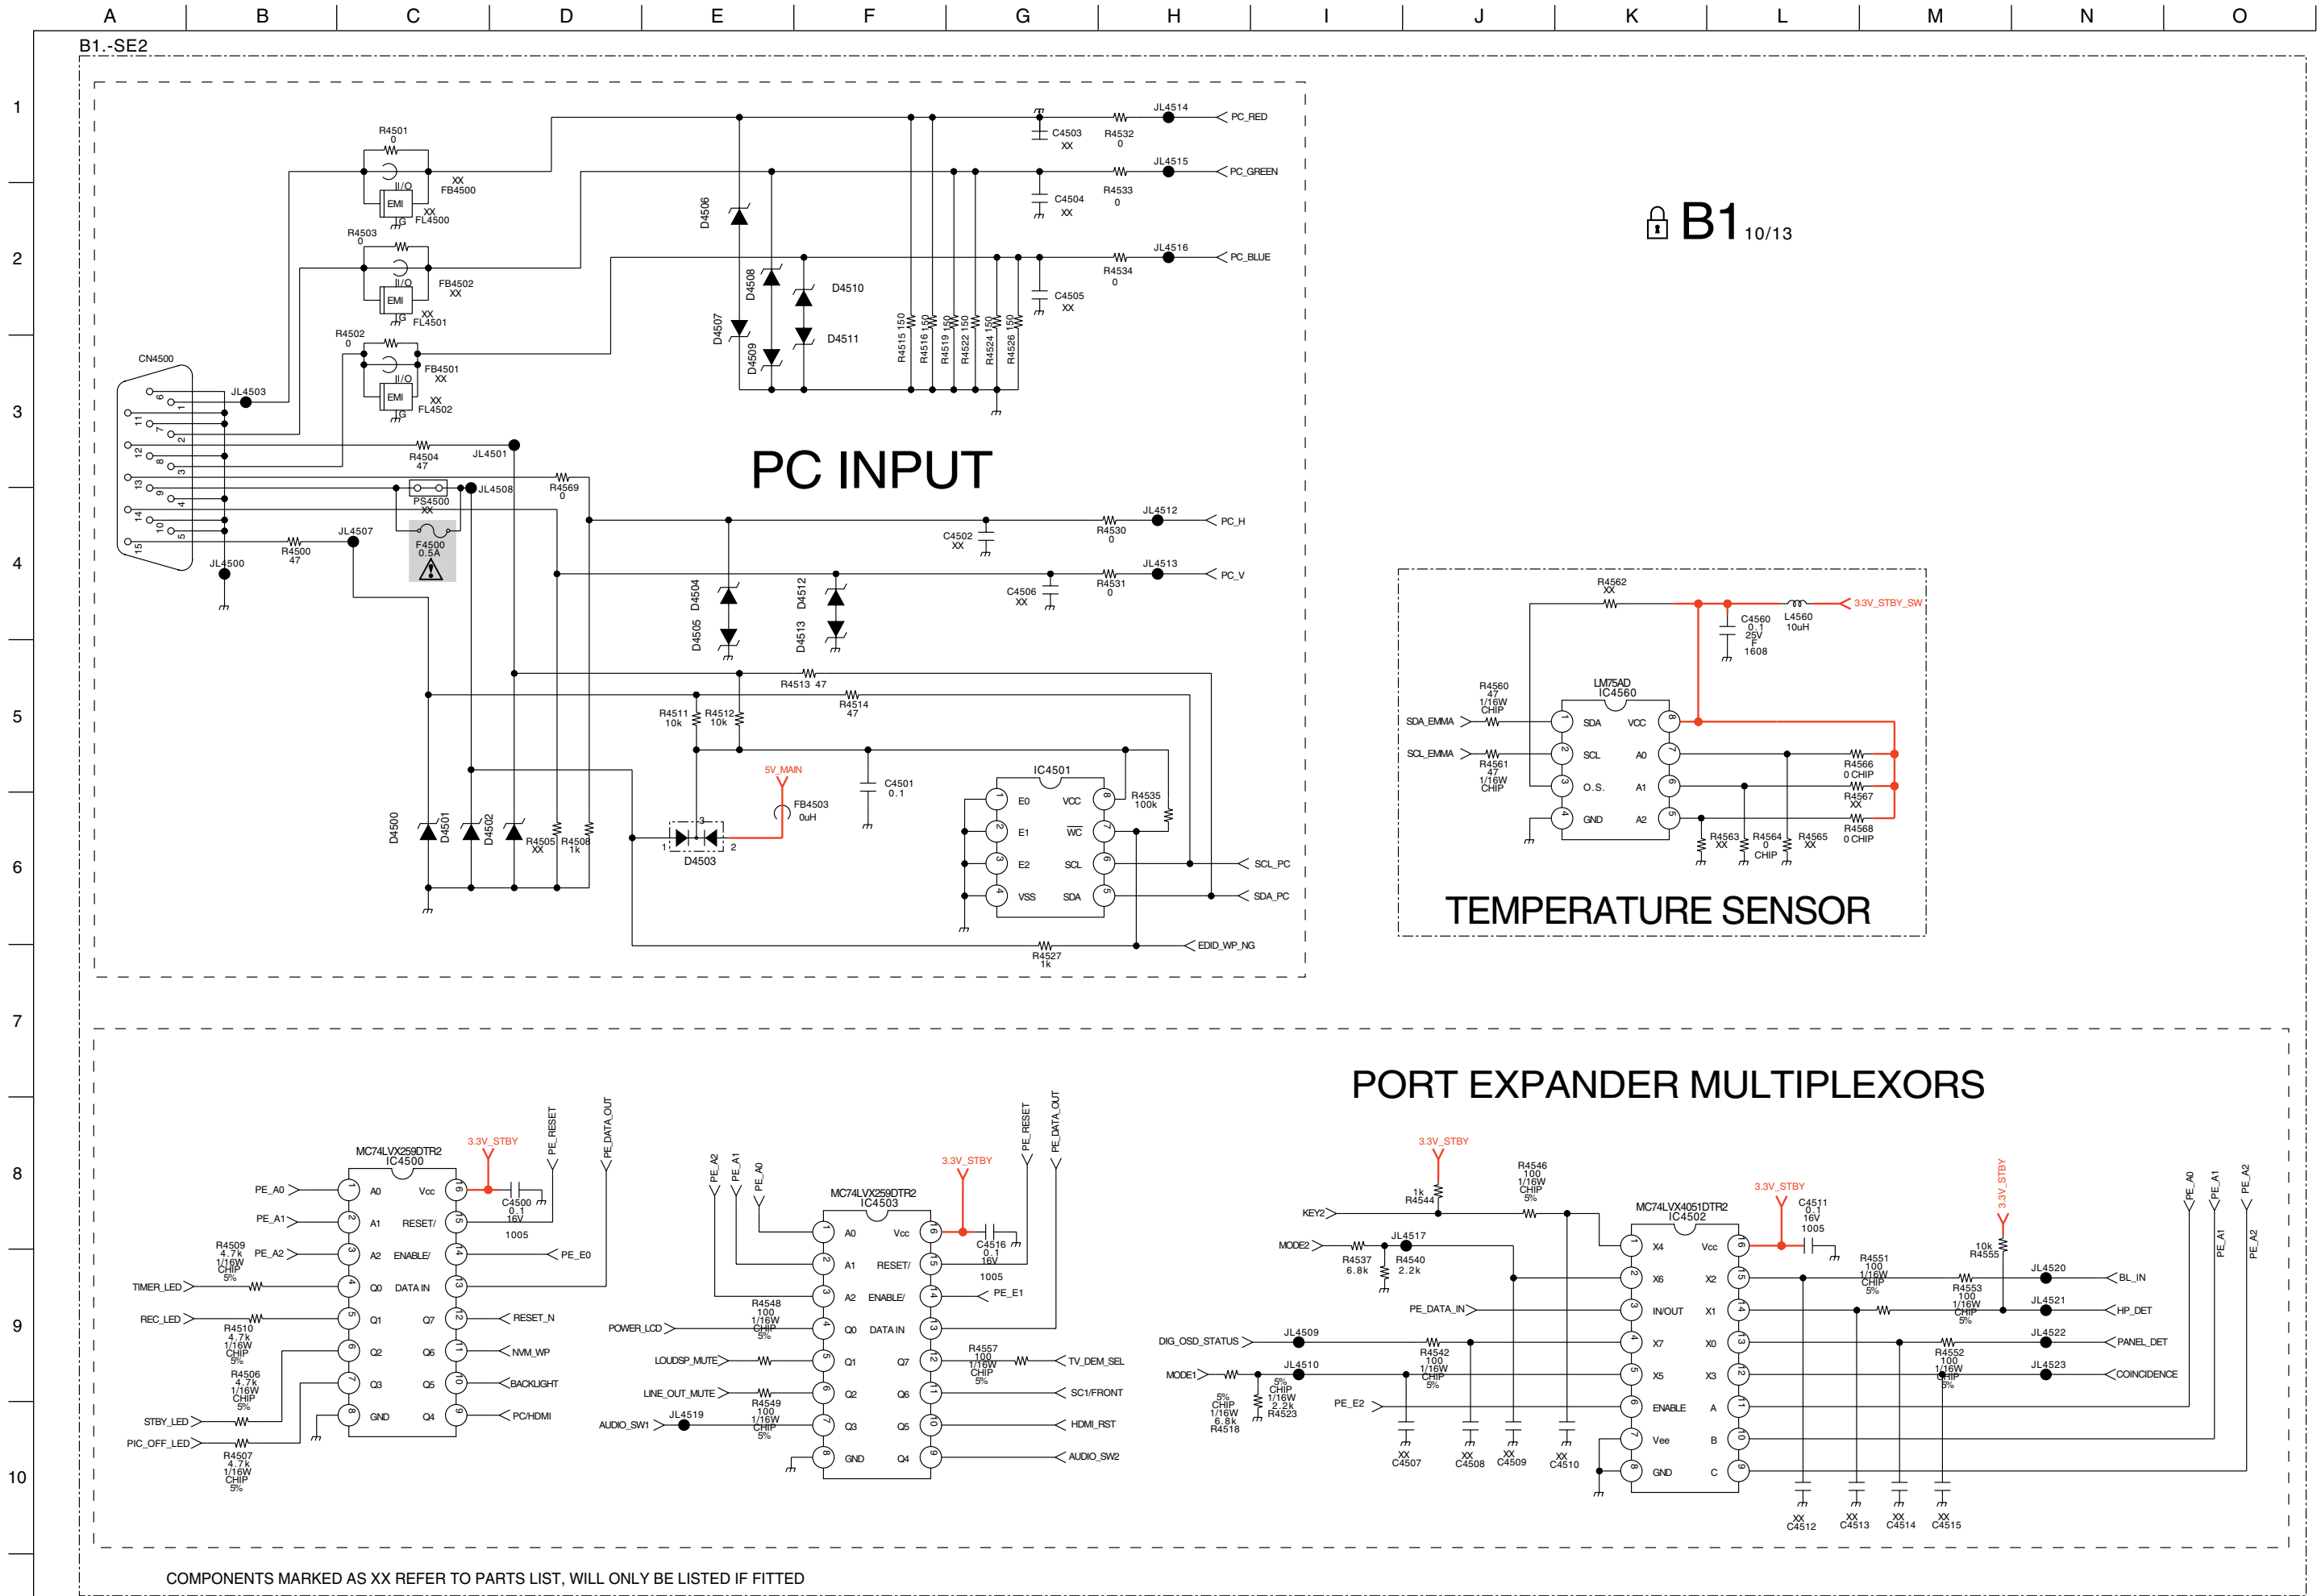

~ B1 Board Schematic Diagram [Main Microcontroller, HDMI/AV Side/PC Input, Audio Processor, Scarts] Page 10/13 ~

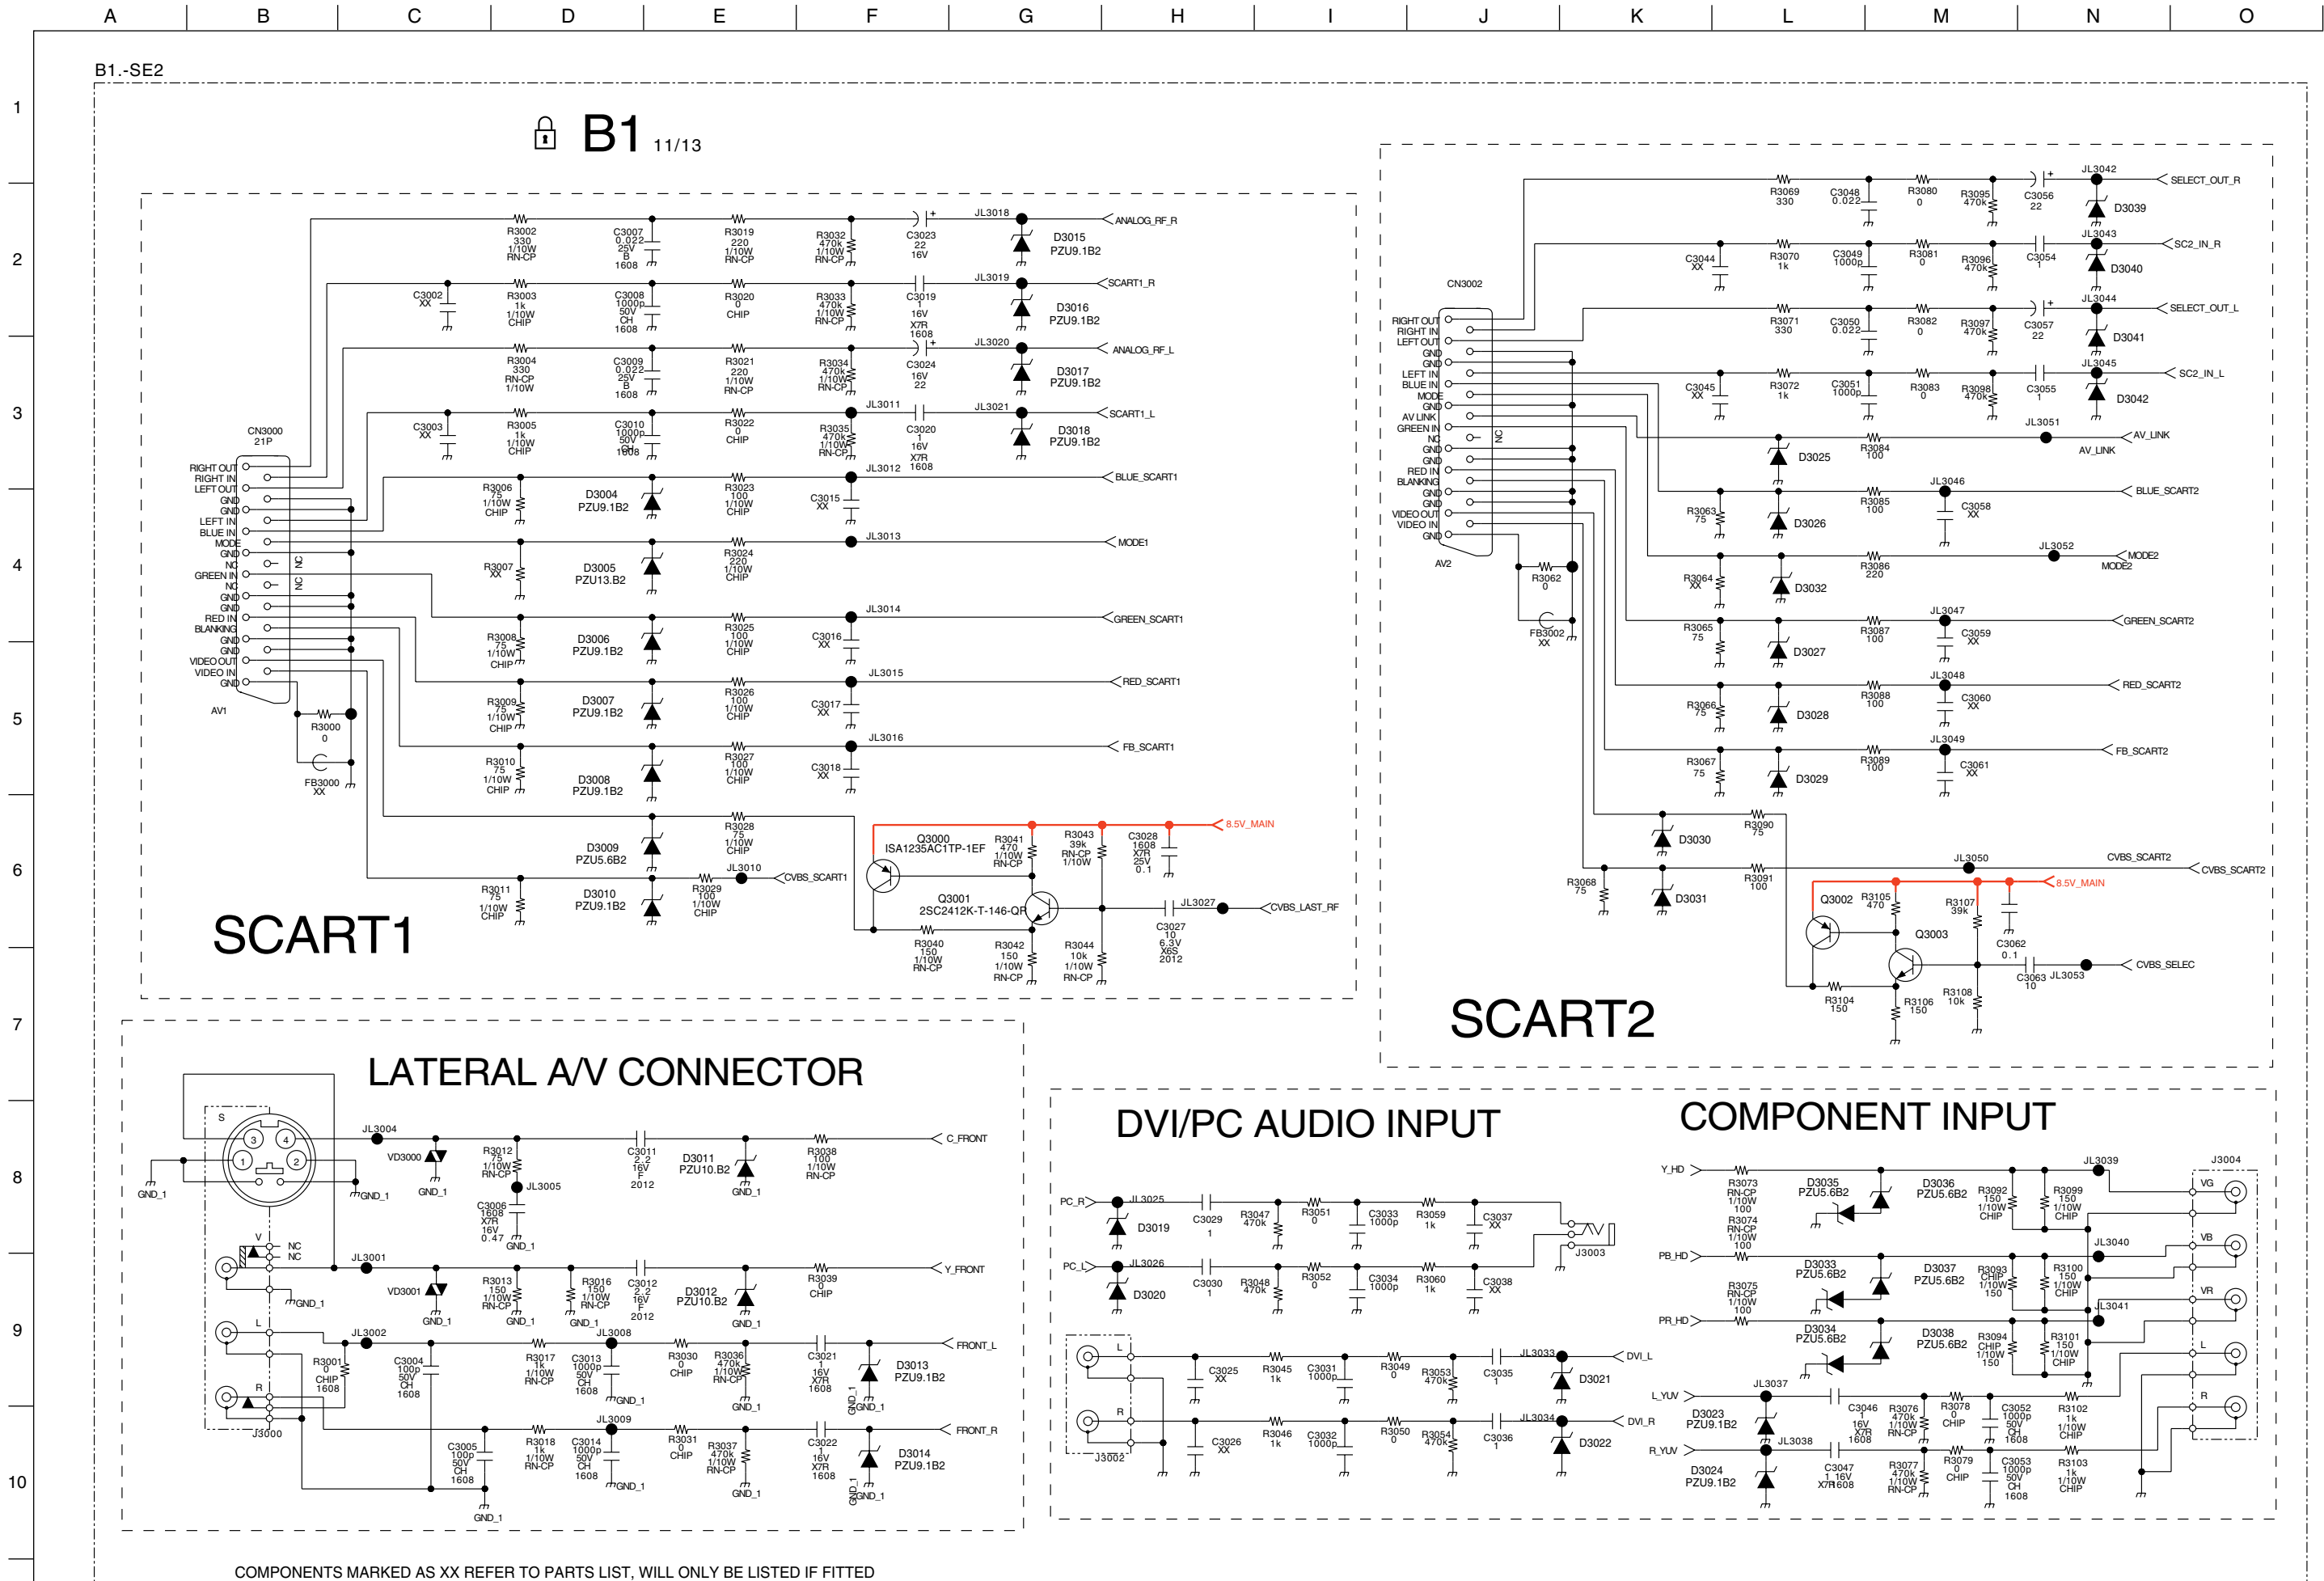


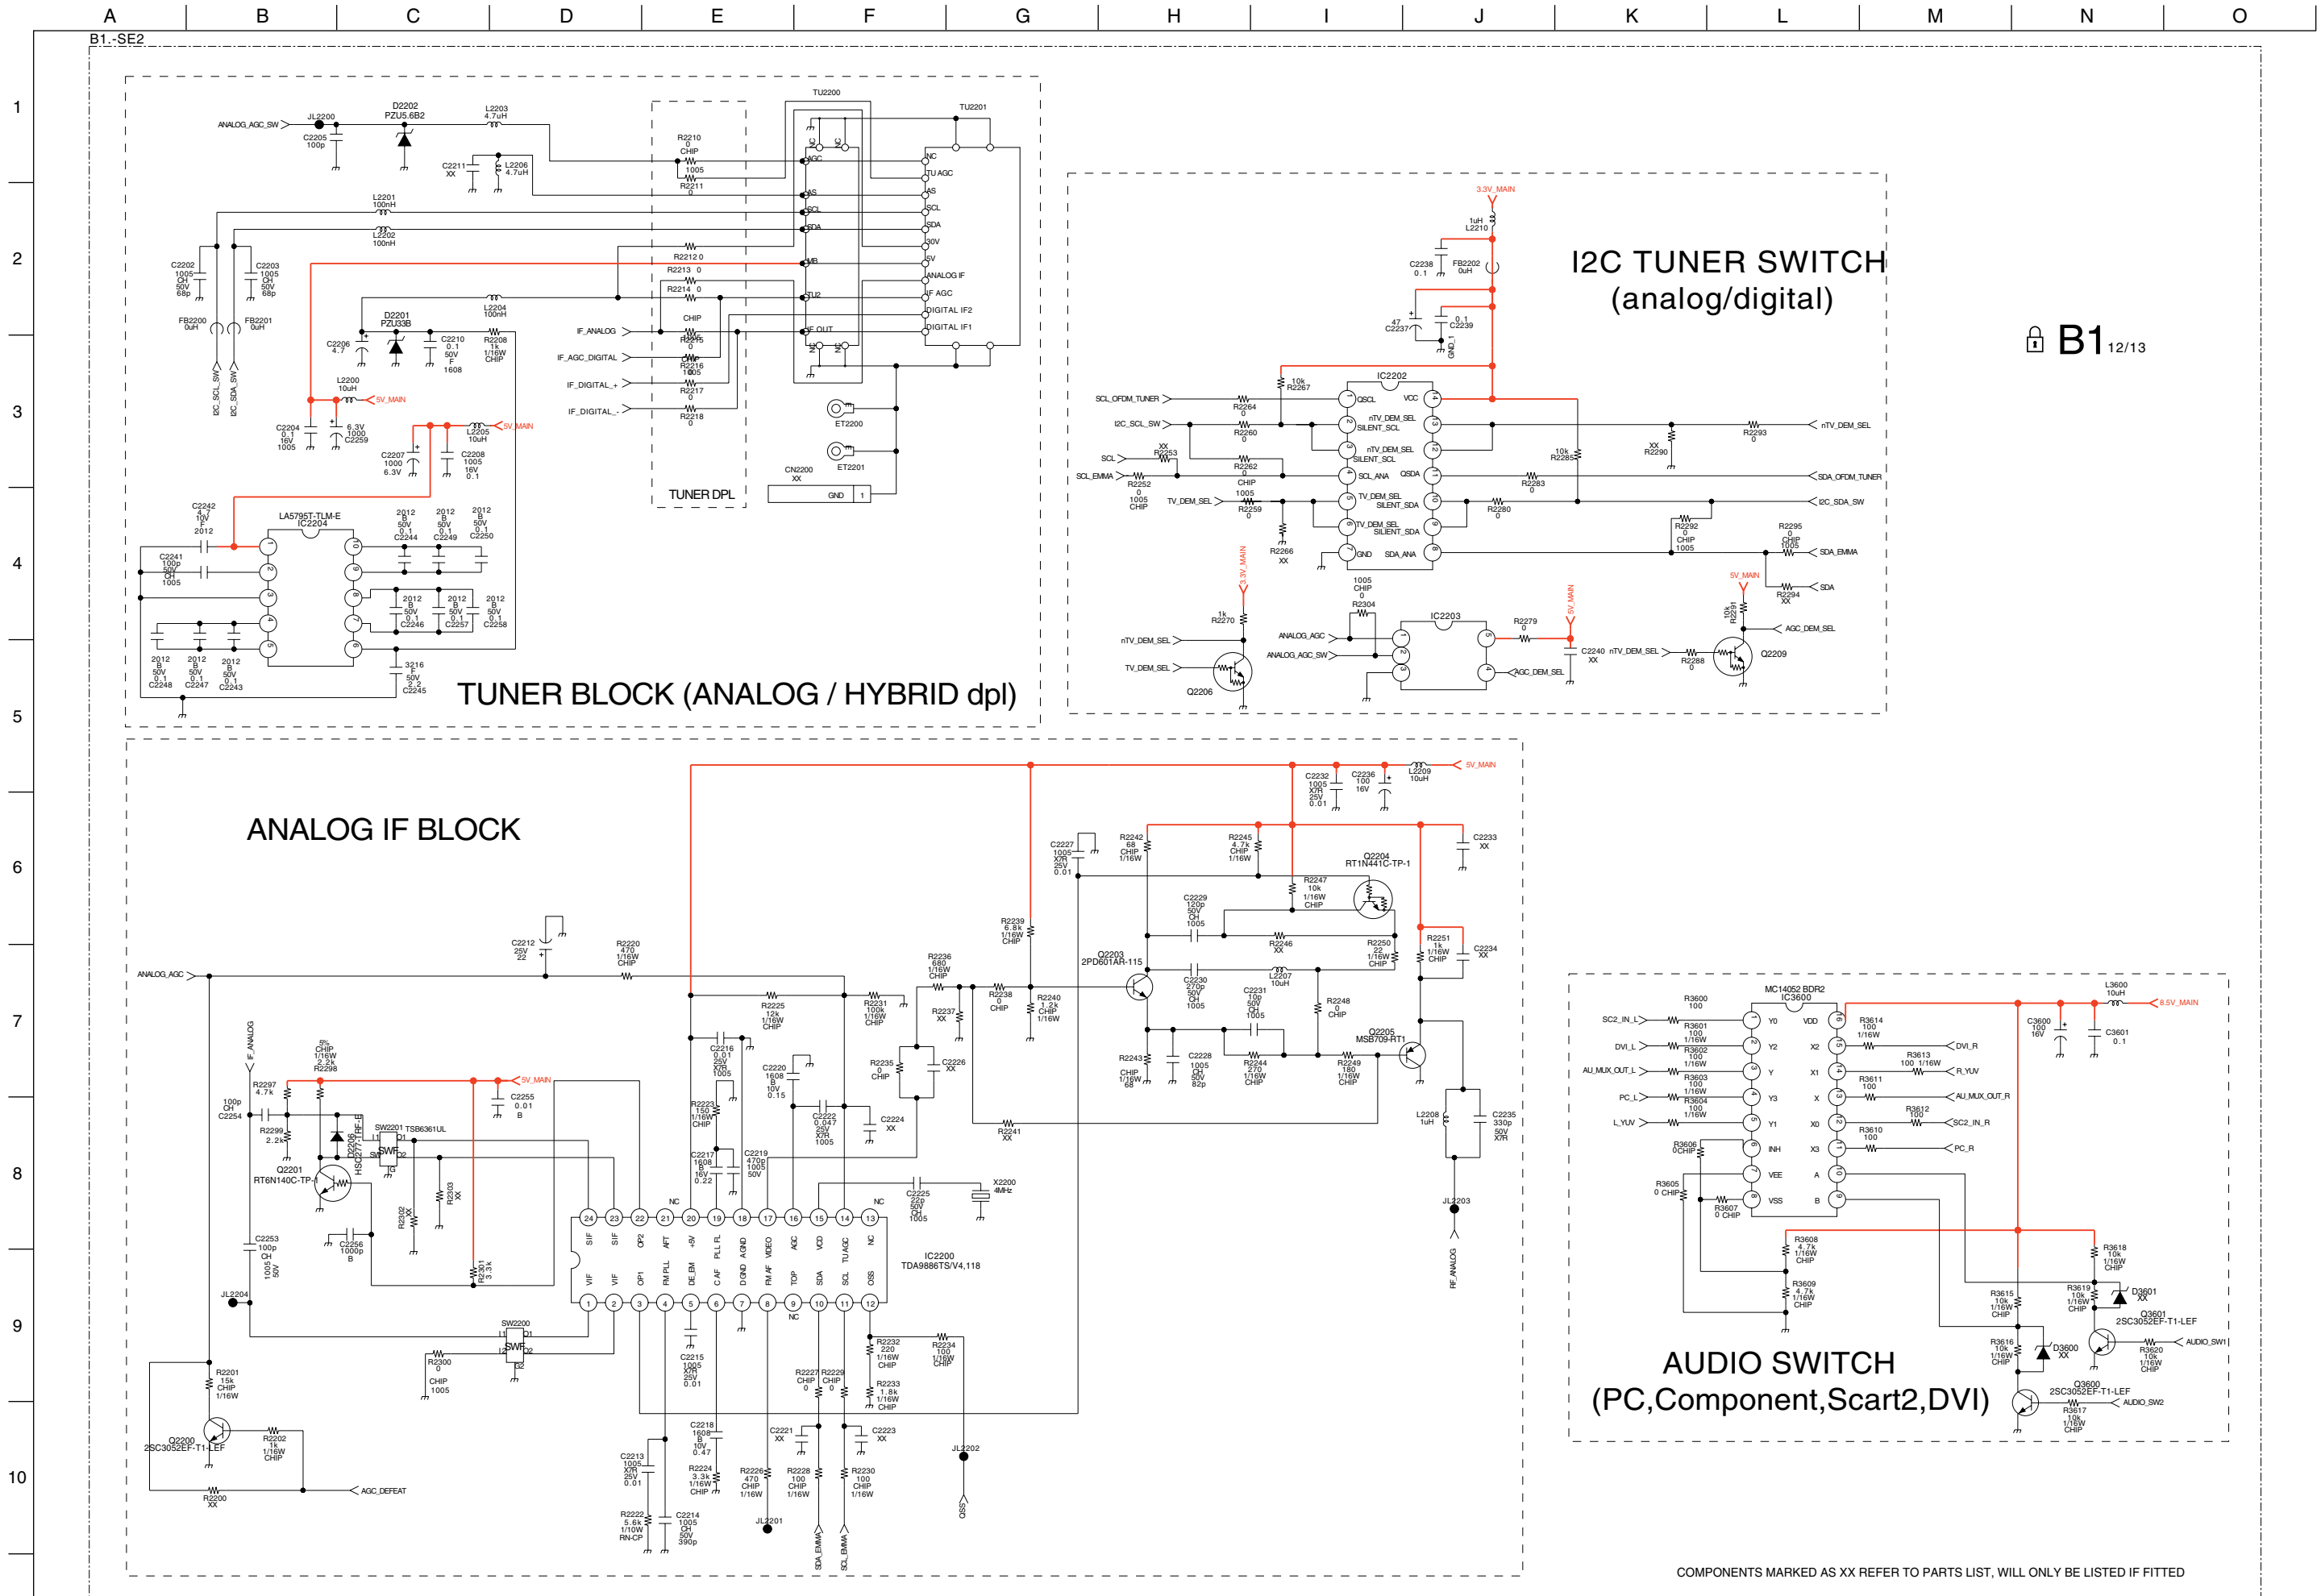



B1.-SE2

 **B1** 13/13


SERVICE CONNECTOR

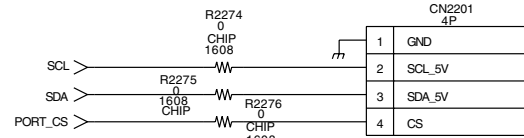


LINE OUT

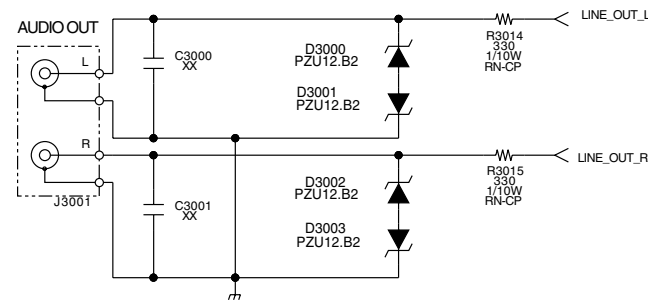


HEADPHONE OUTPUTS

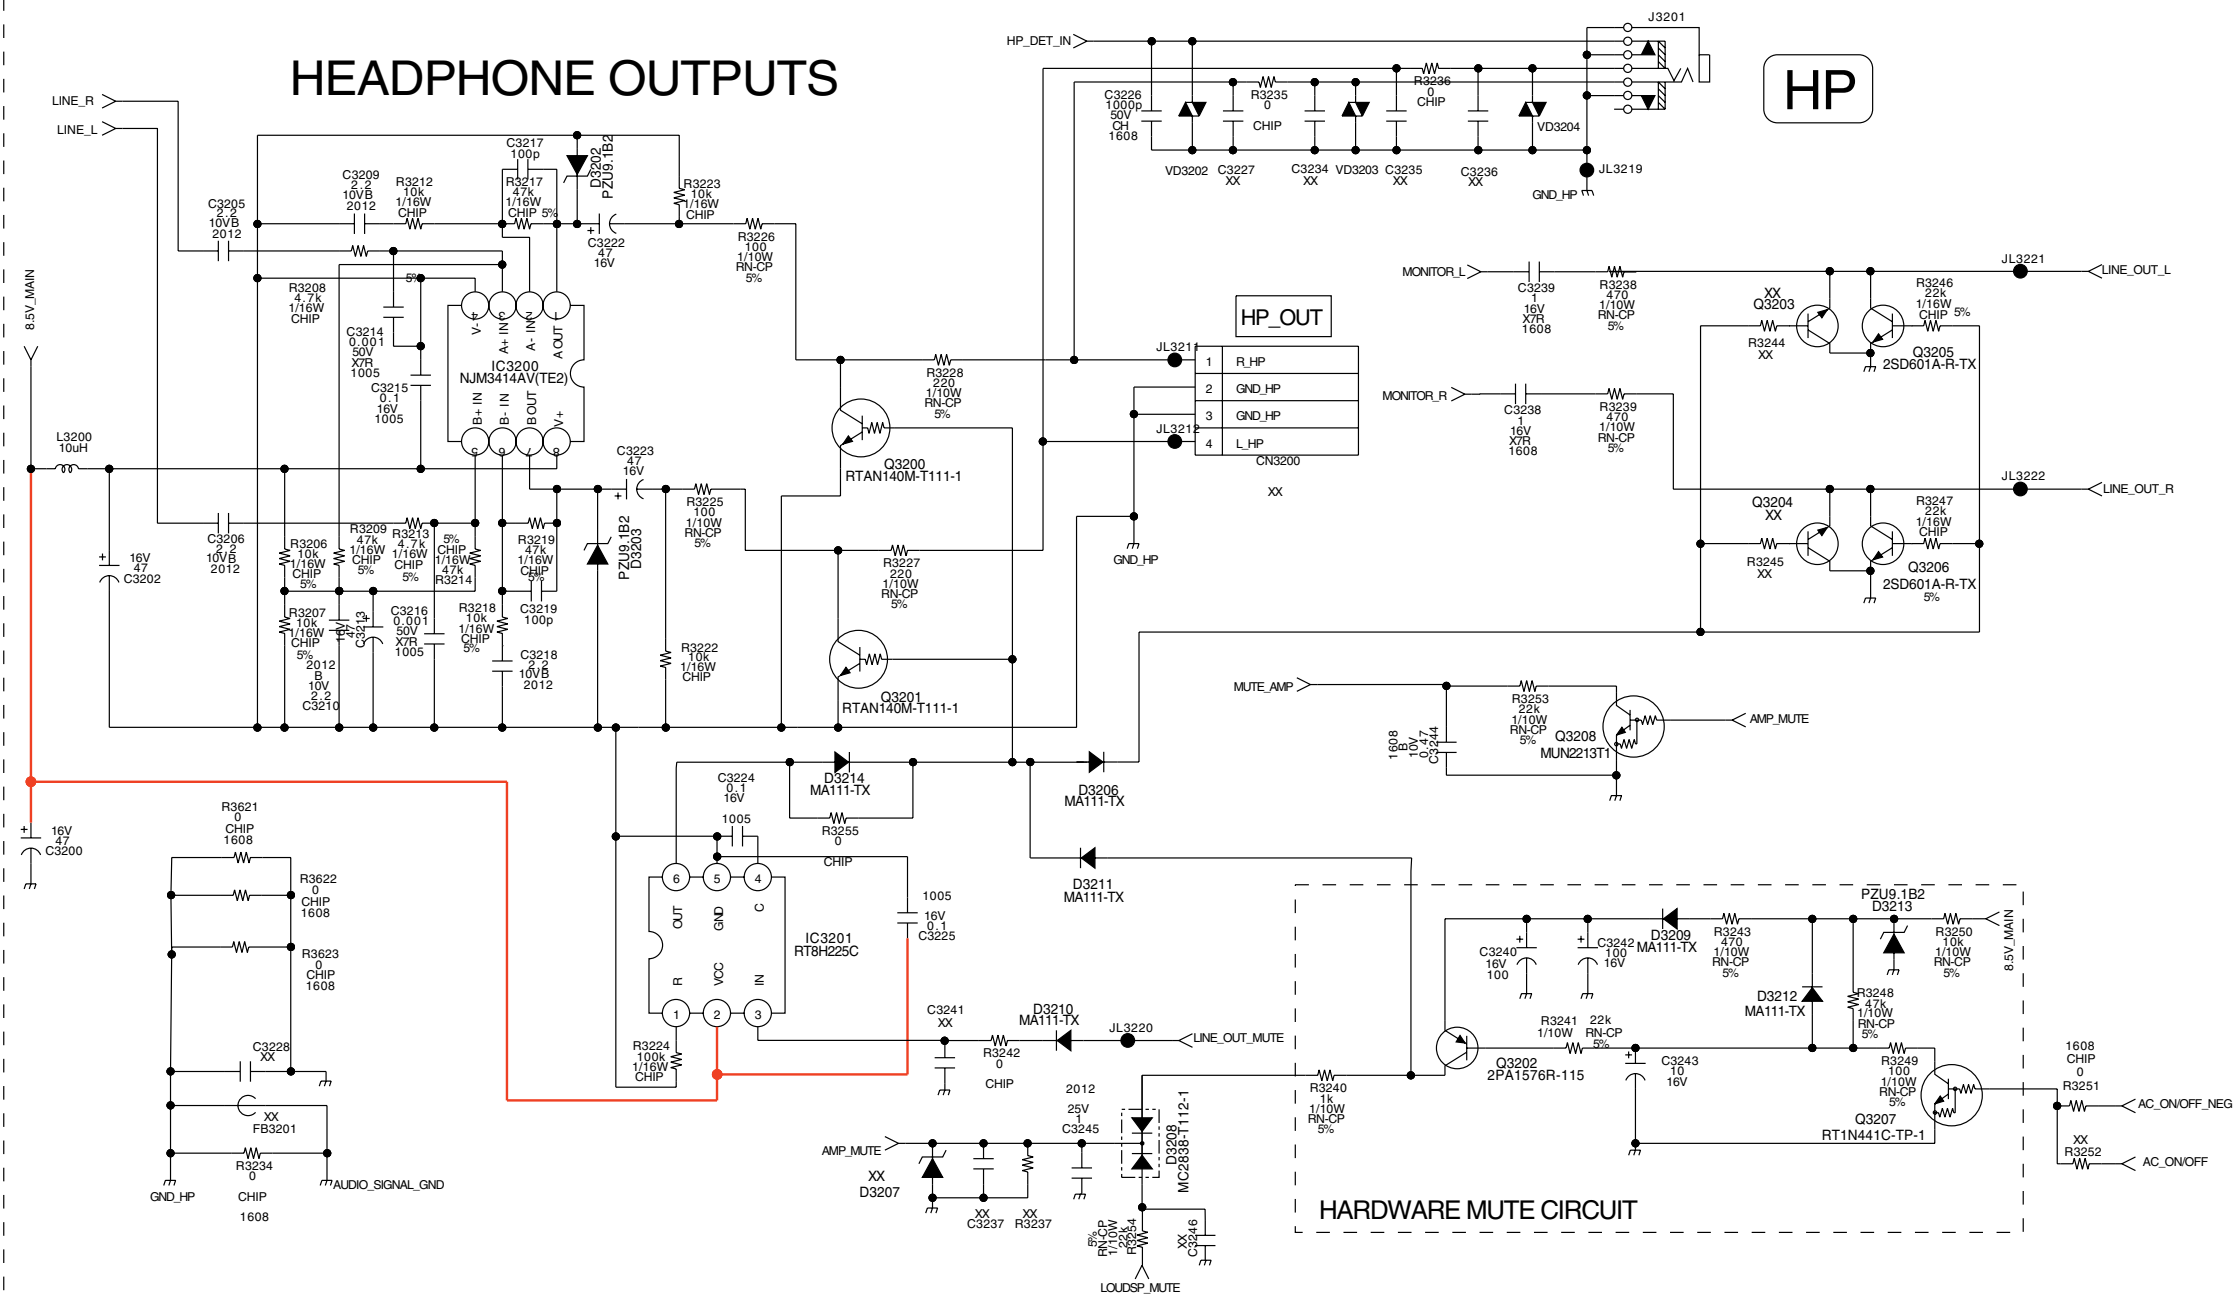


COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

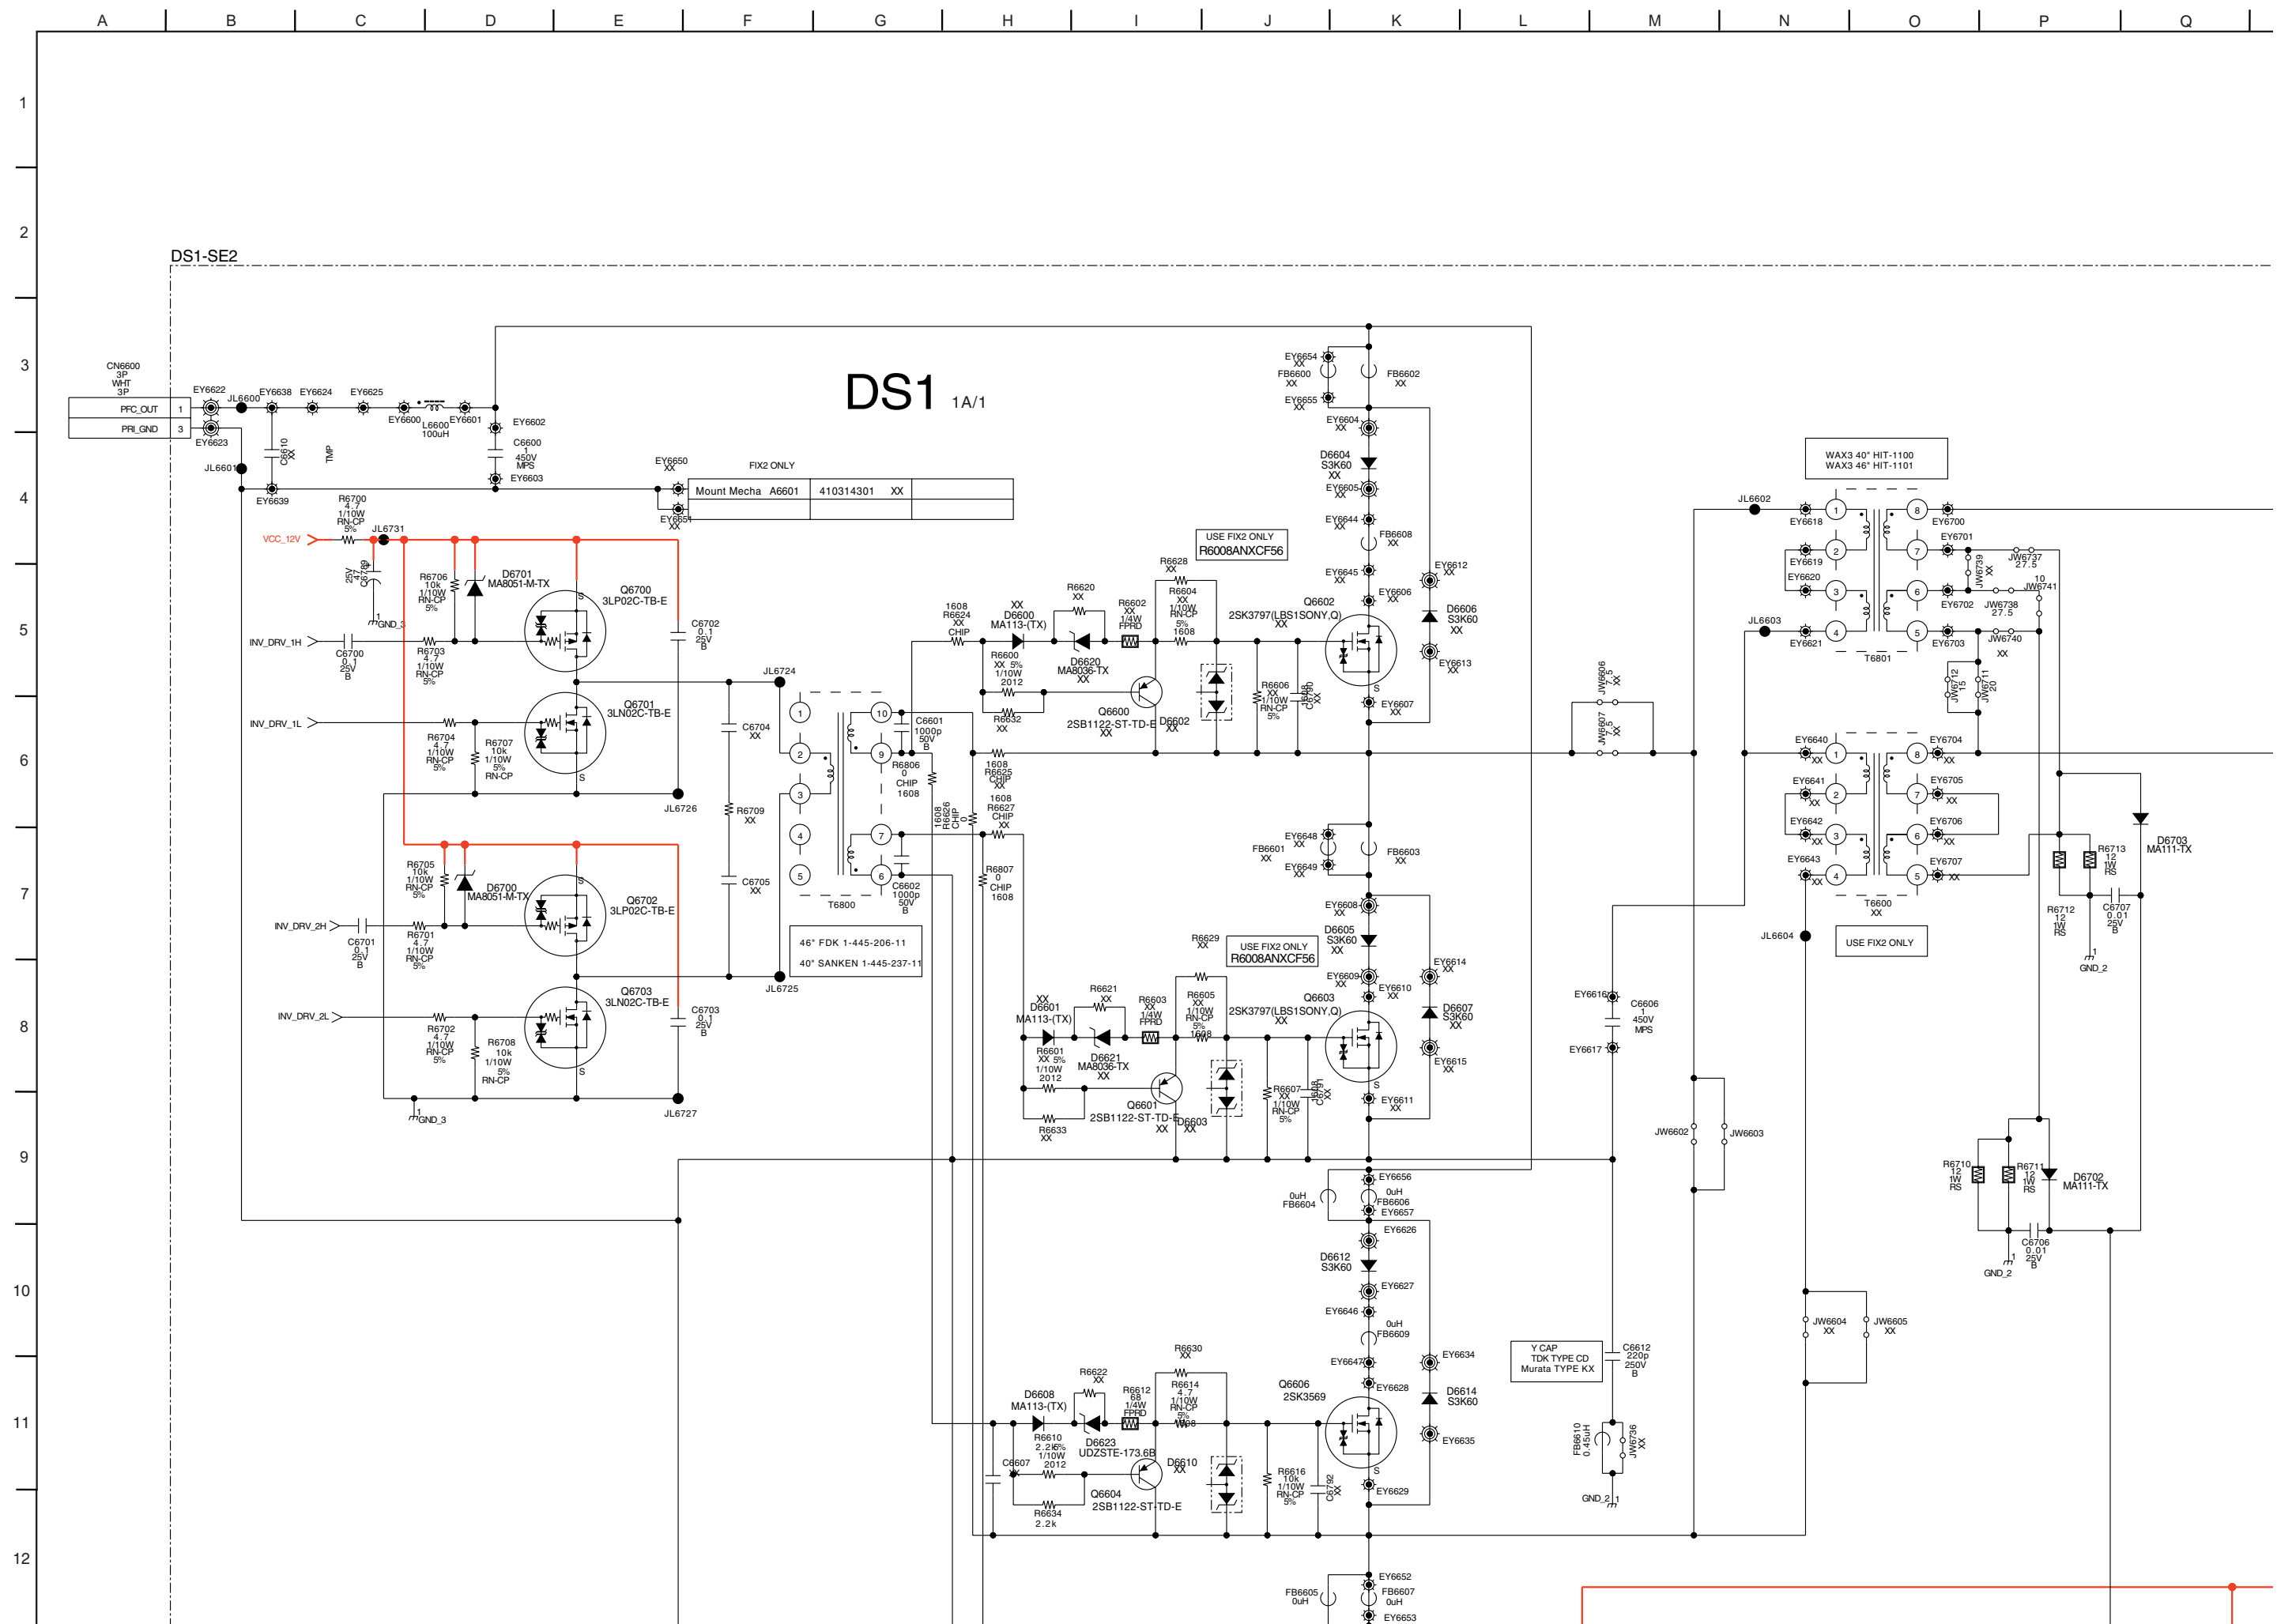




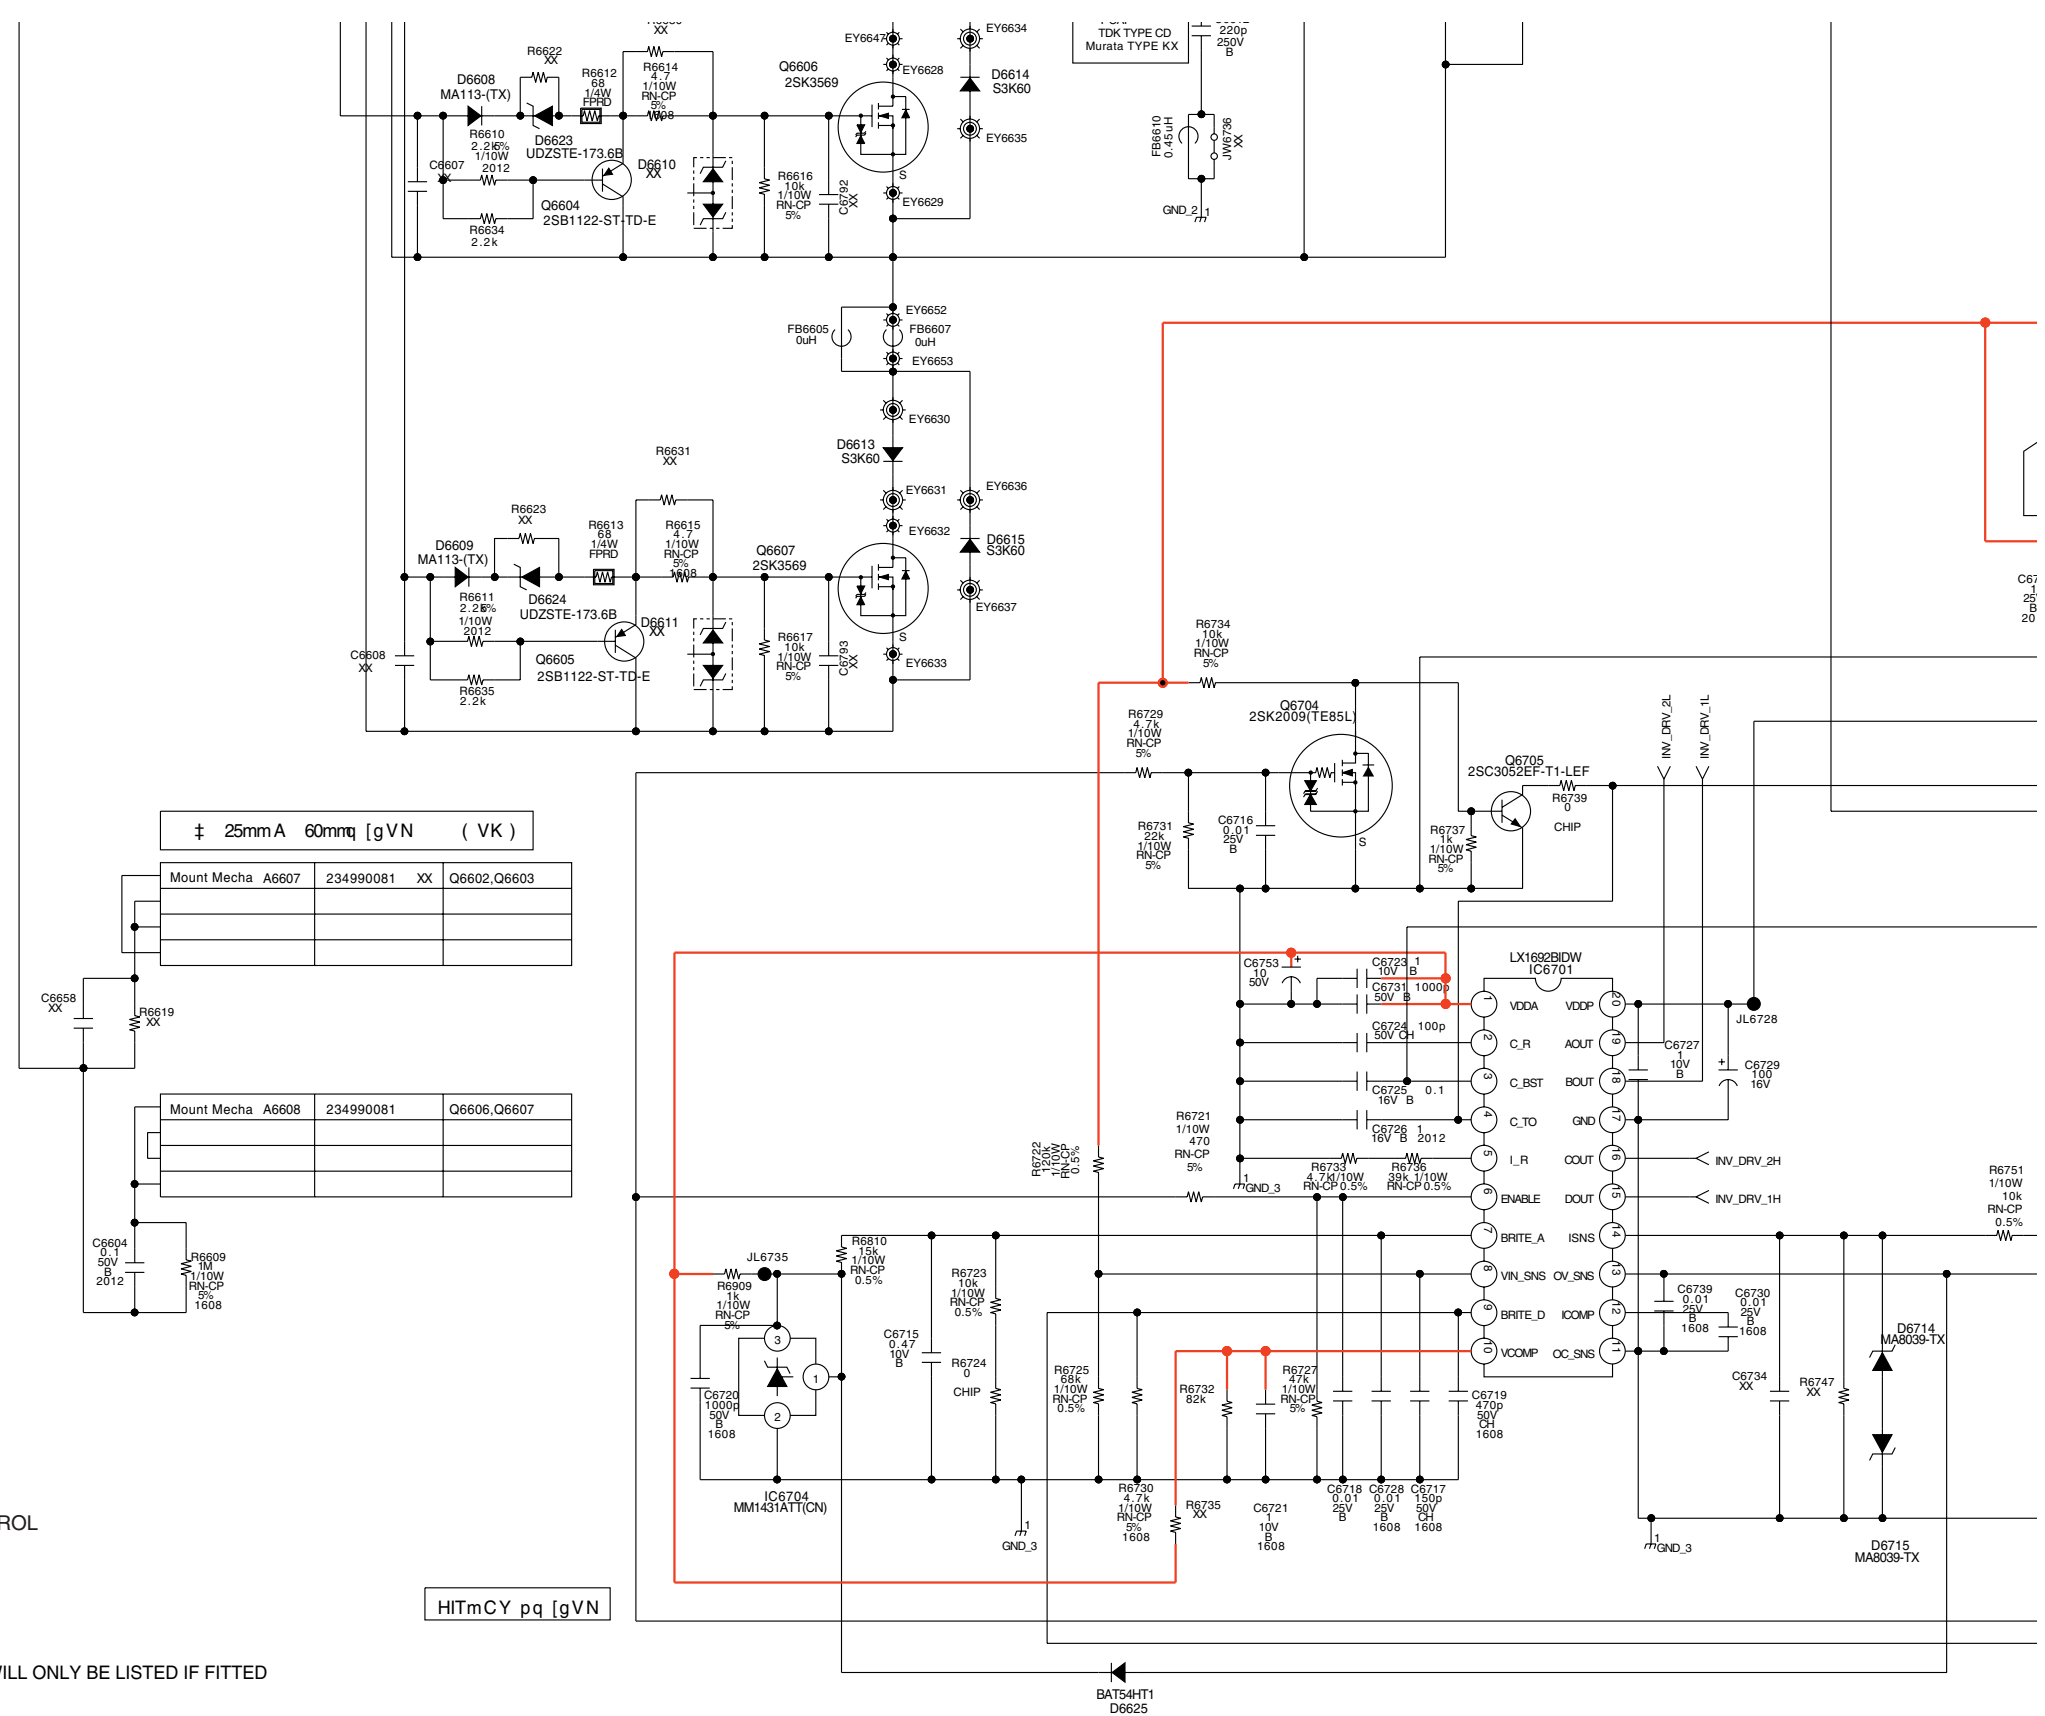

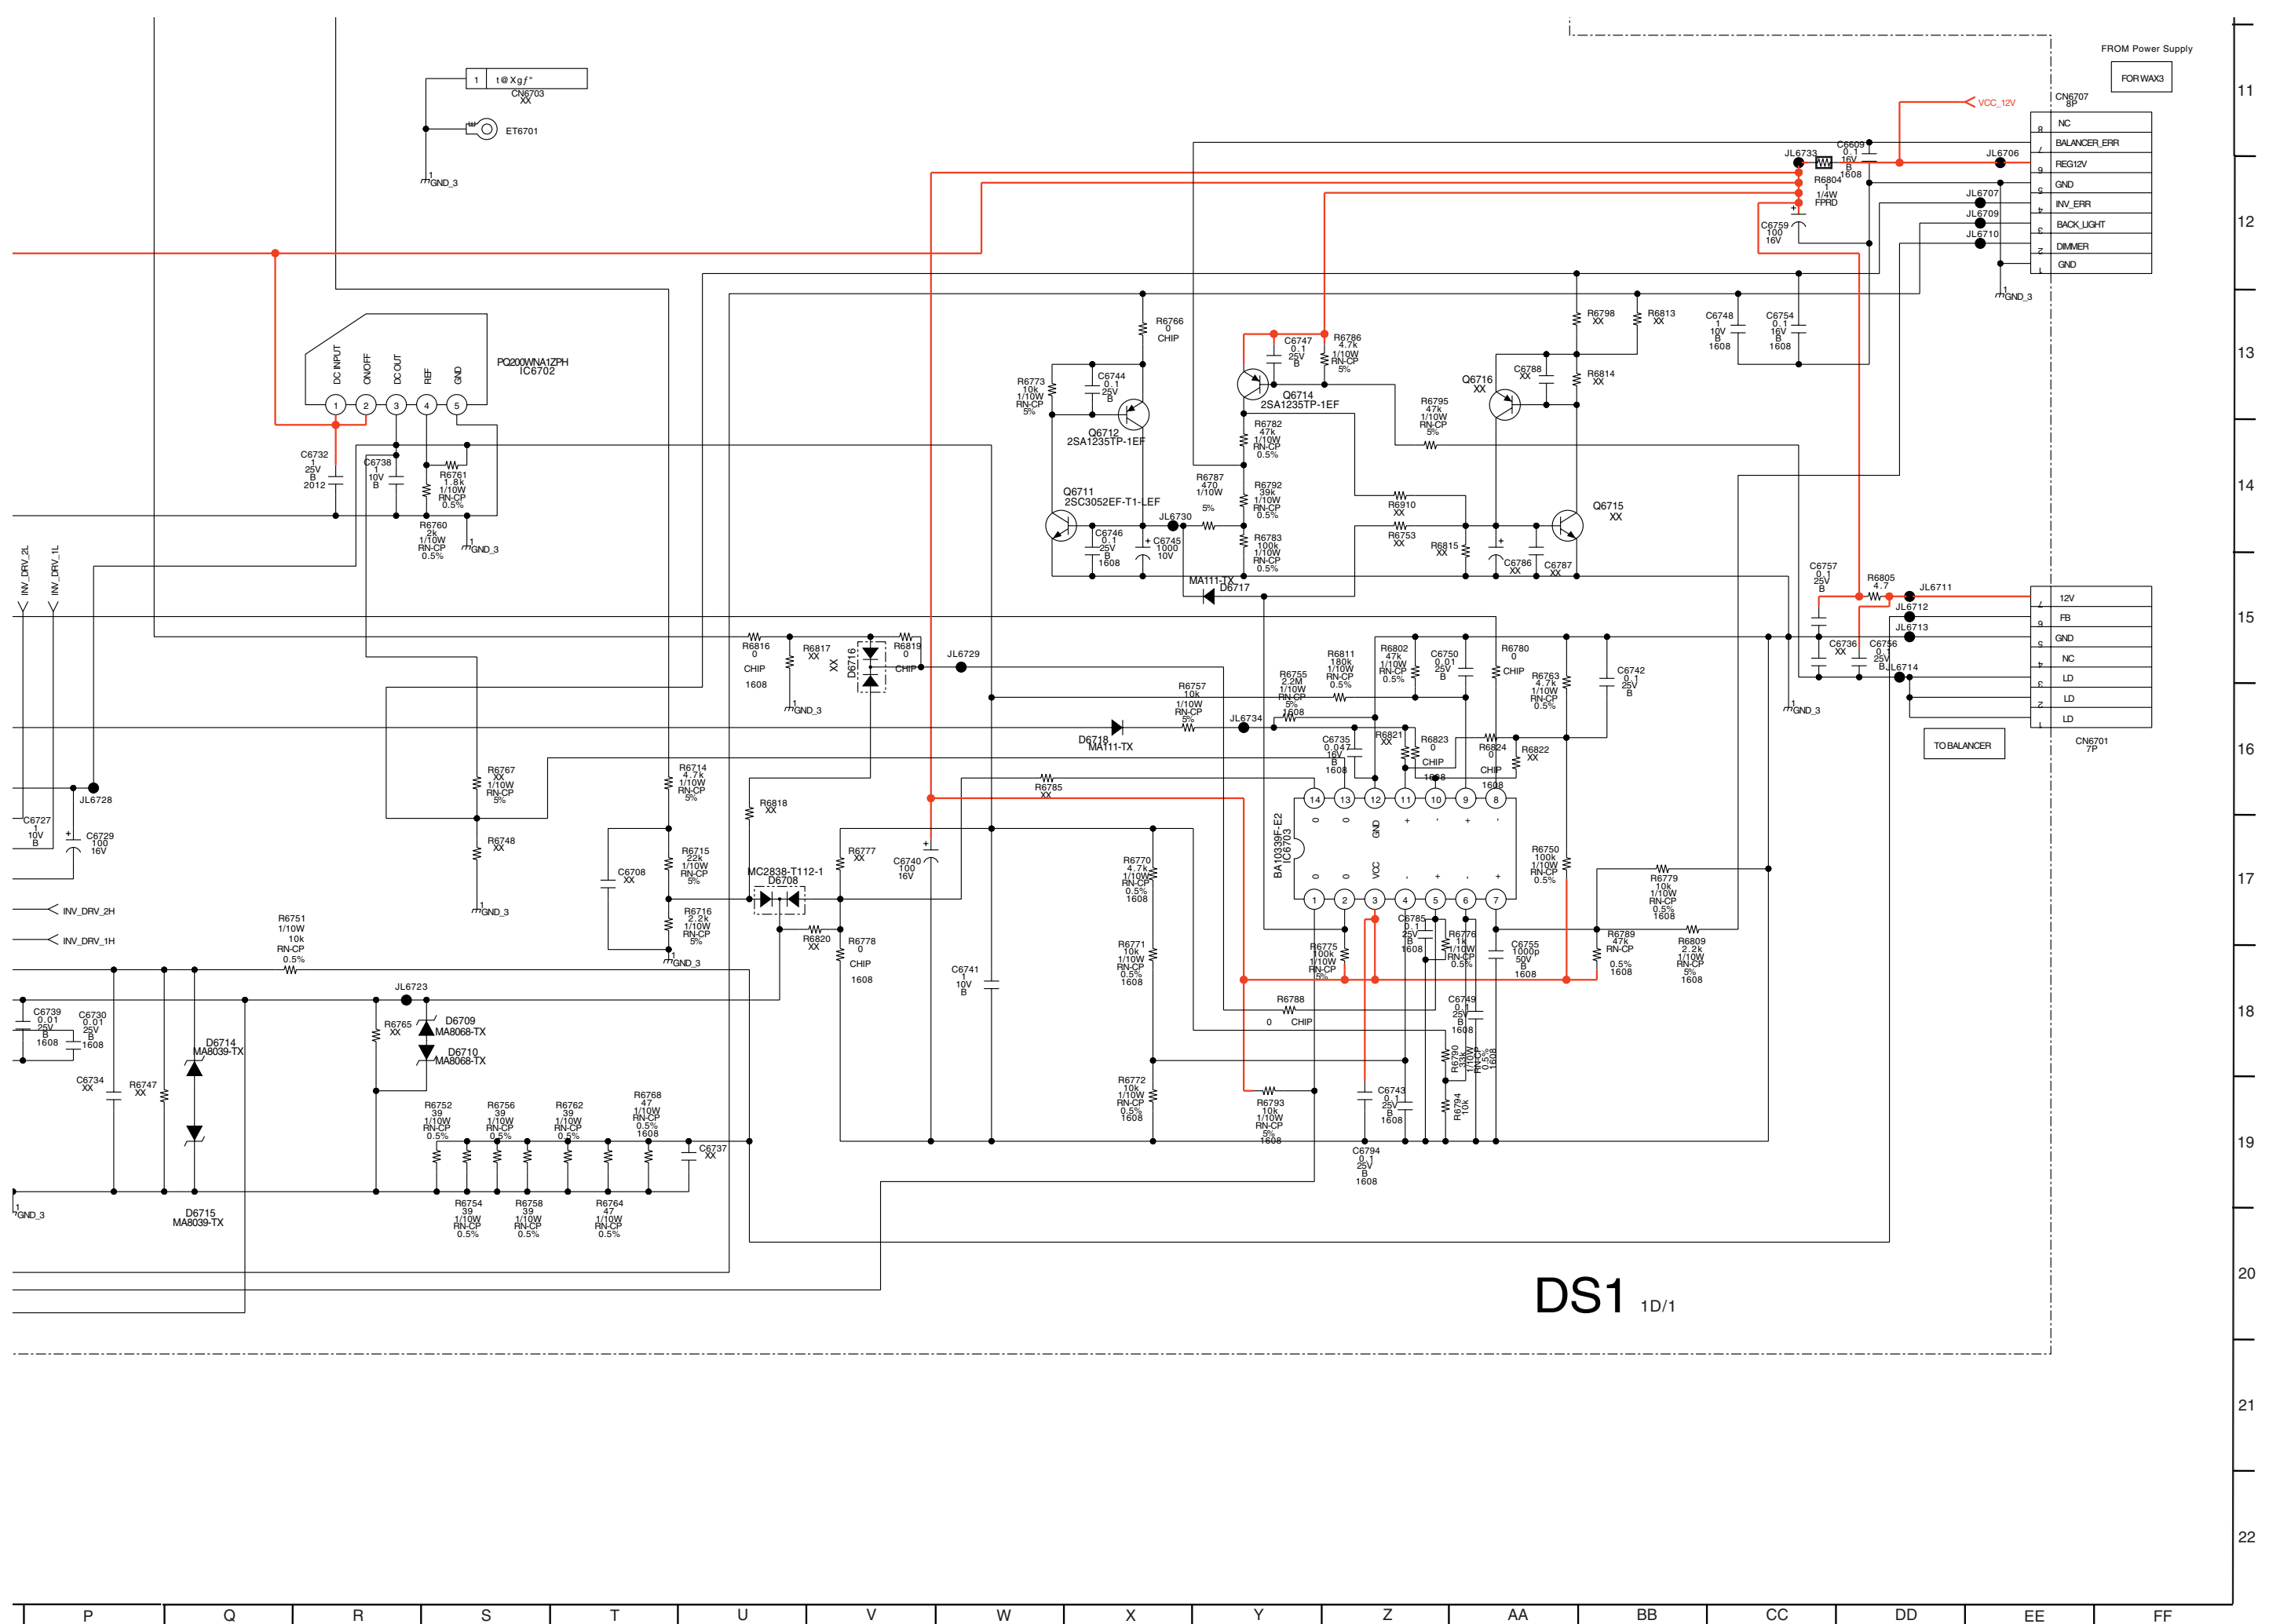




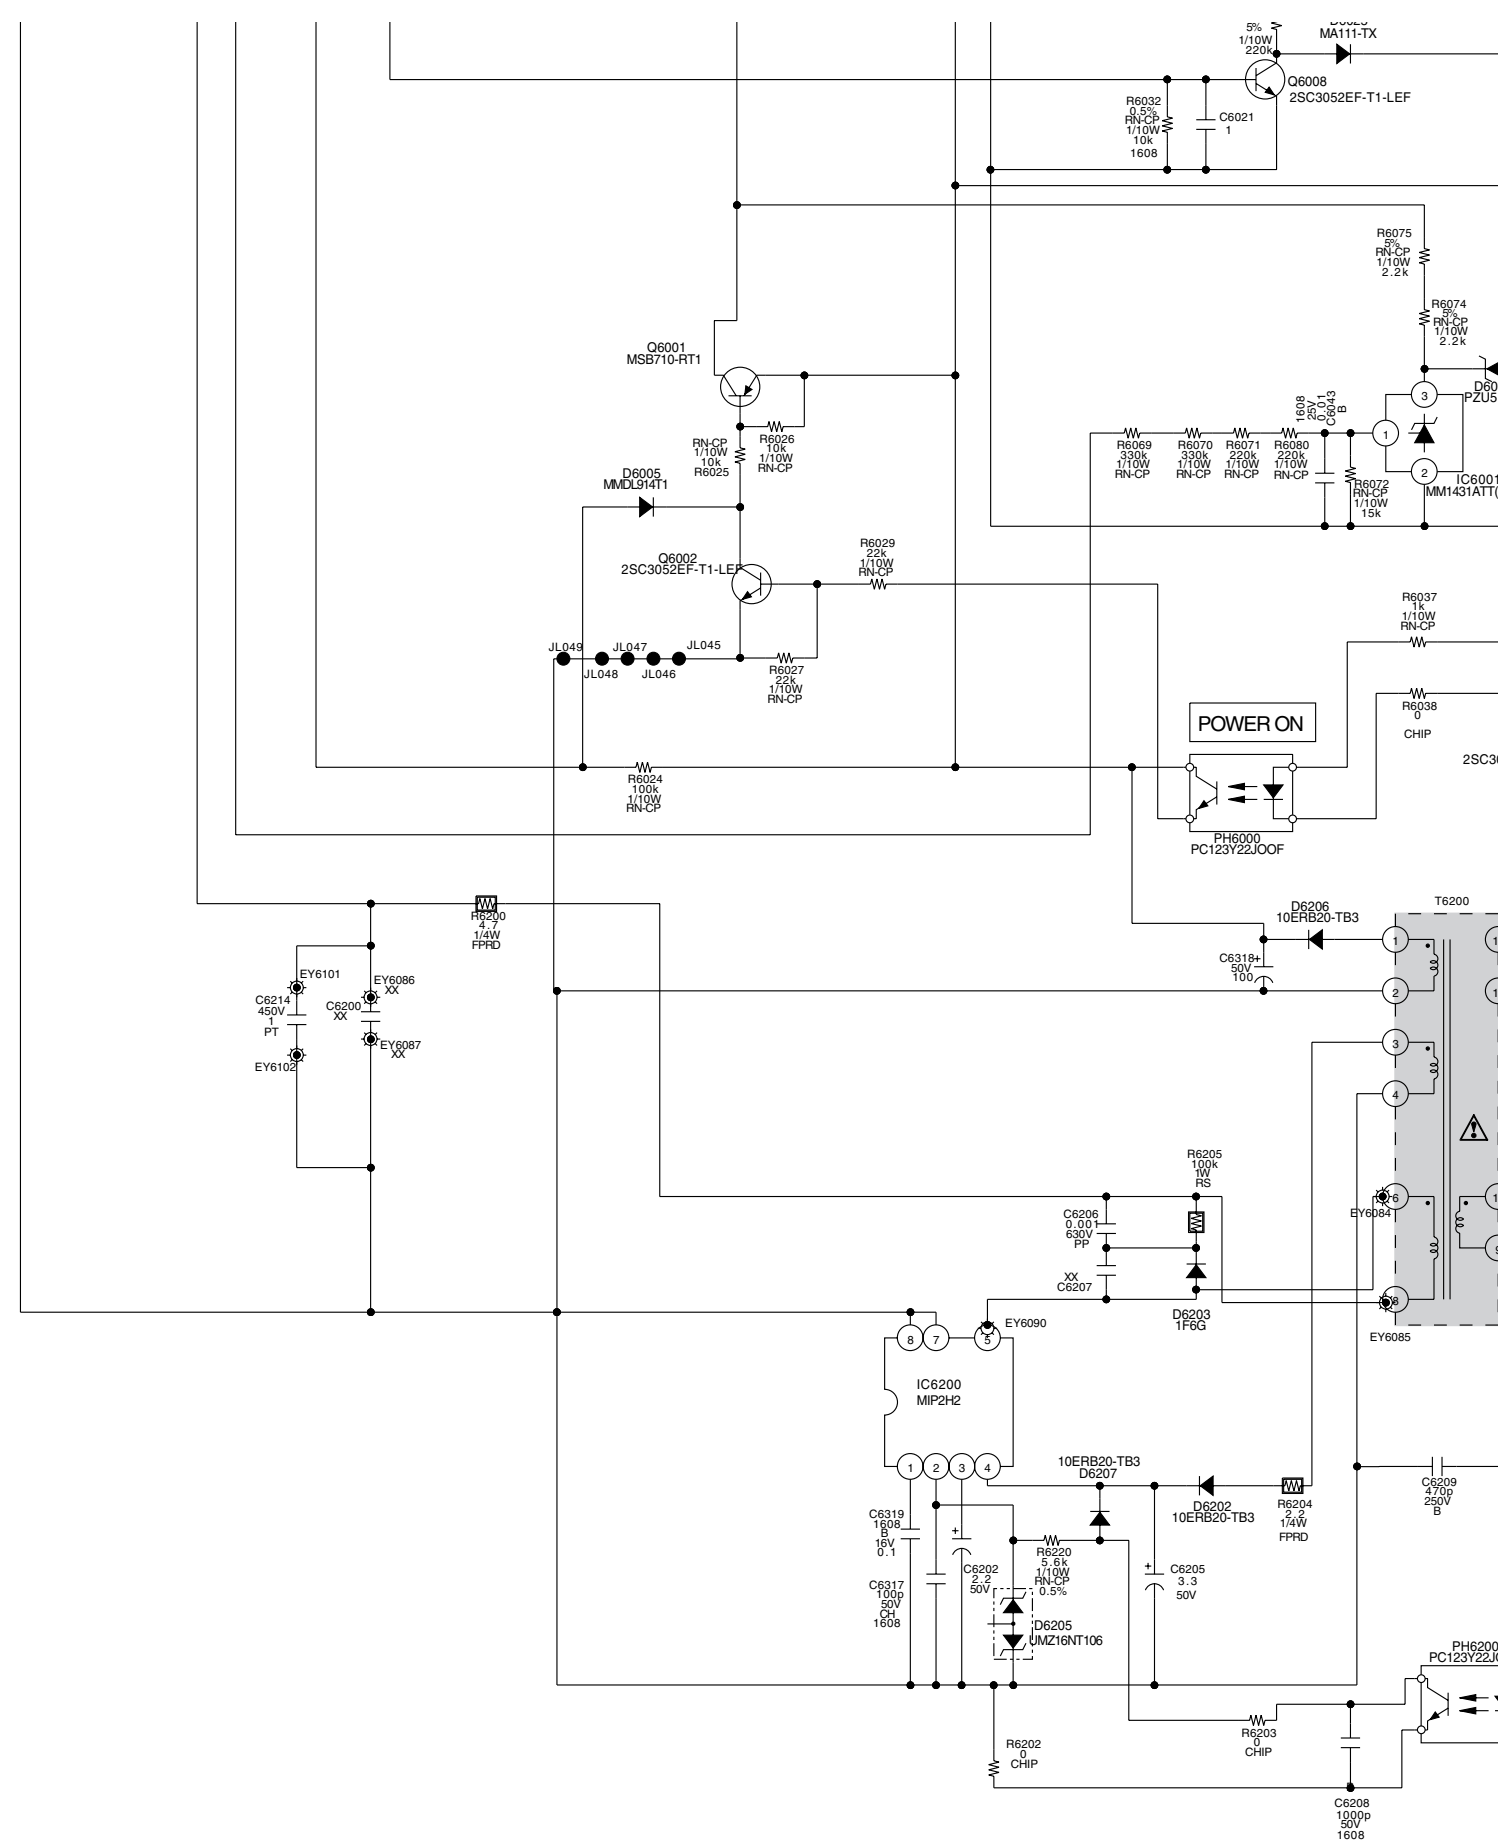

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED



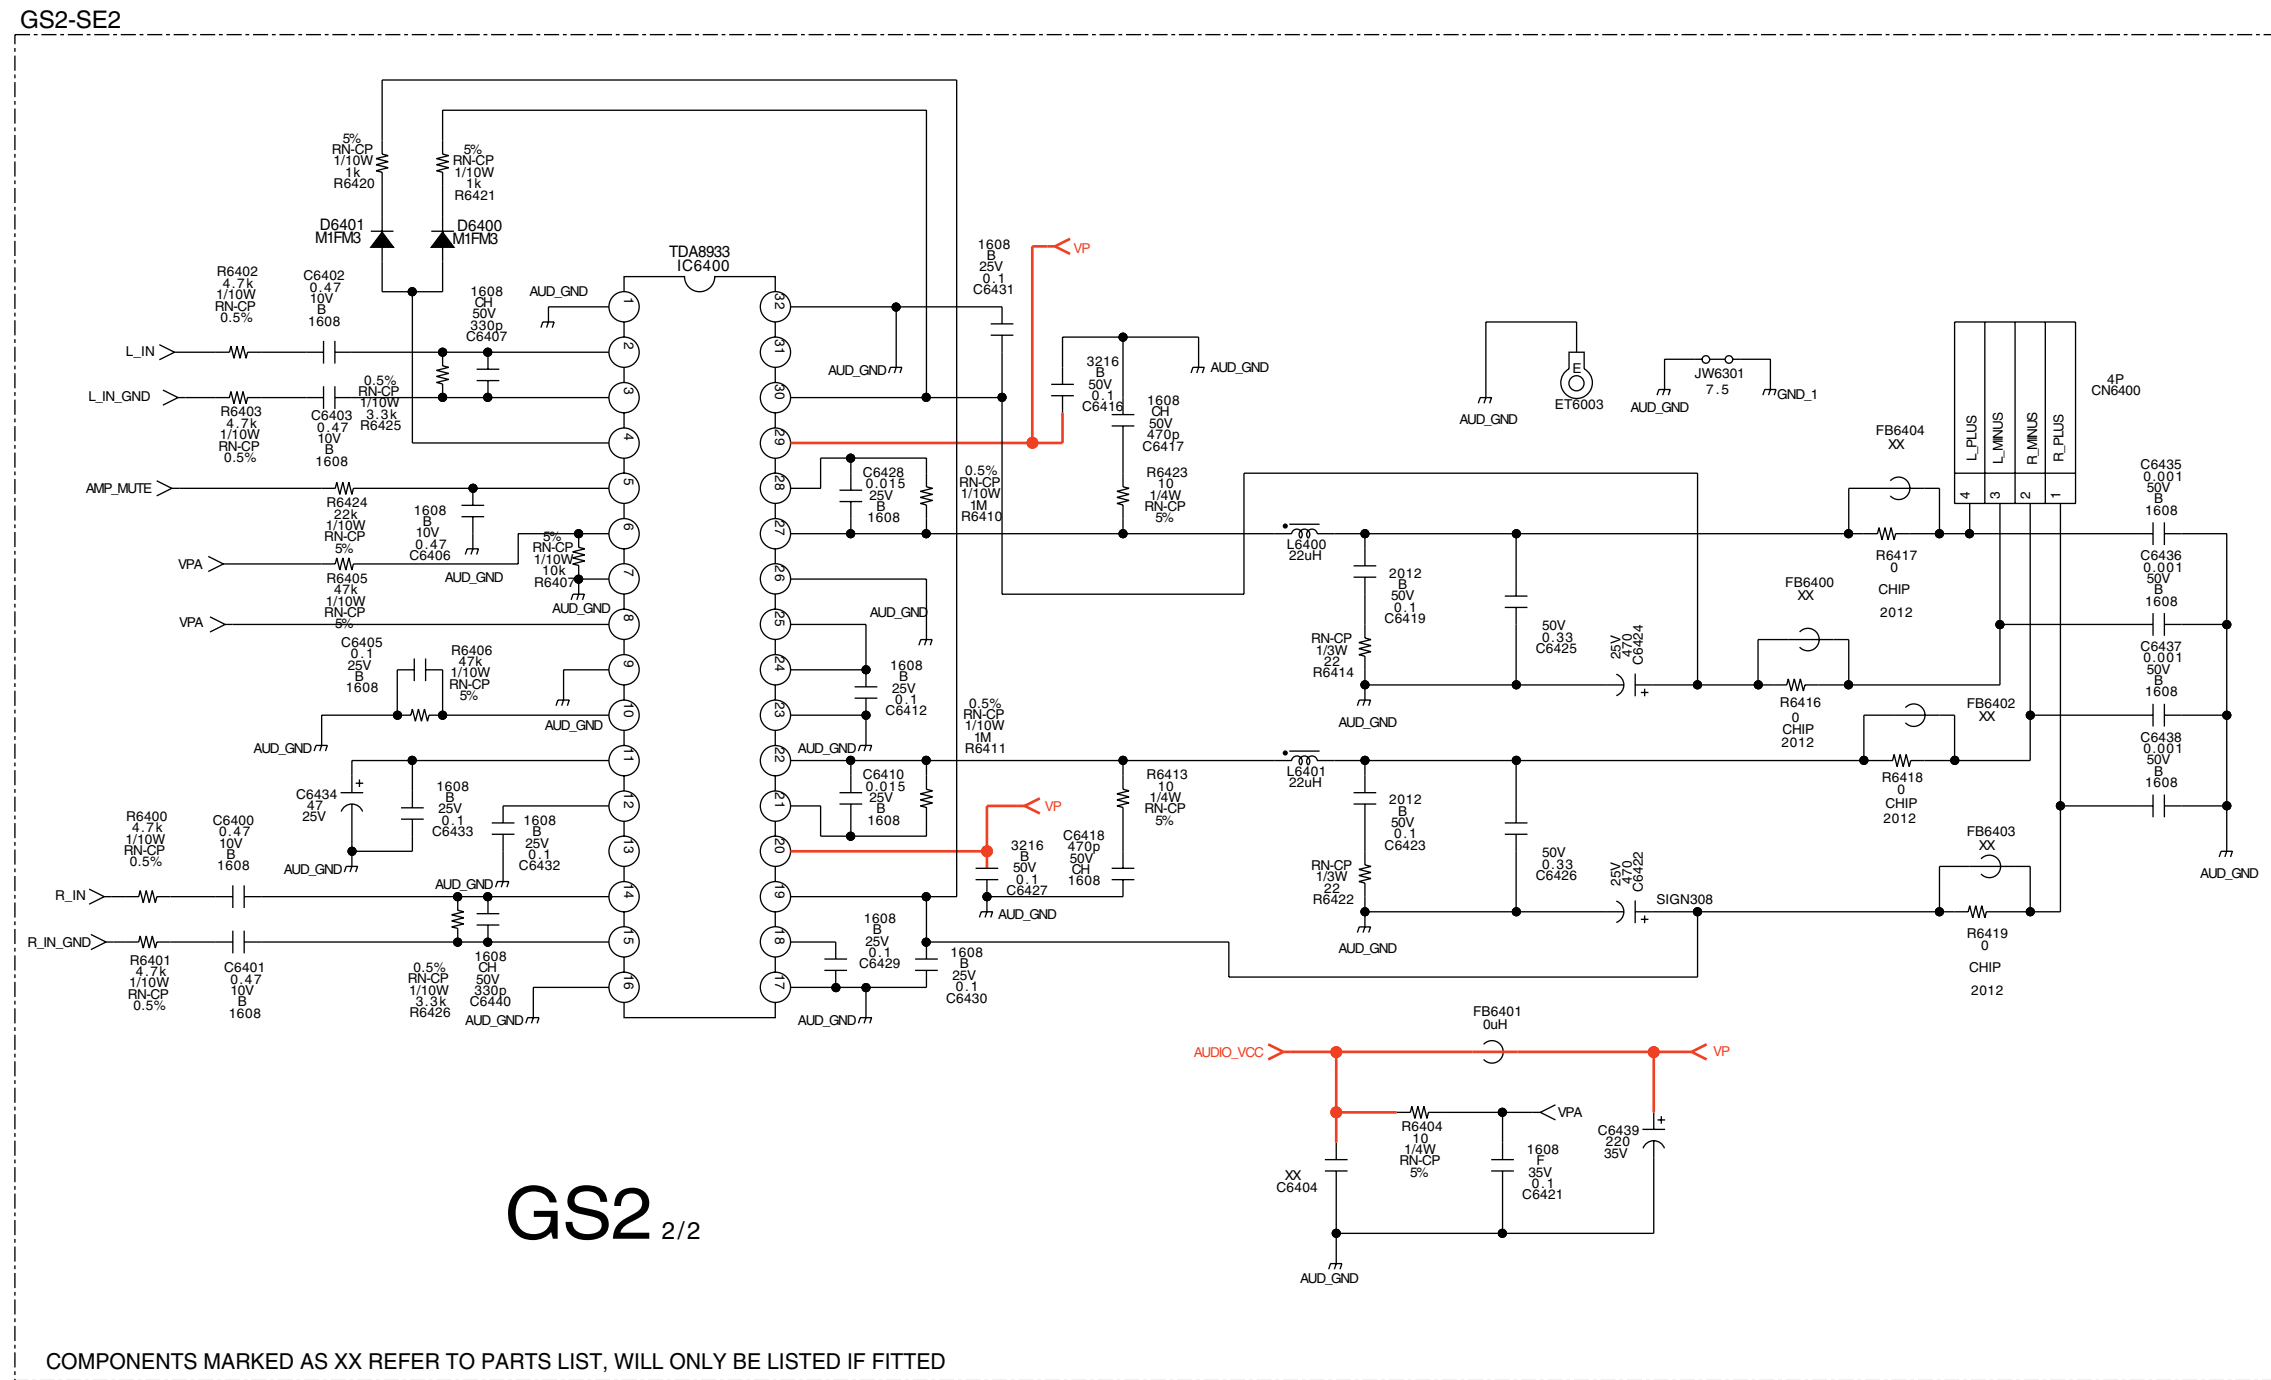


A B C D E F G H I J K L M N O P Q

GS3-SE2

GS3

1A/2

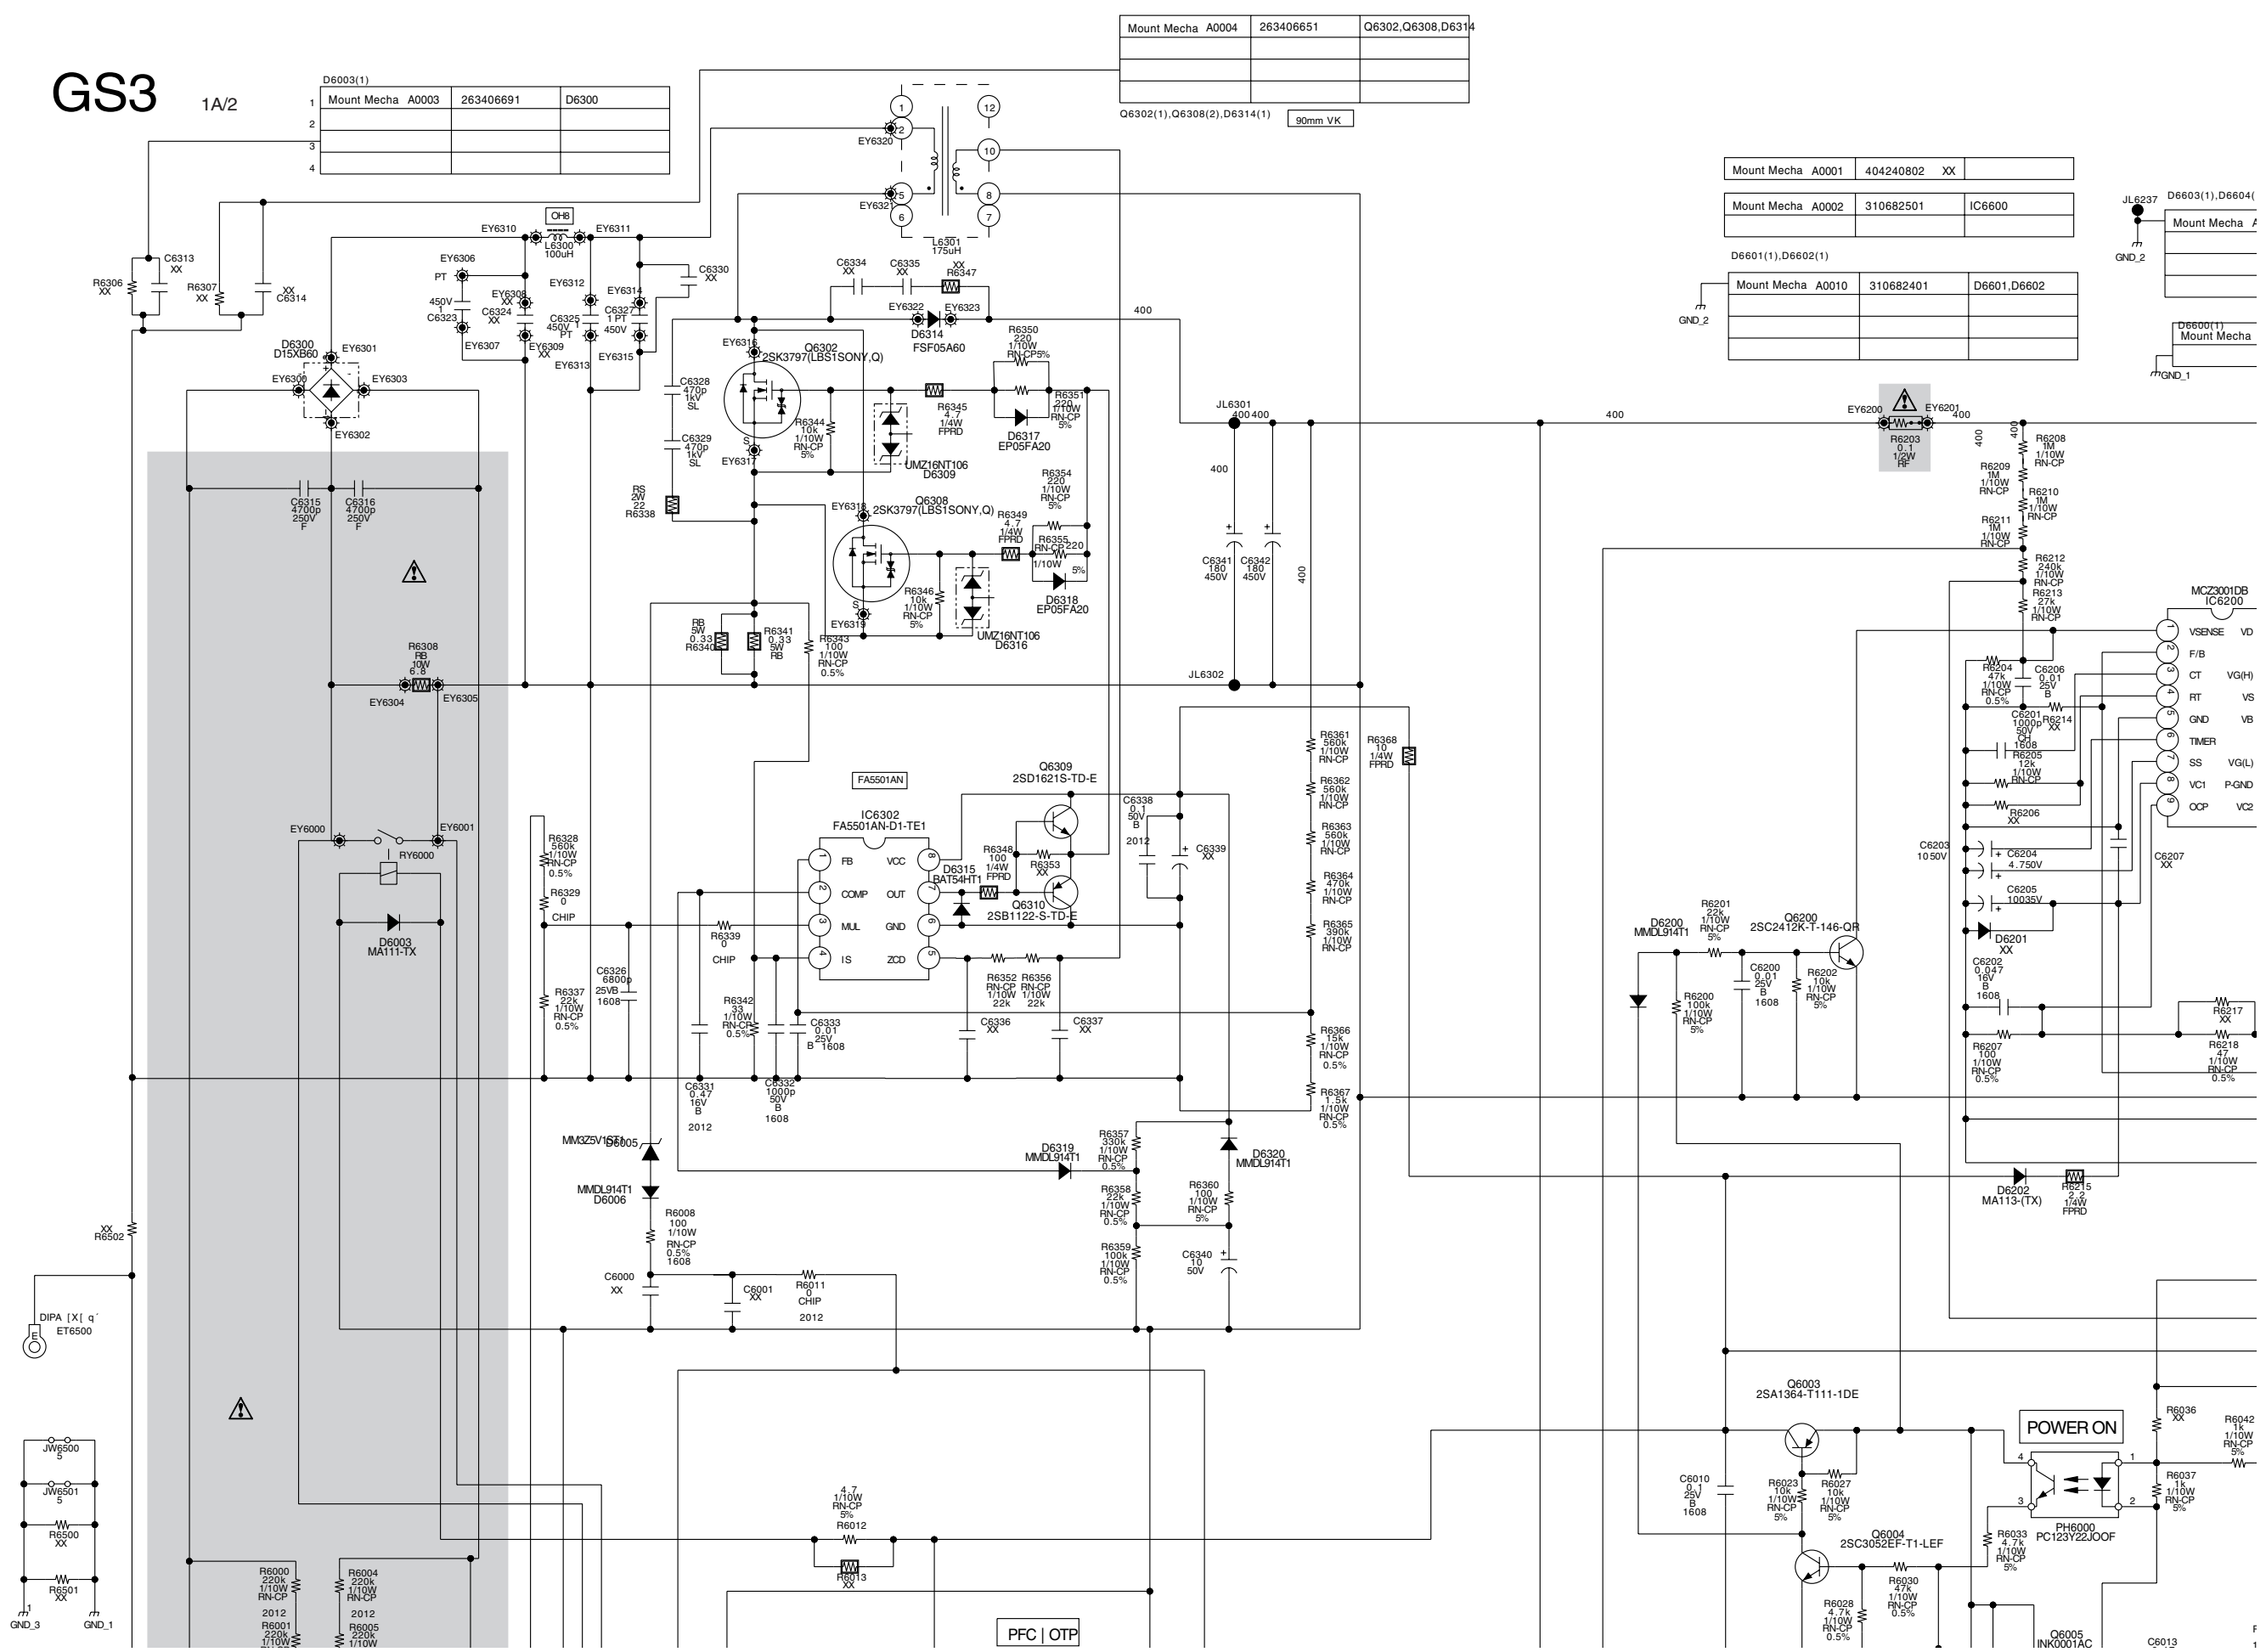


Mount Mecha	A0004	263406651	Q6302,Q6308,D6314

Q6302(1),Q6308(2),D6314(1) 90mm VK


Mount Mecha	A0001	404240802	XX
Mount Mecha	A0002	310682501	IC6600

D6601(1),D6602(1)

Mount Mecha	A0010	310682401	D6601,D6602

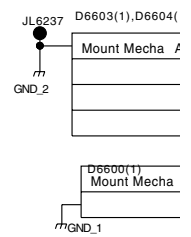



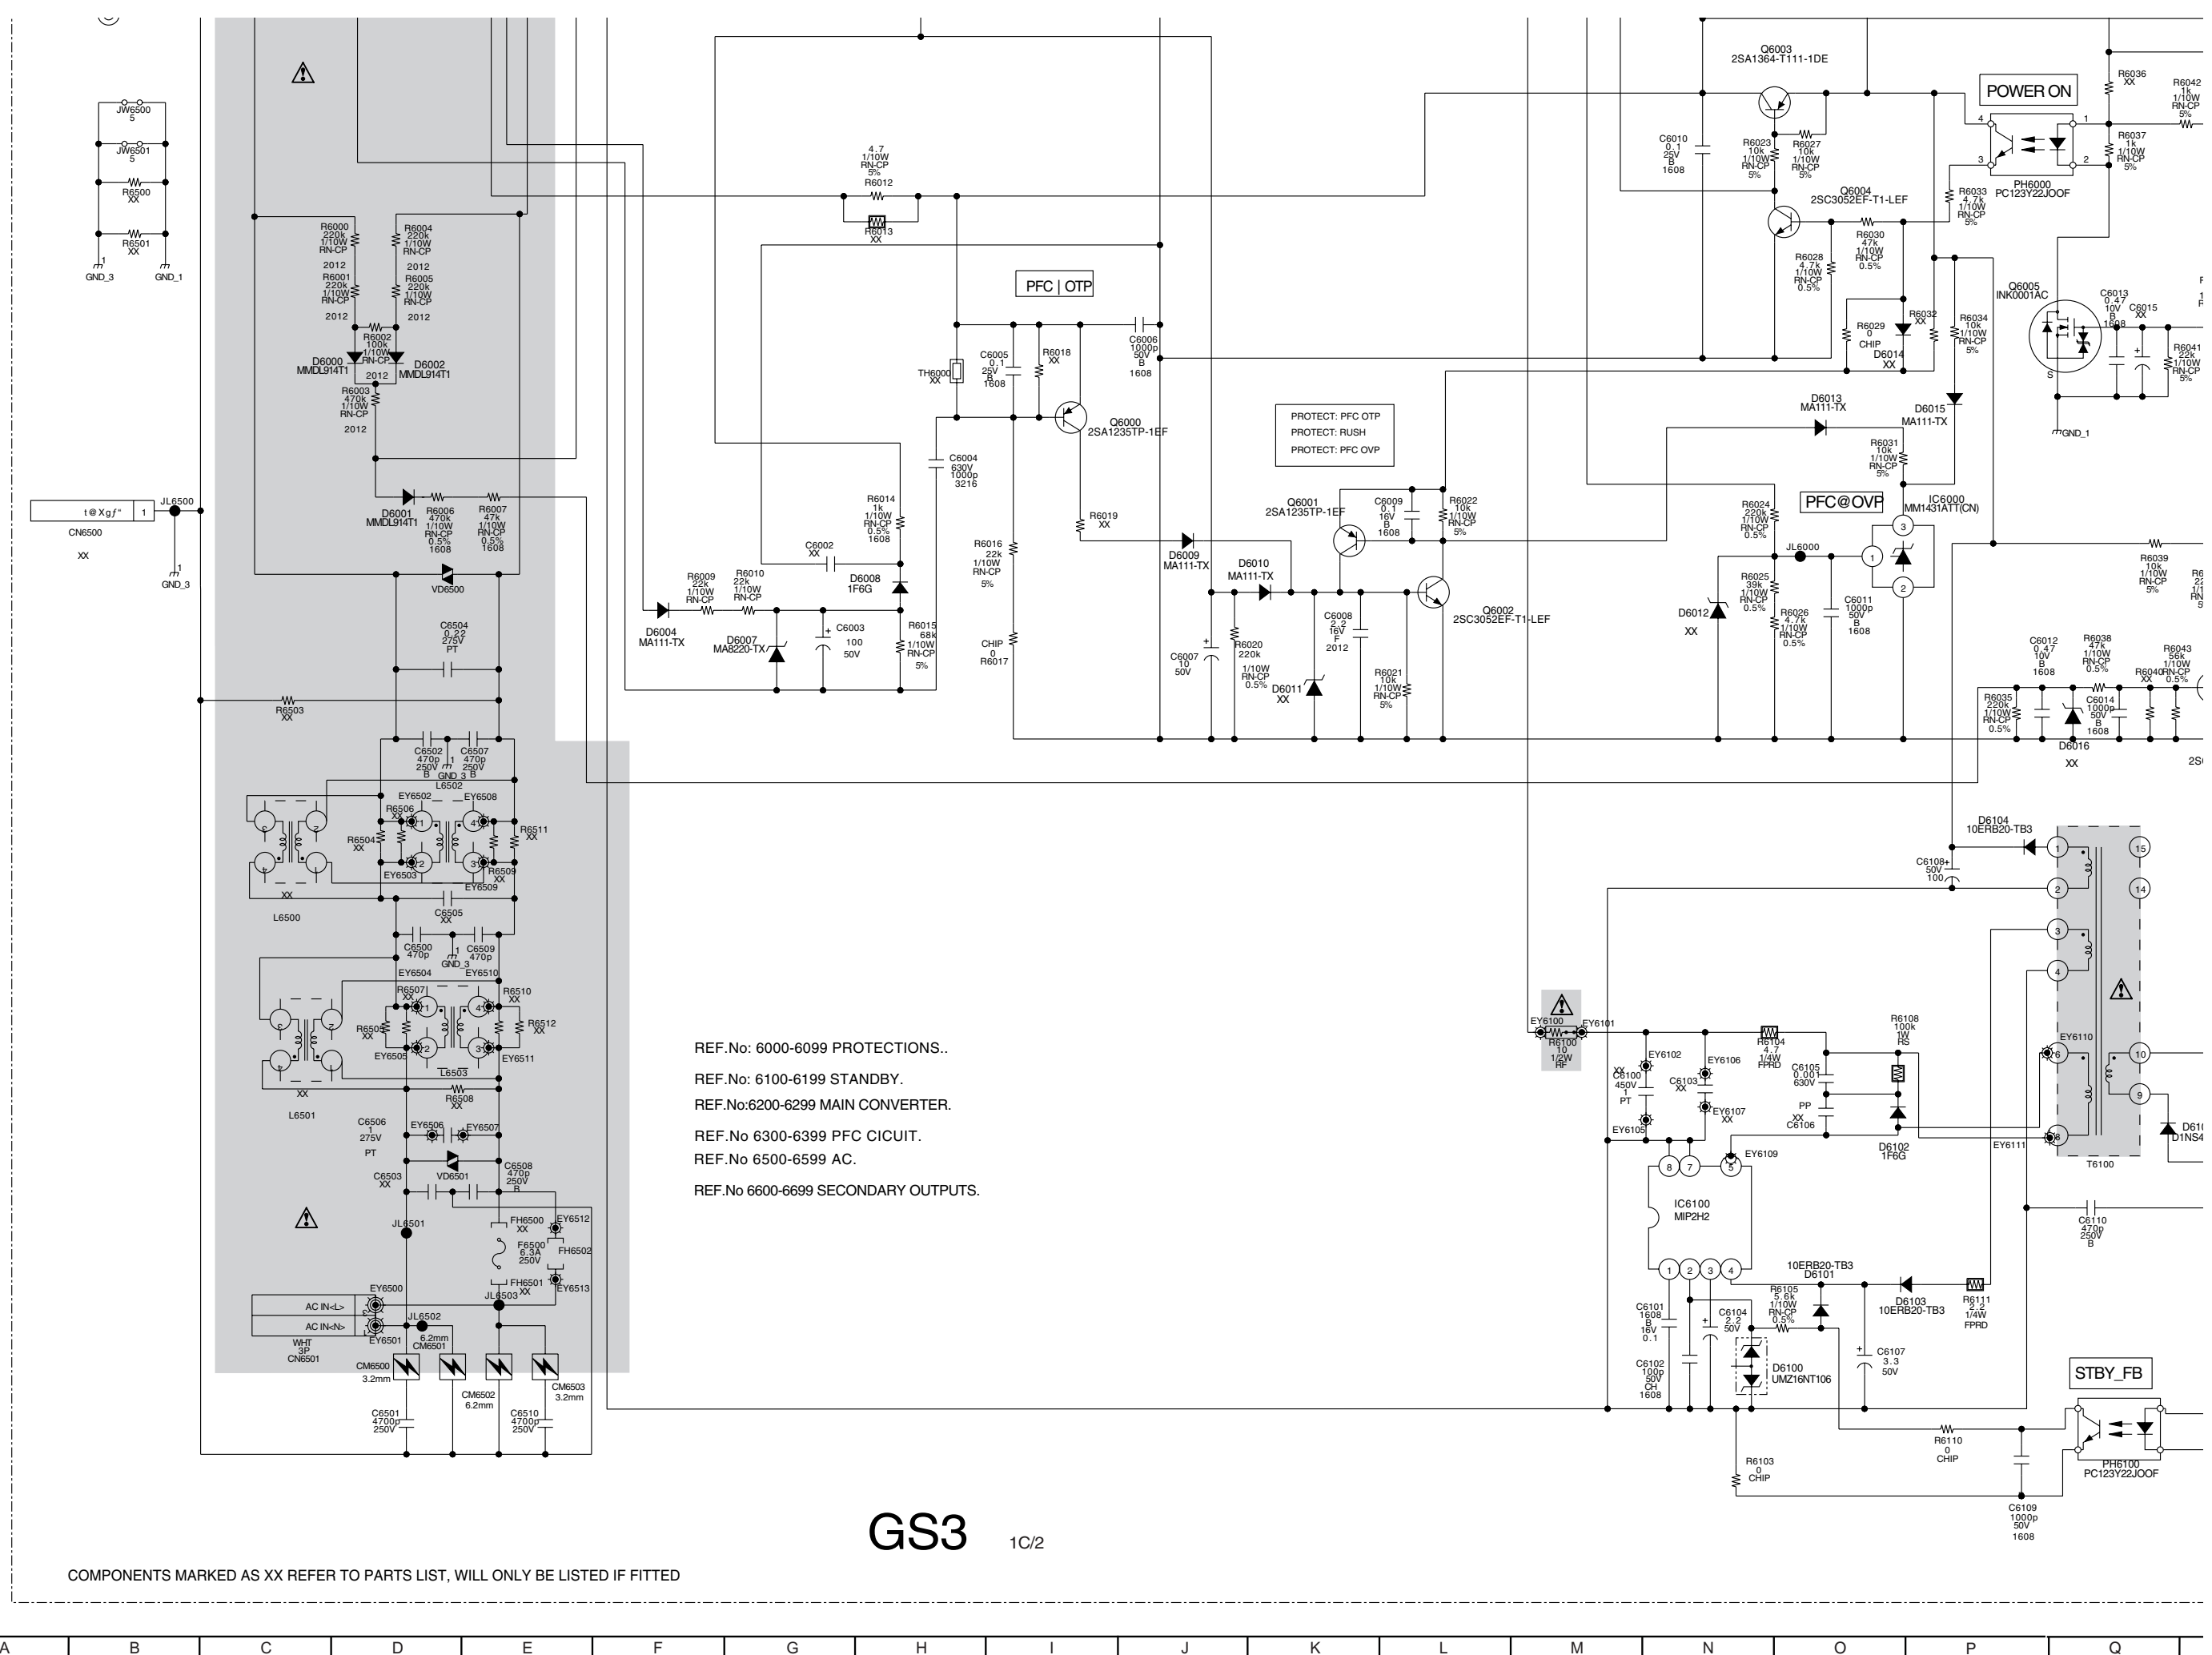


GS3 1C/2

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED




GS3-SE2


GS3 2/2

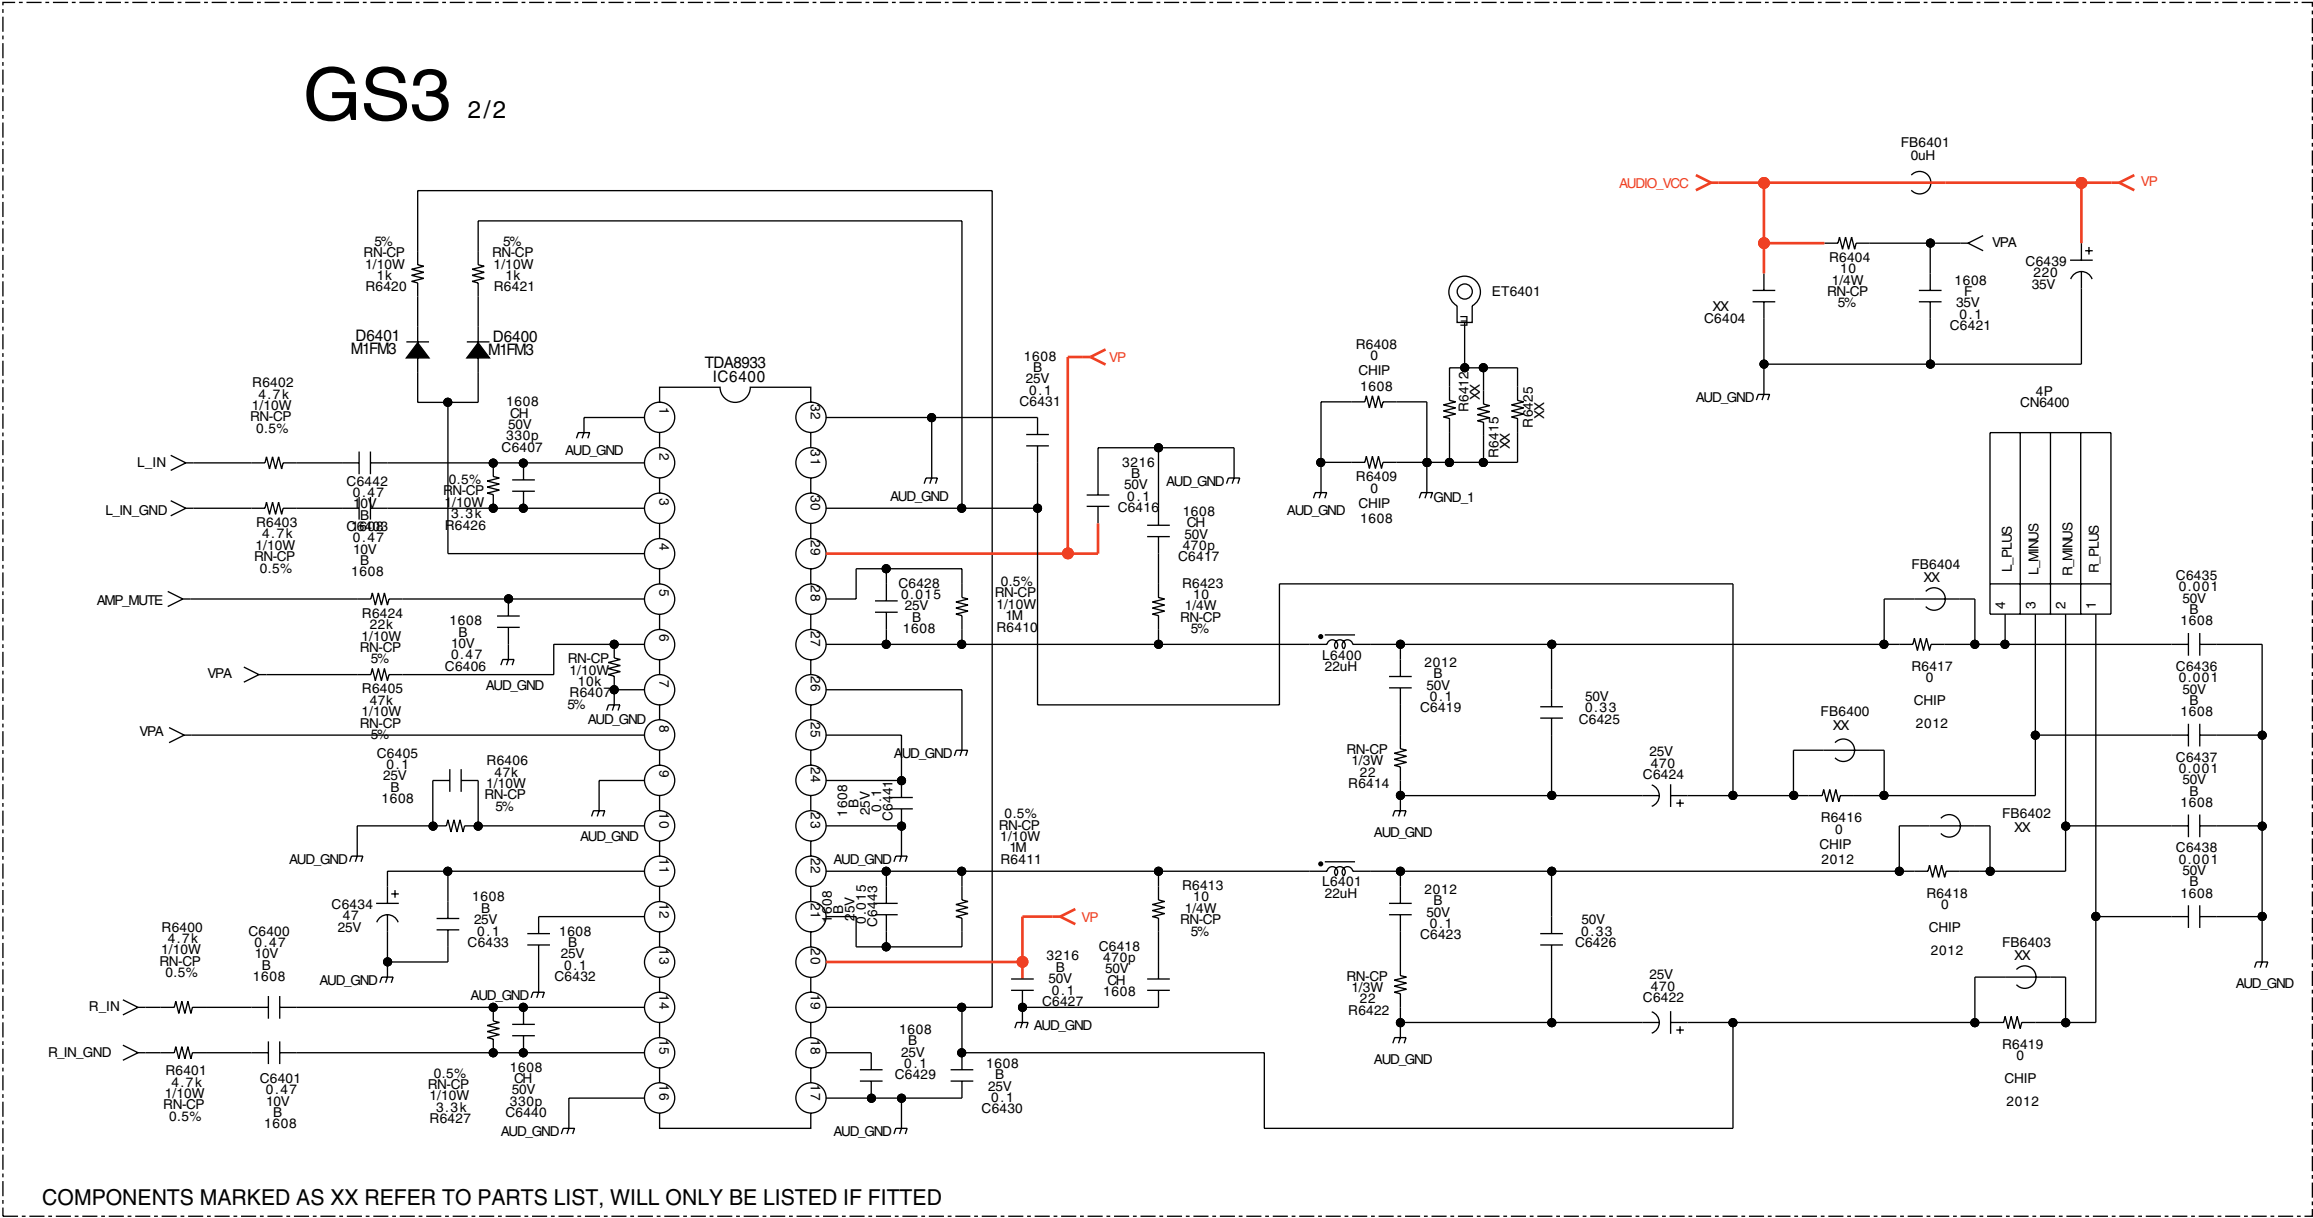





GS4 1B/2

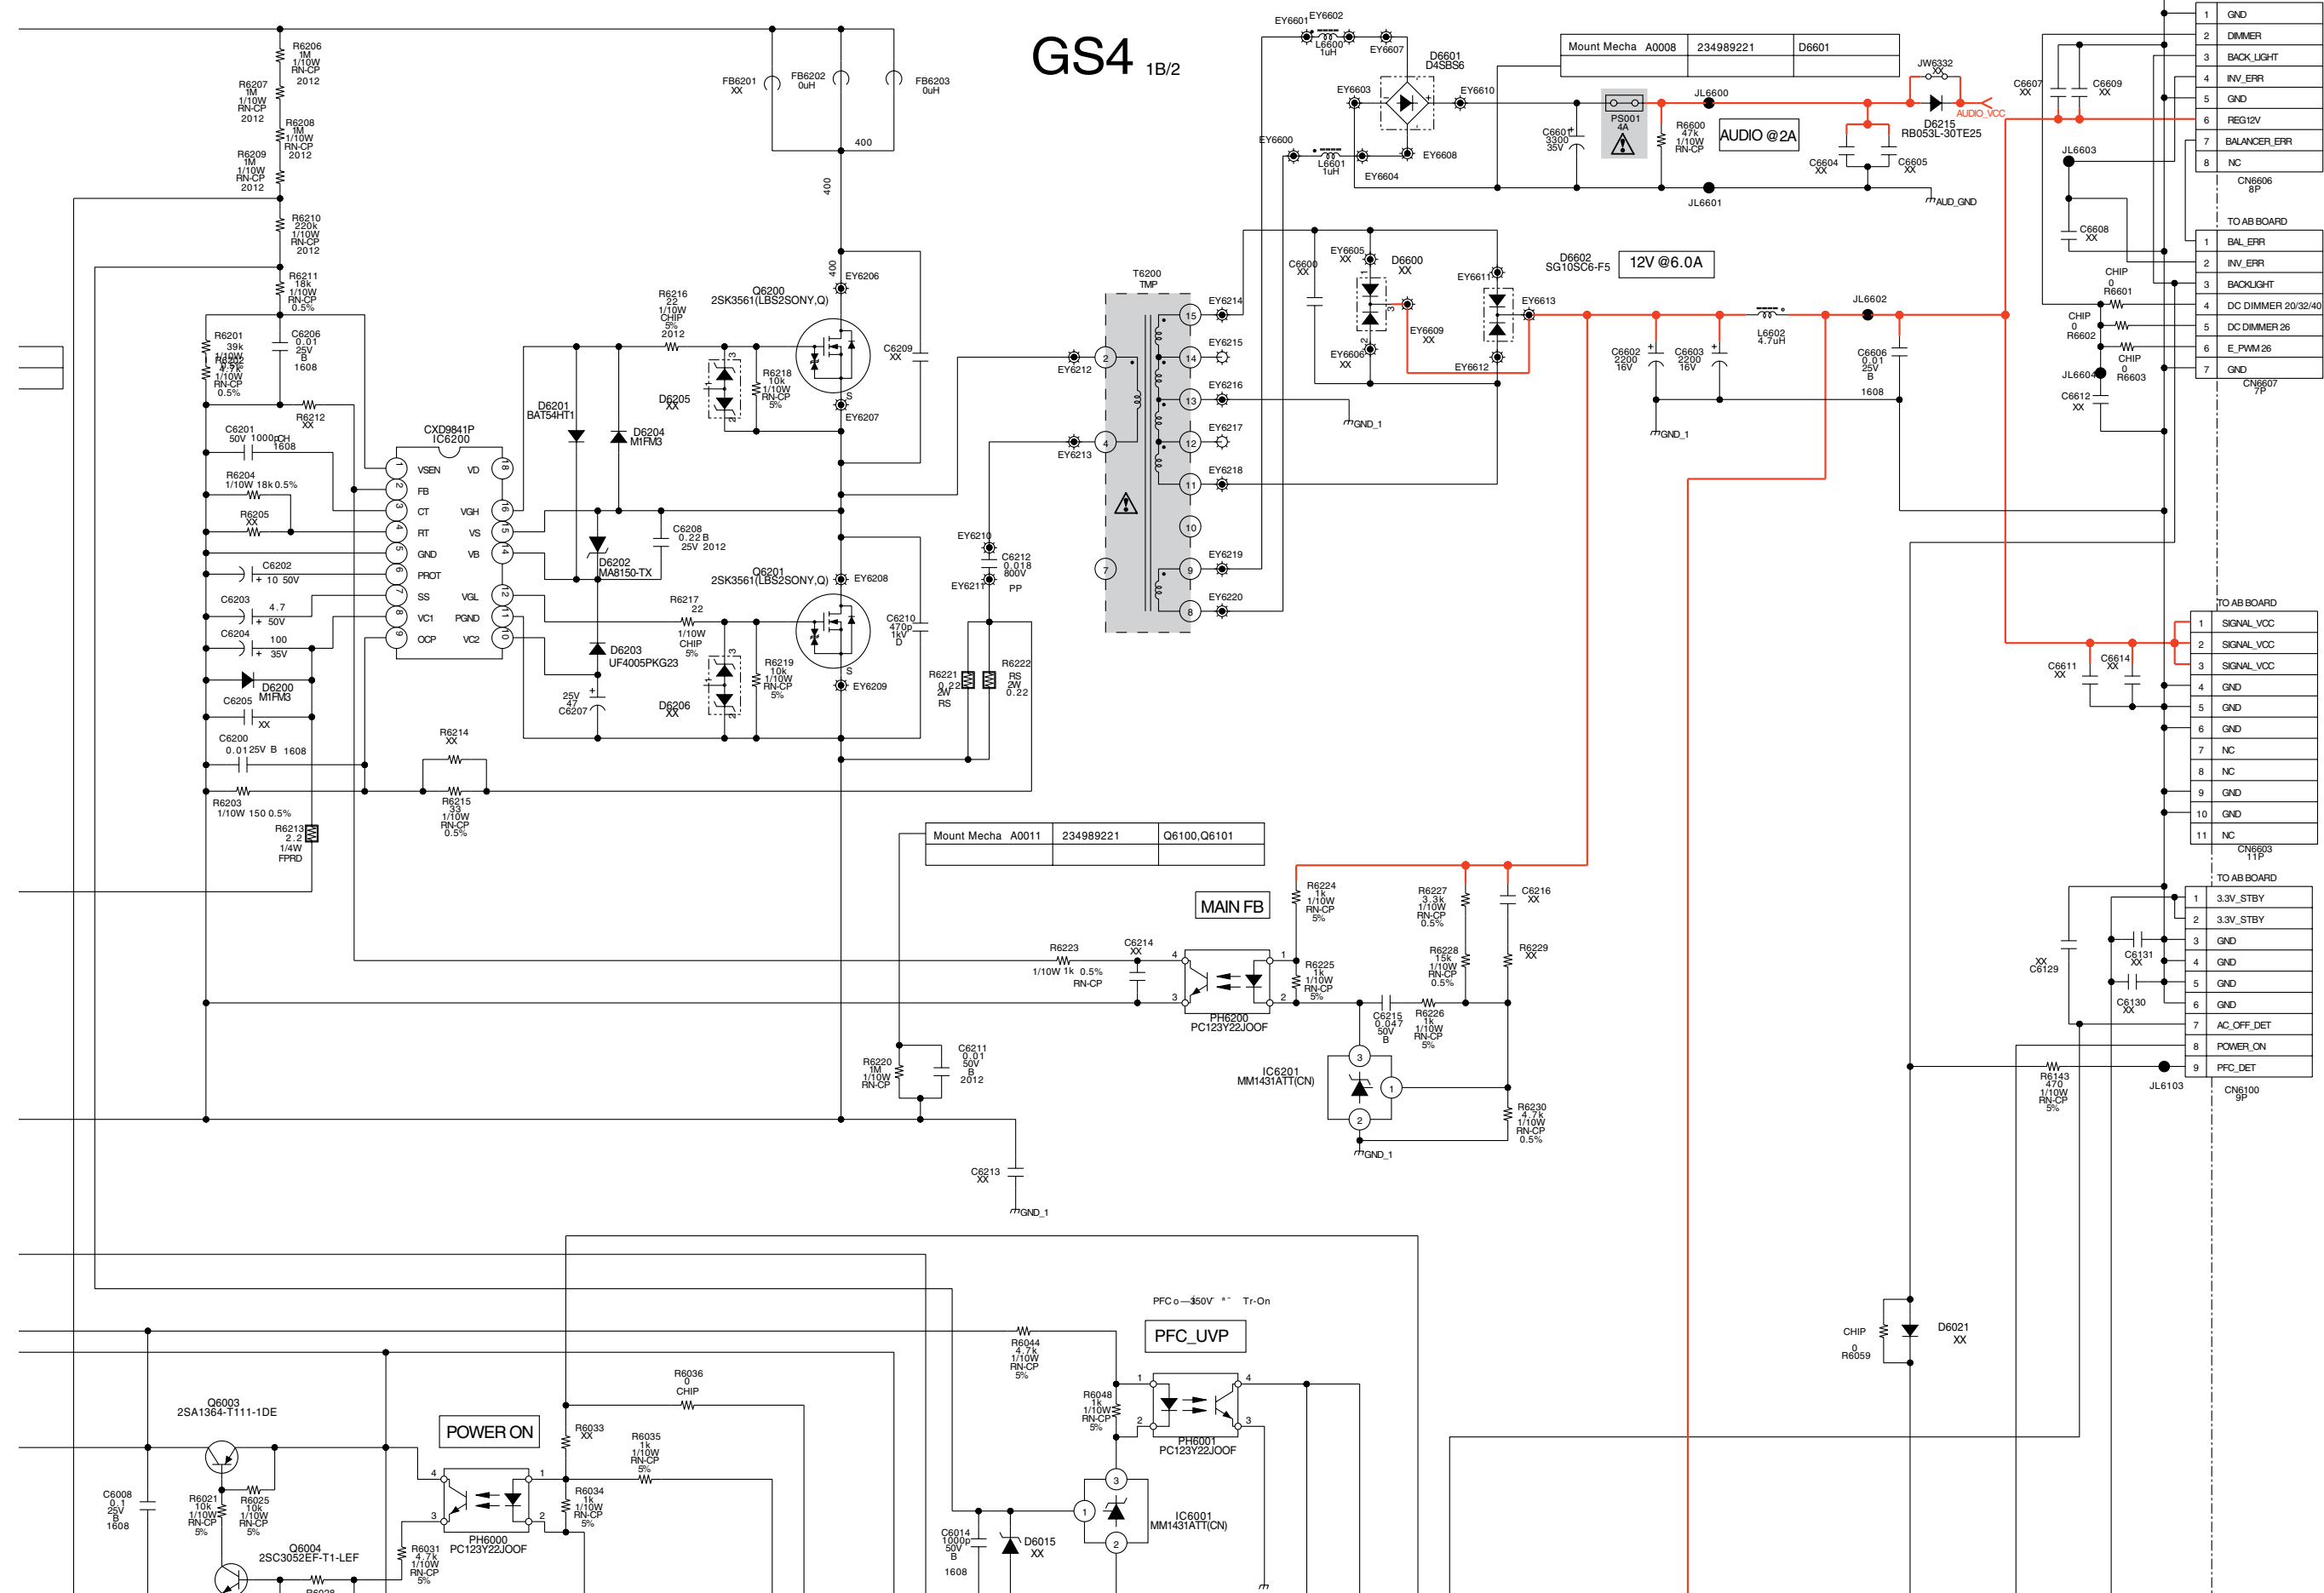

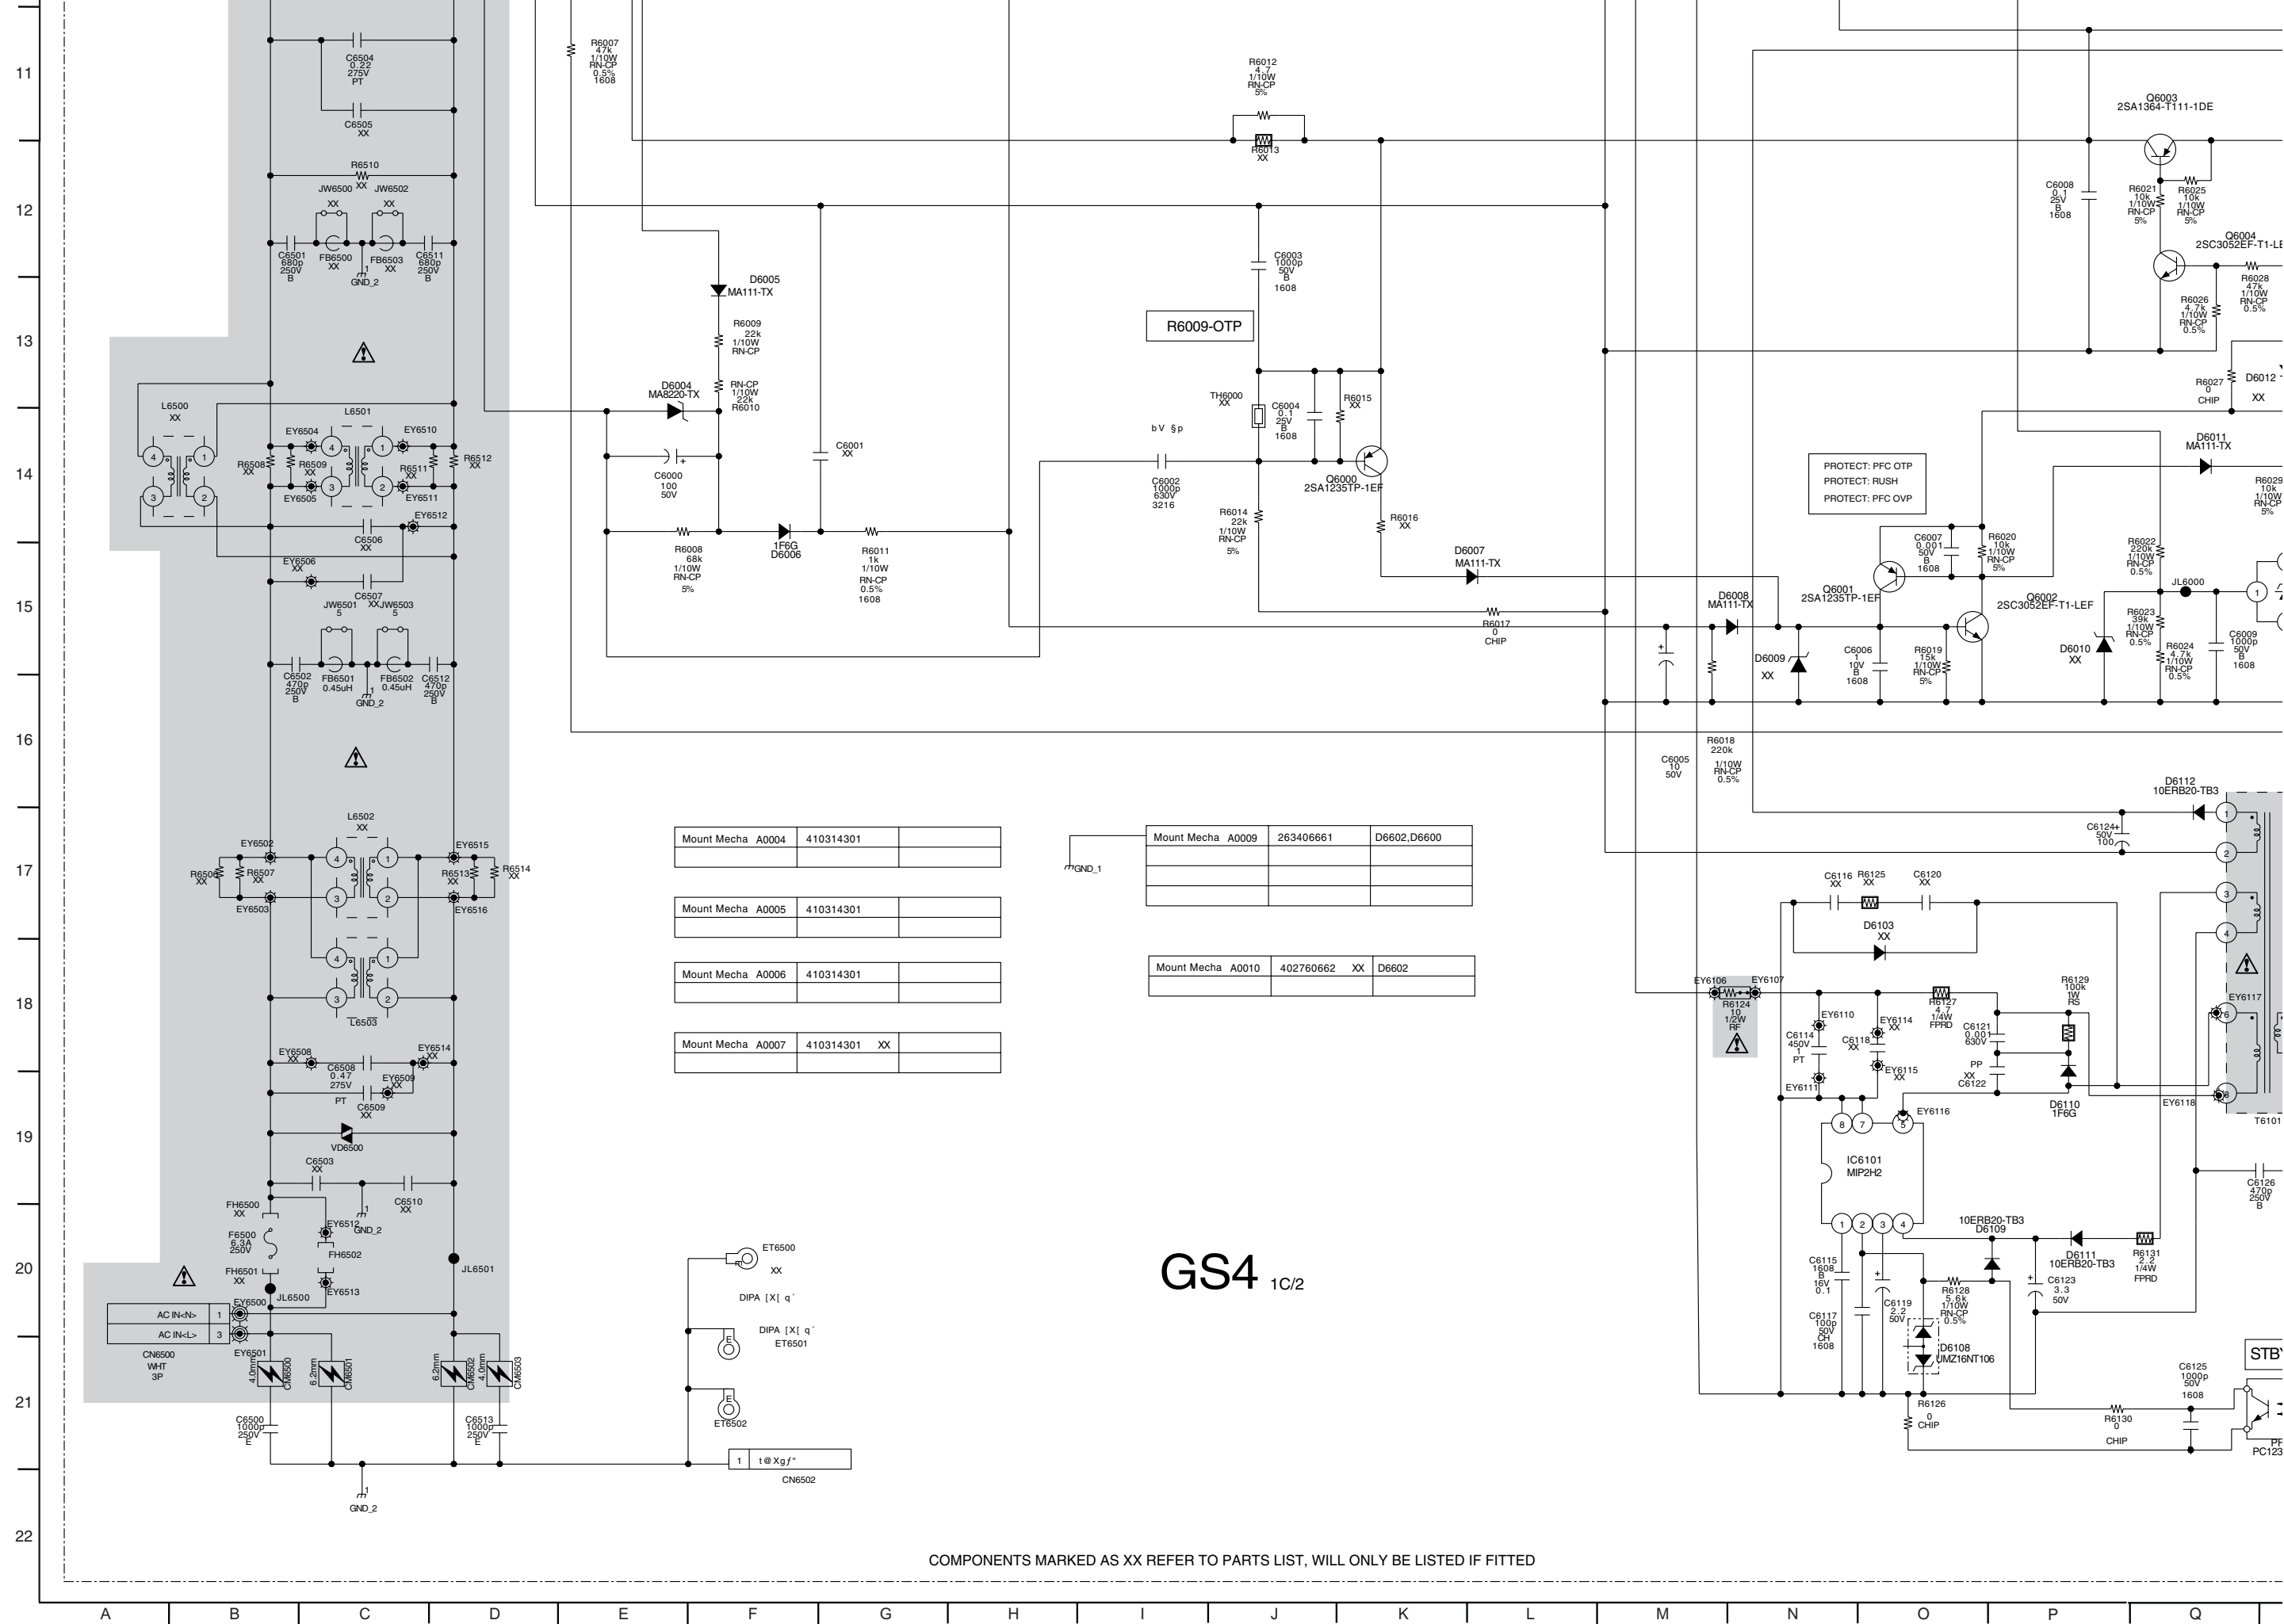






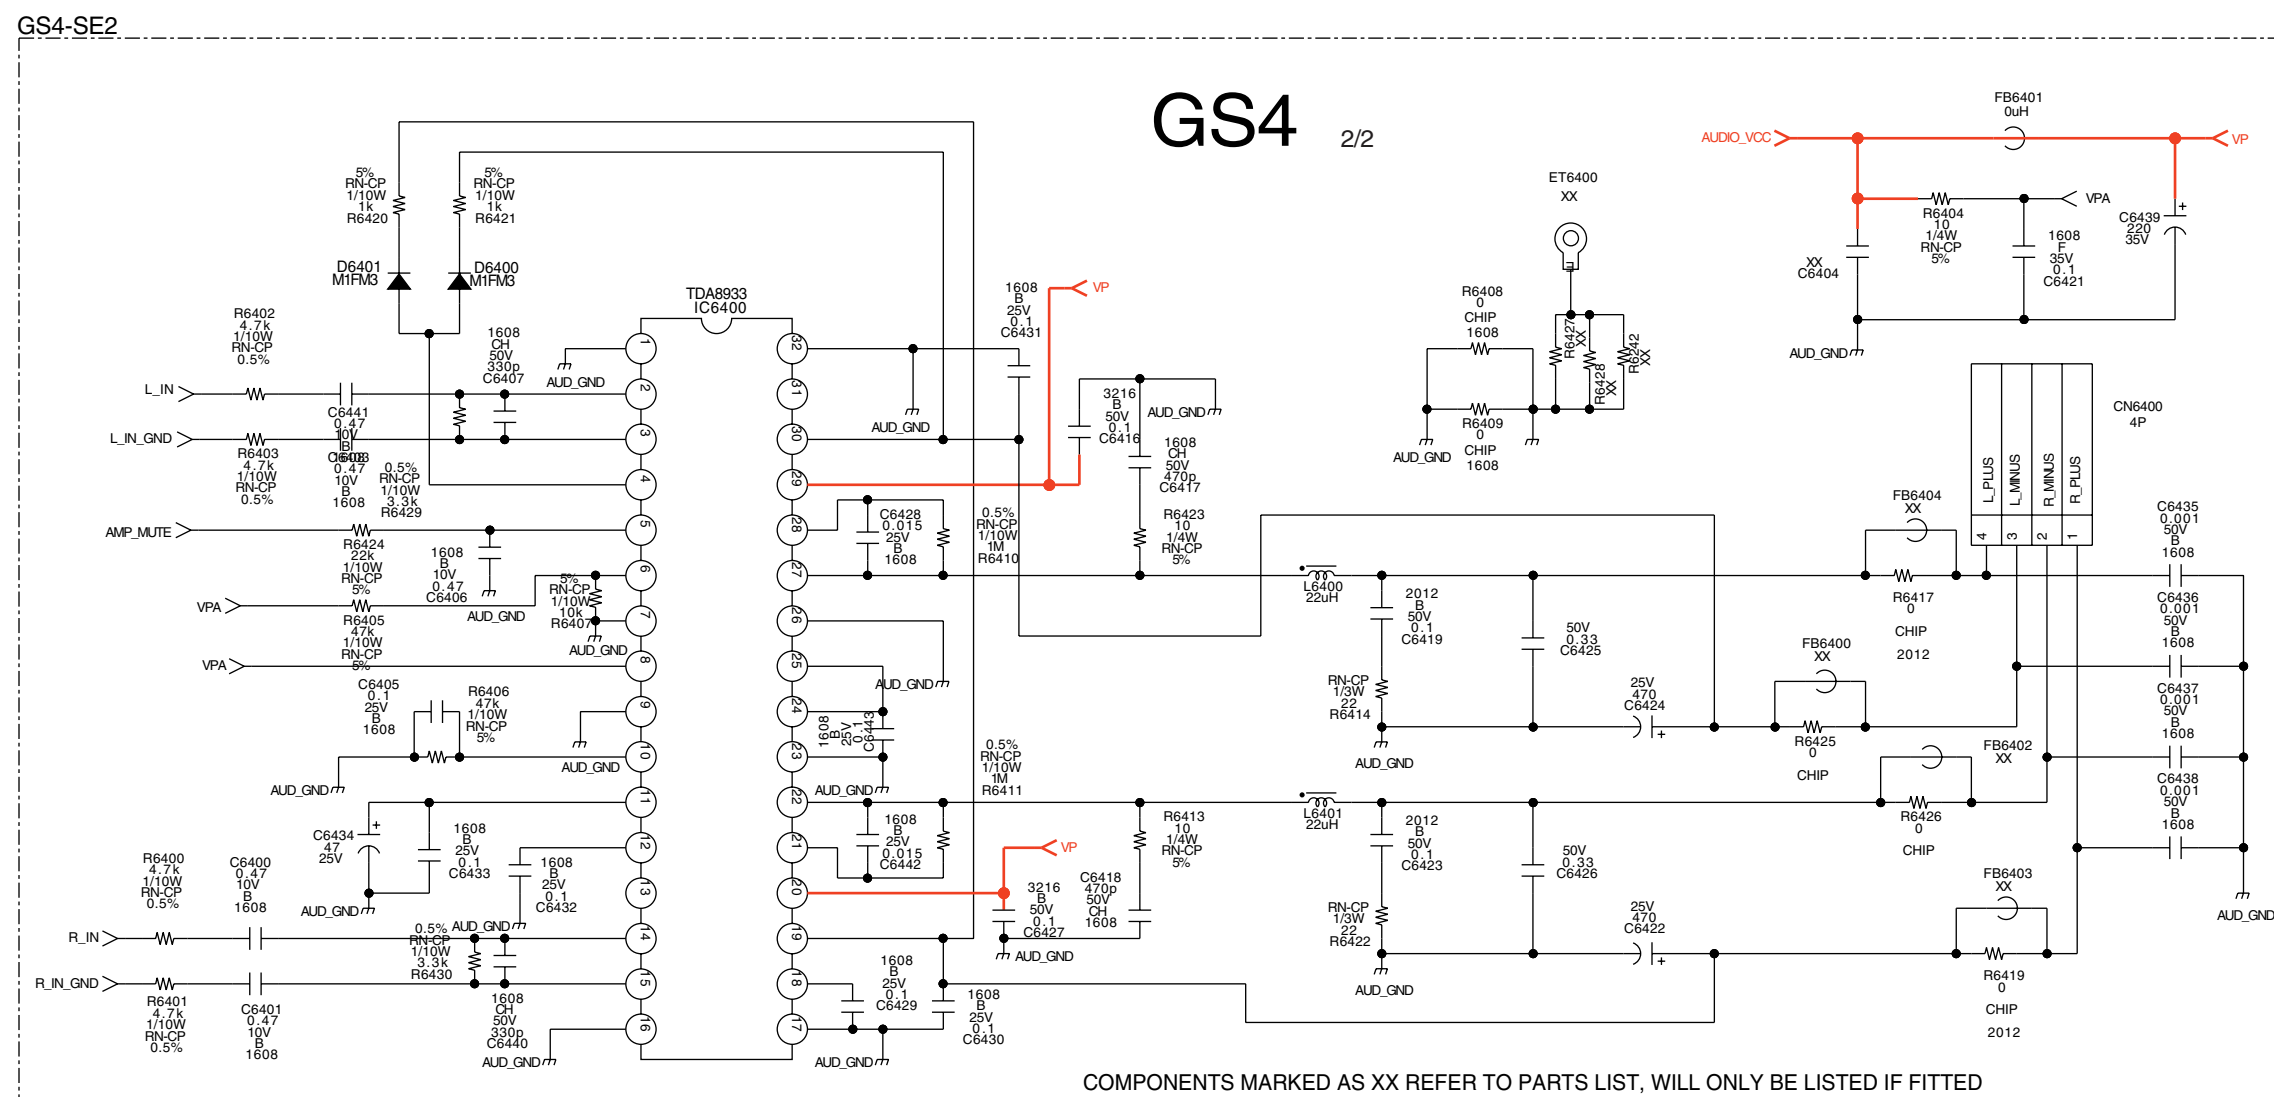


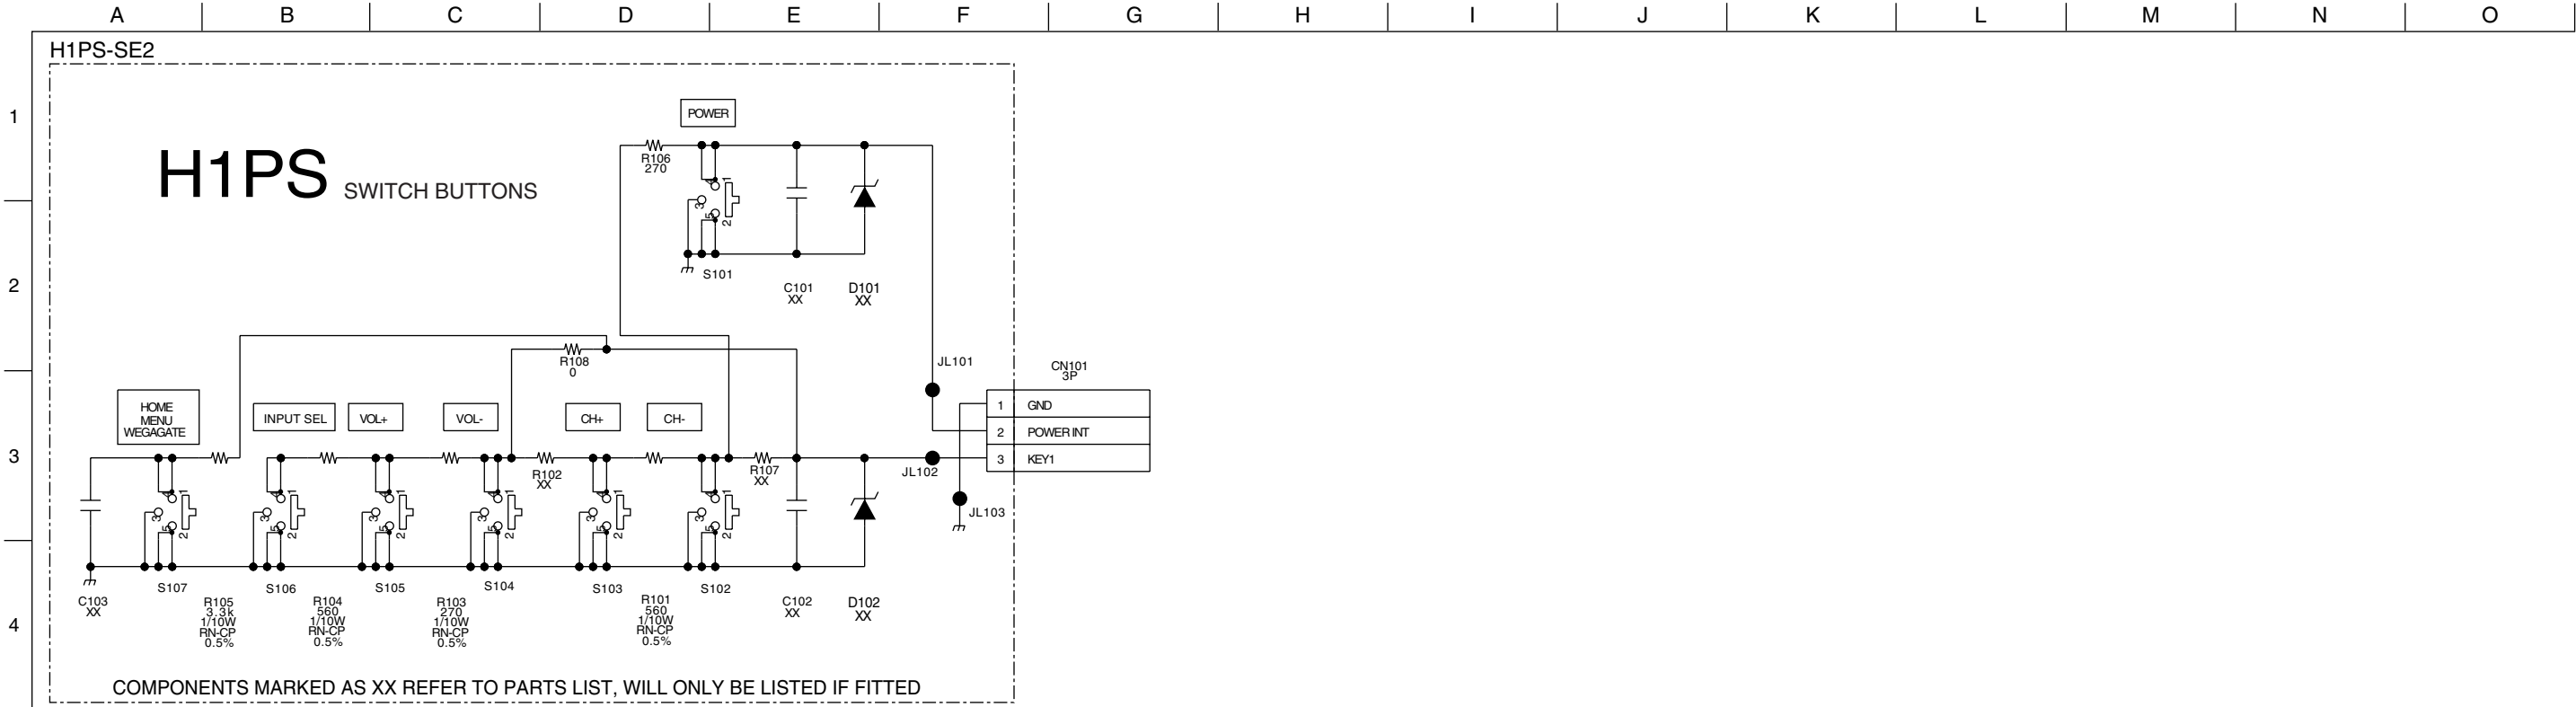



~ H1PS Board Schematic Diagram [Switch Buttons] ~

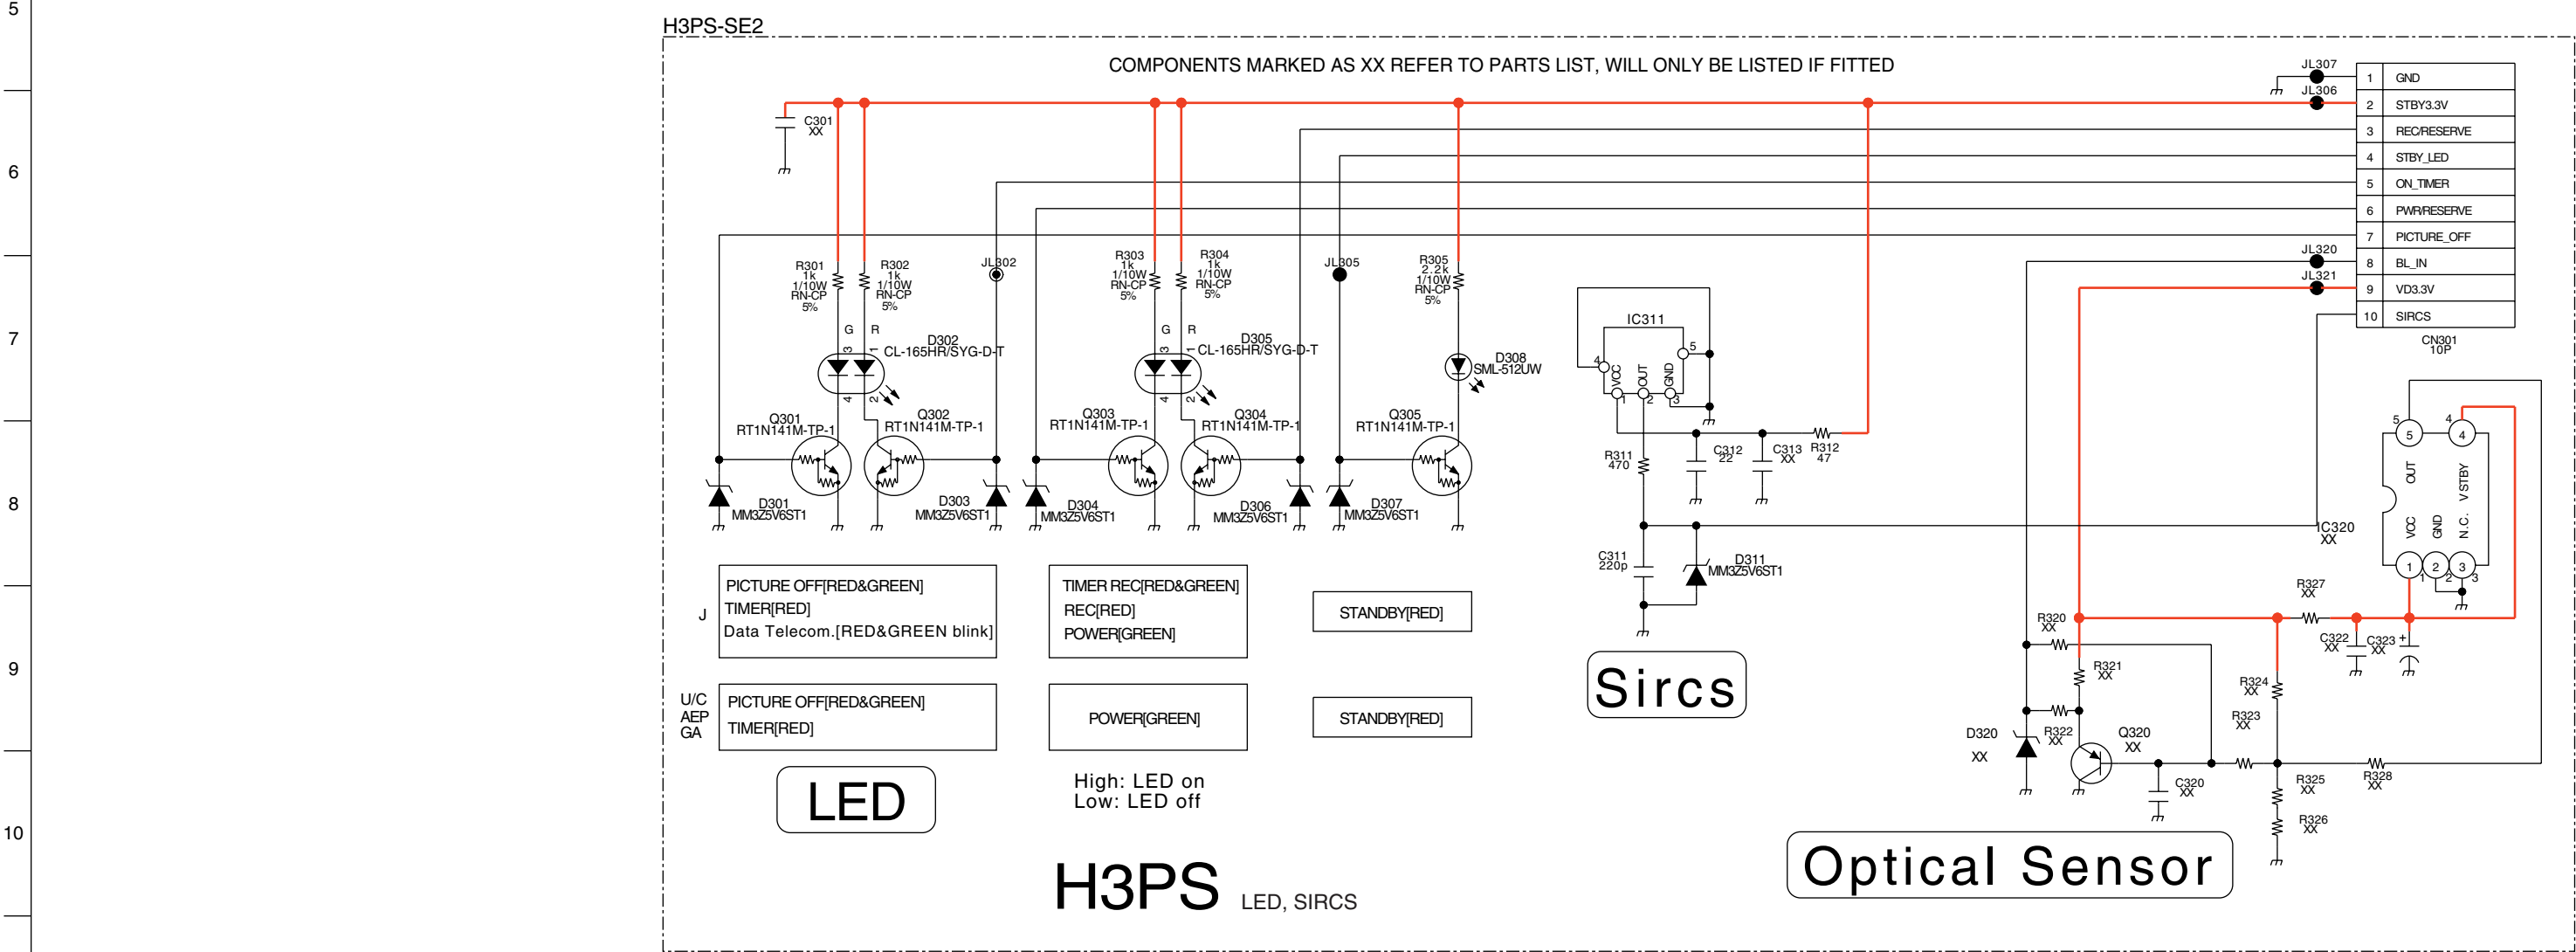



~ H3PS Board Schematic Diagram [LED, Sircs] ~

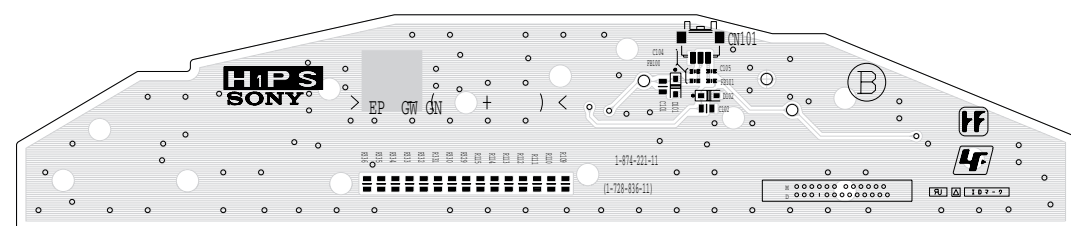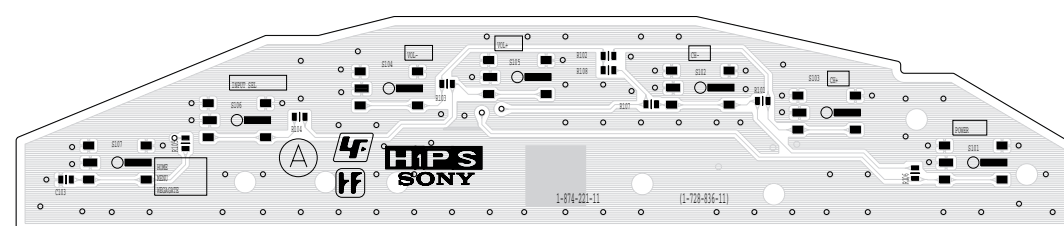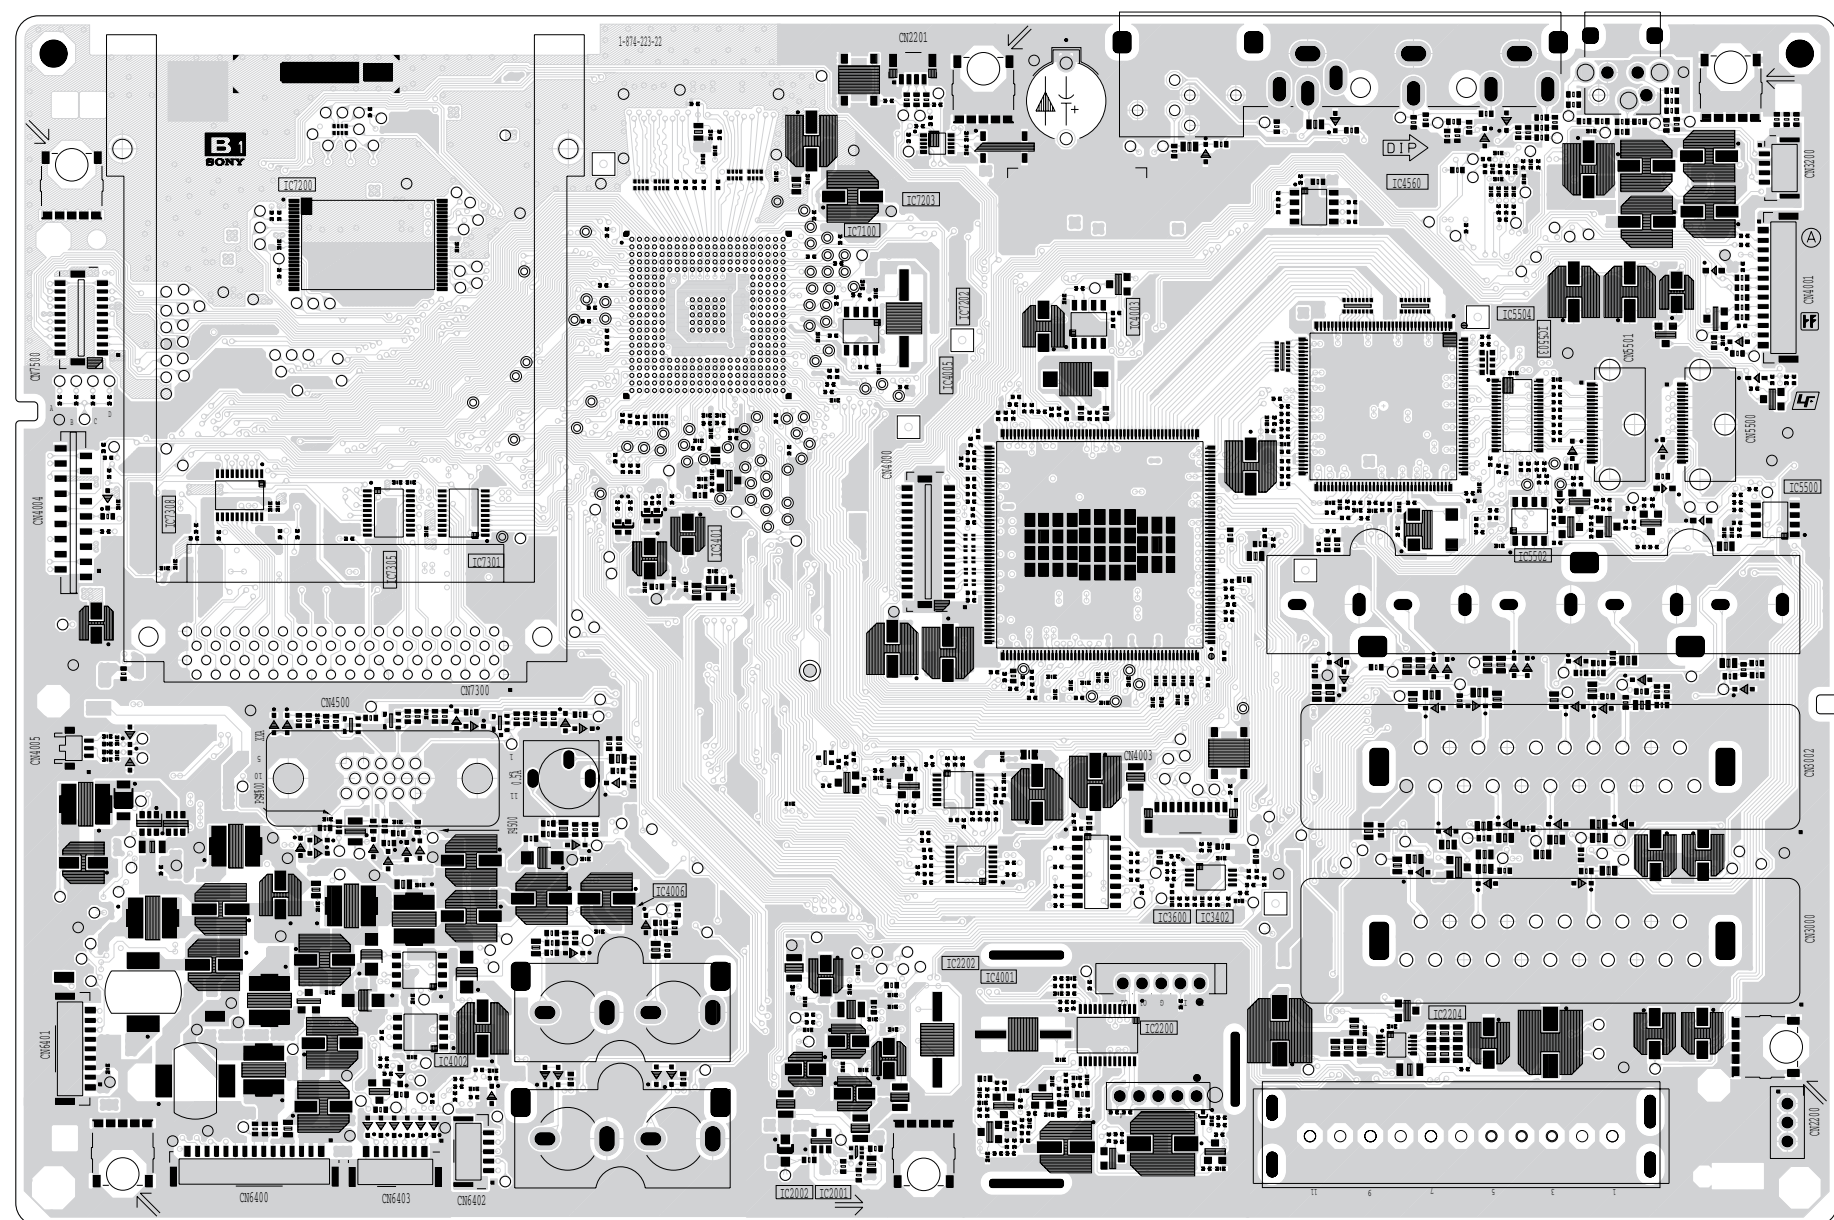

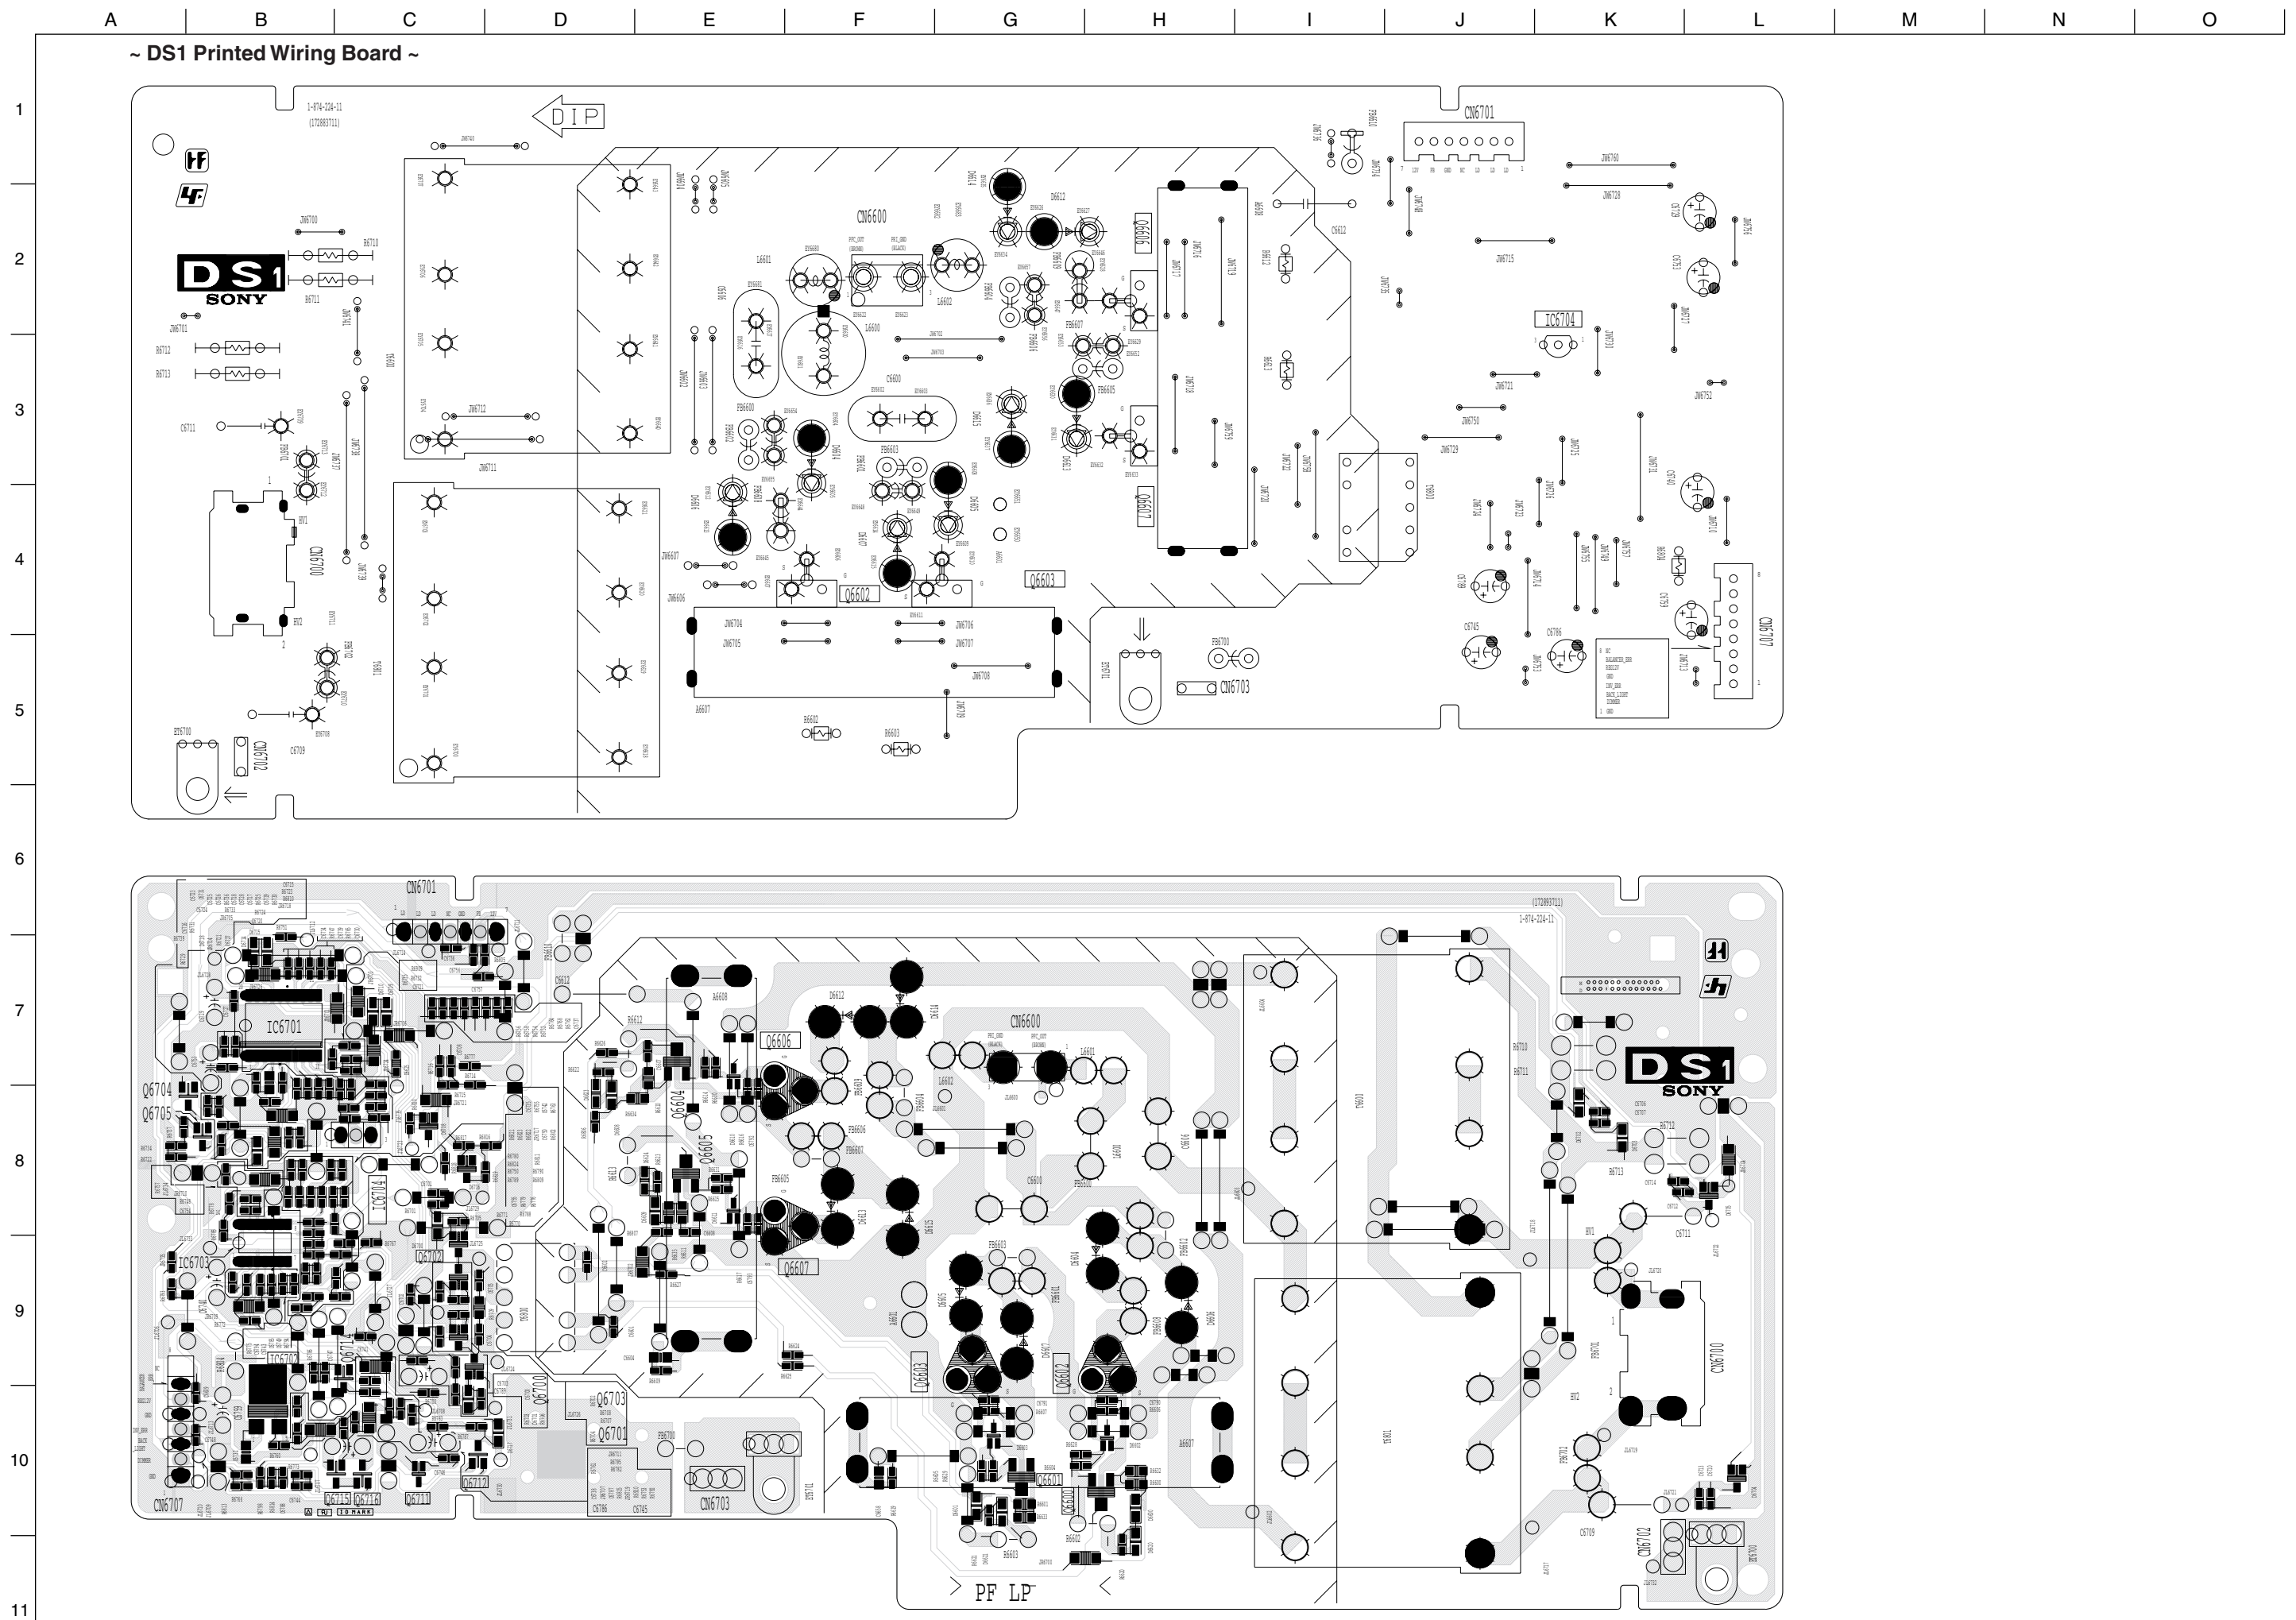

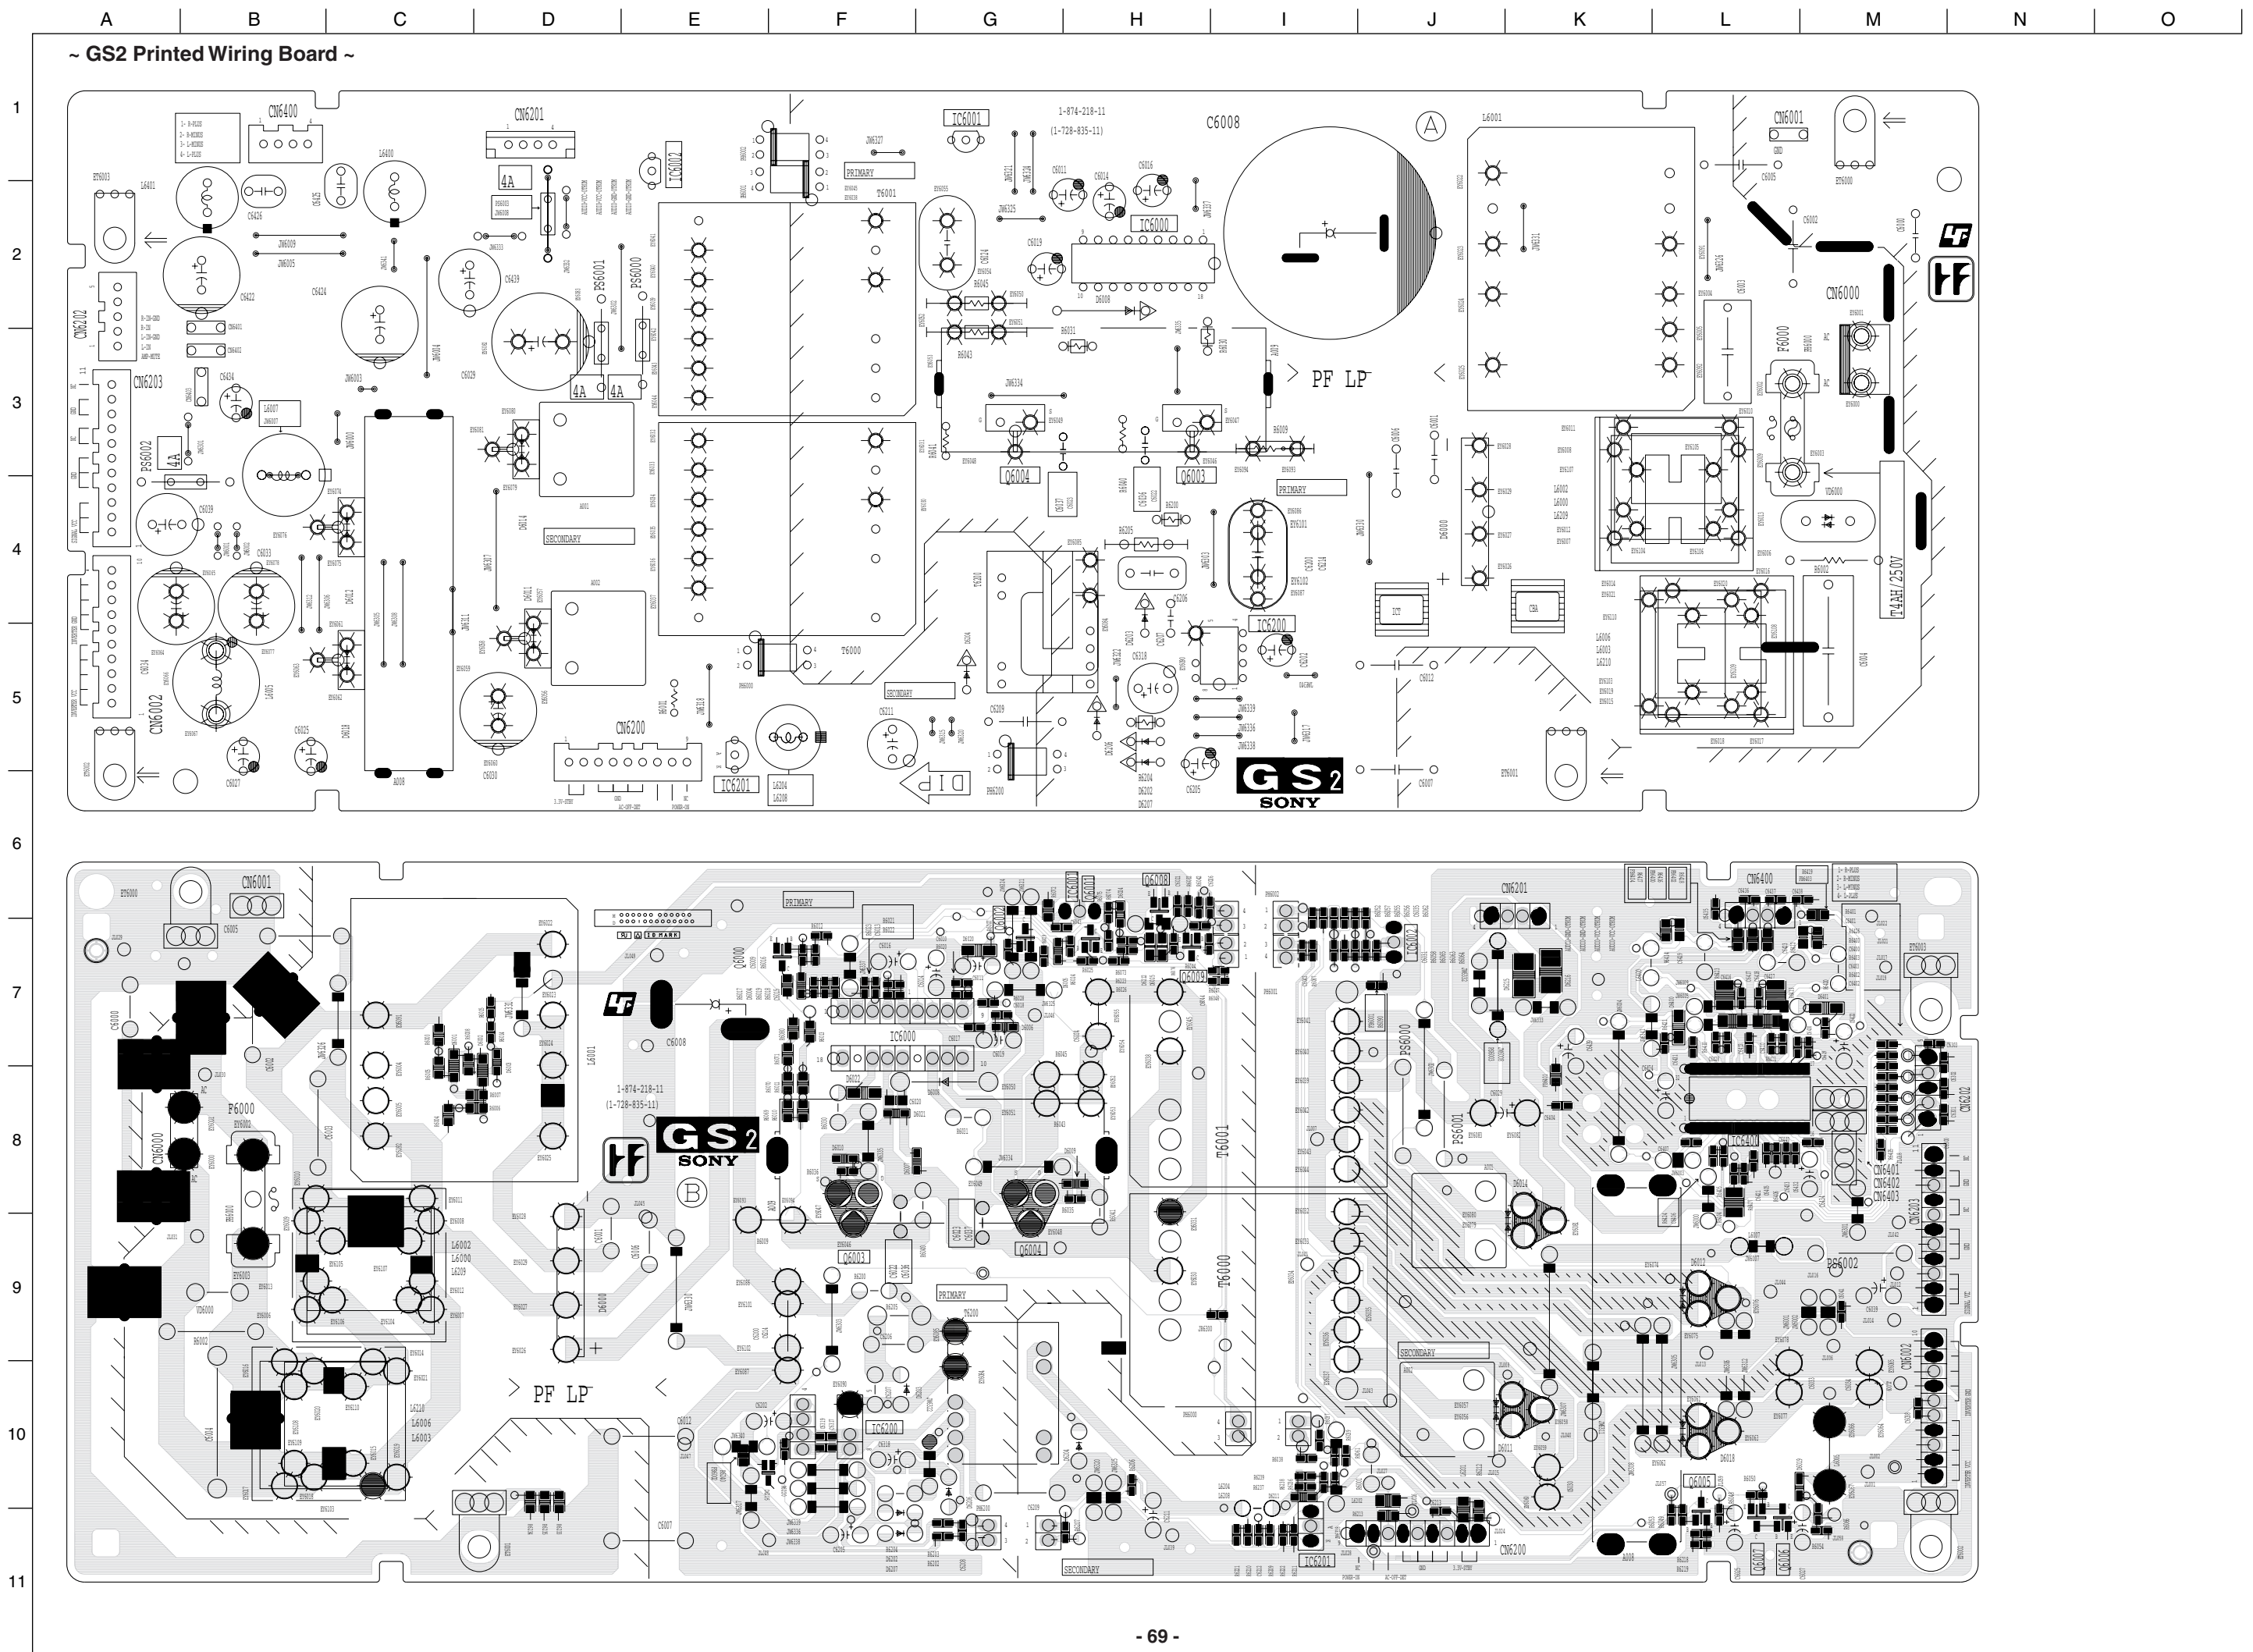

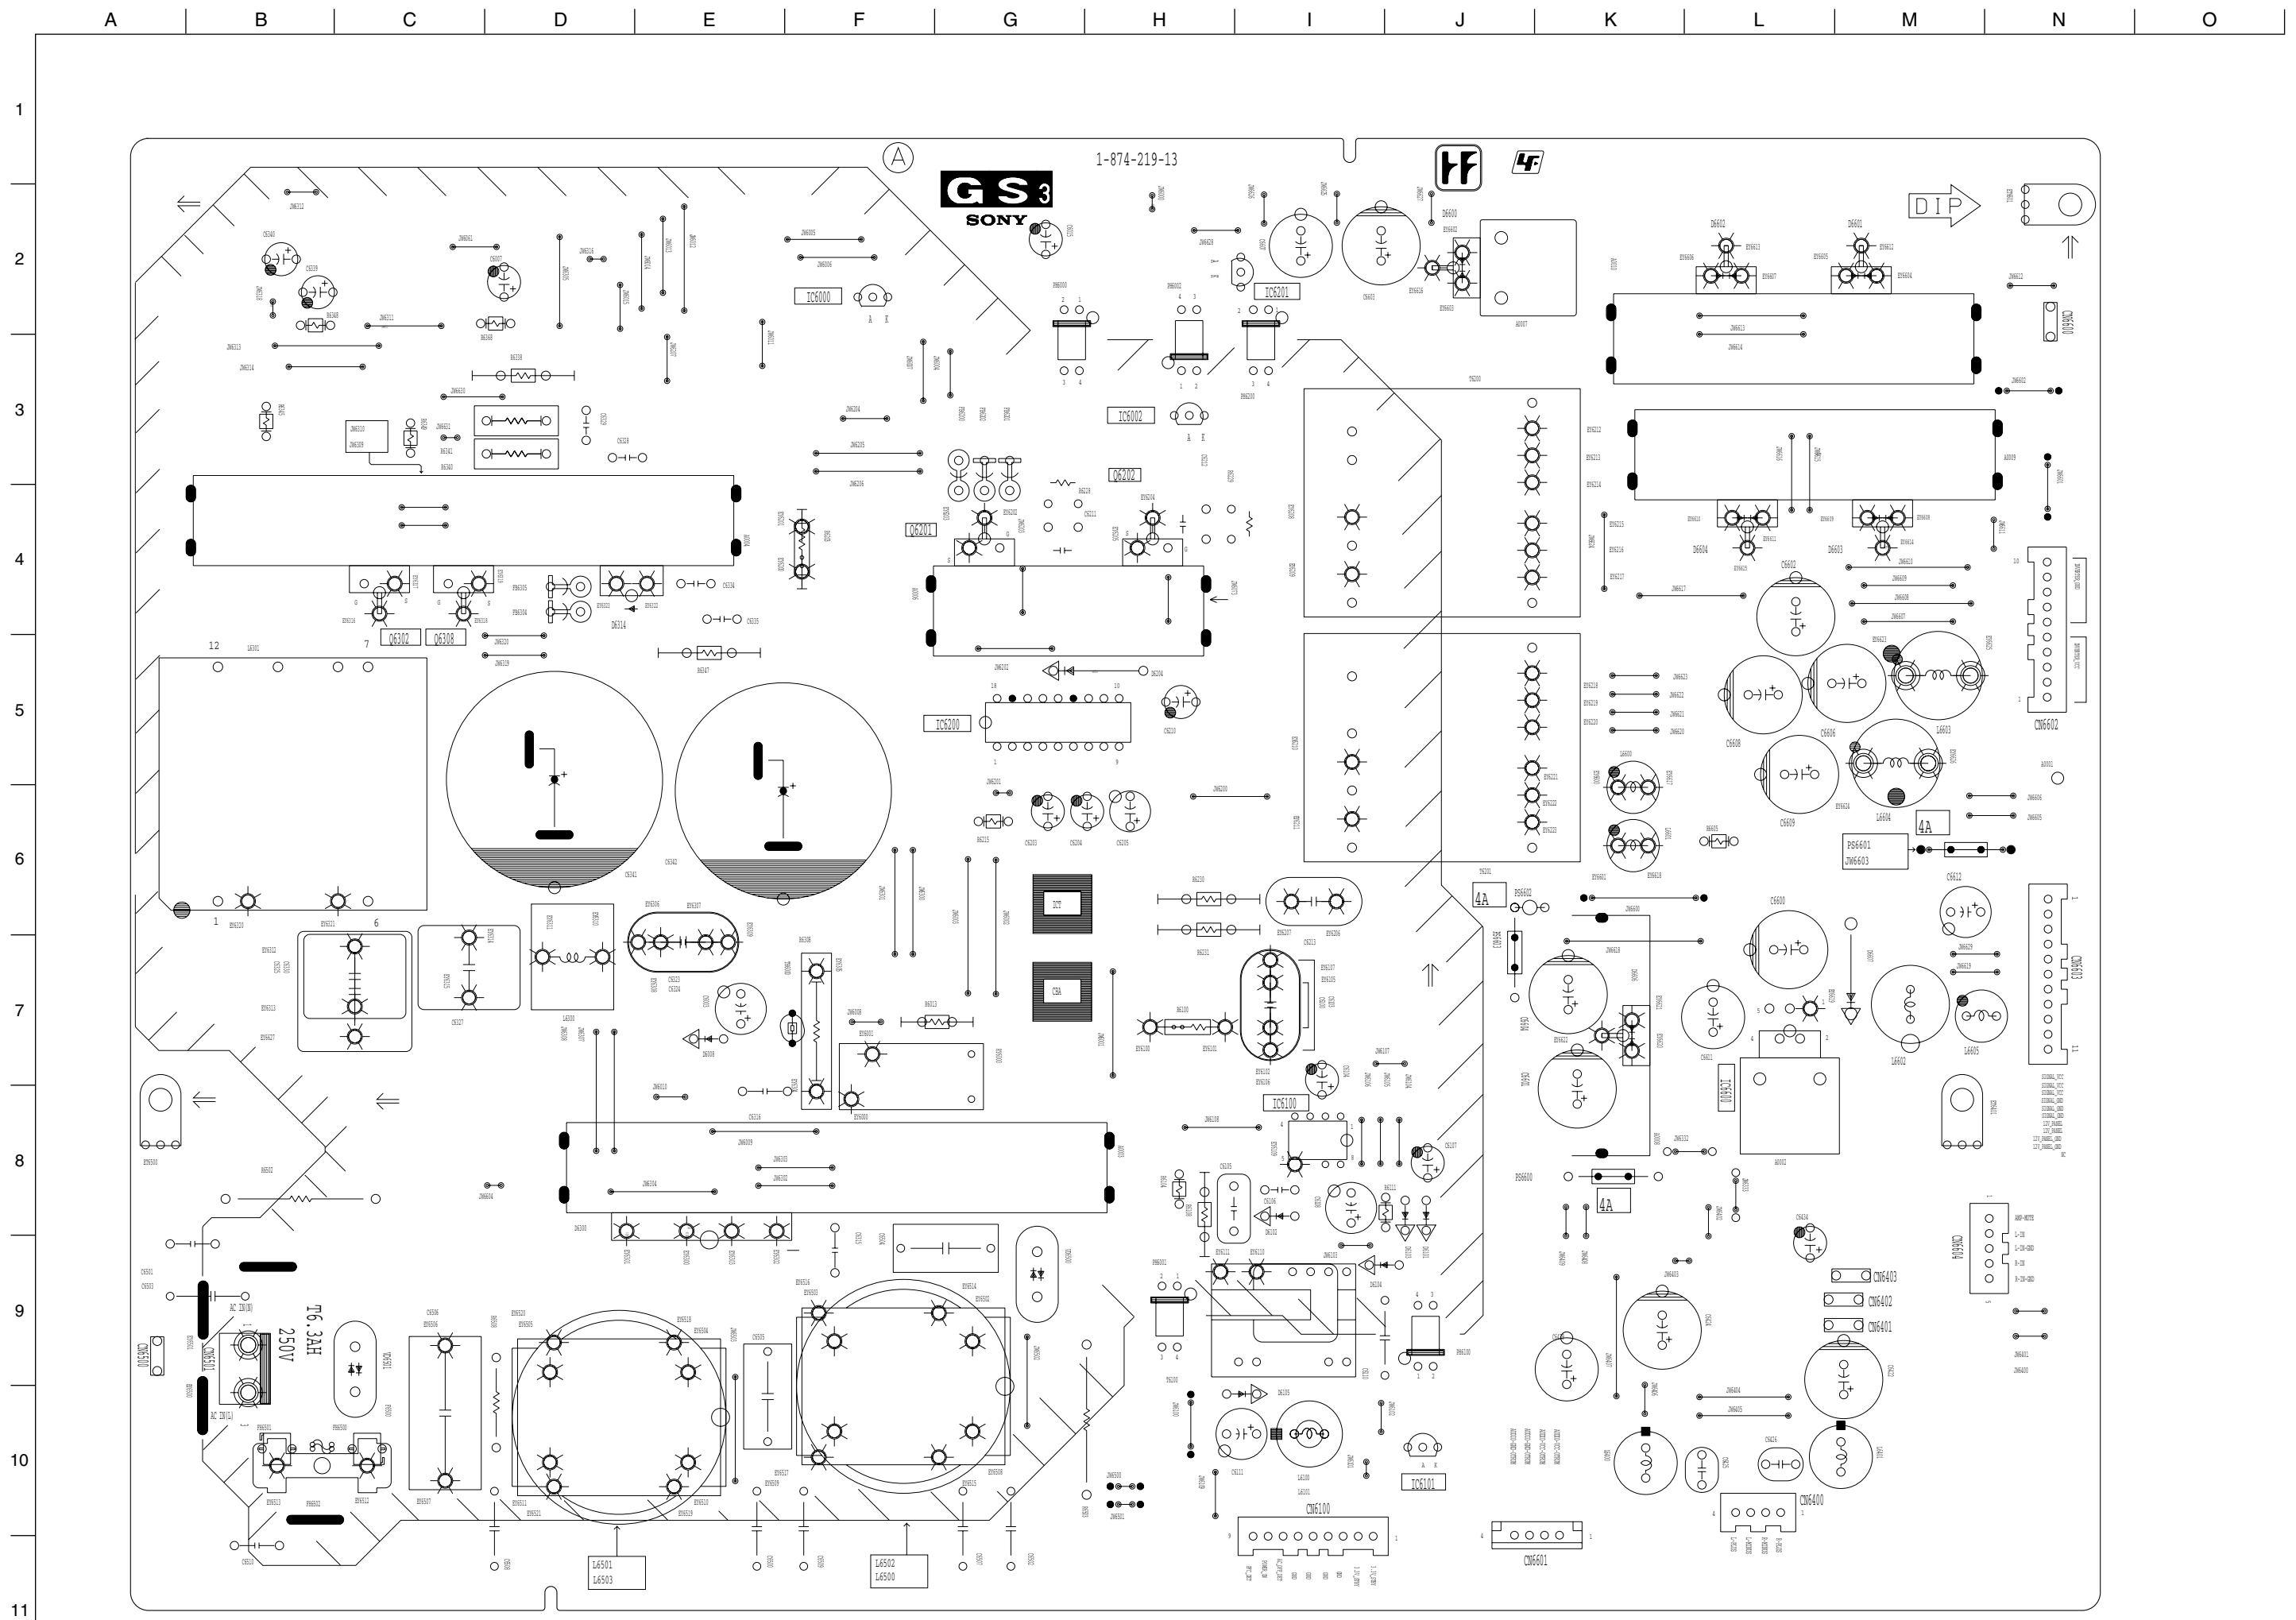

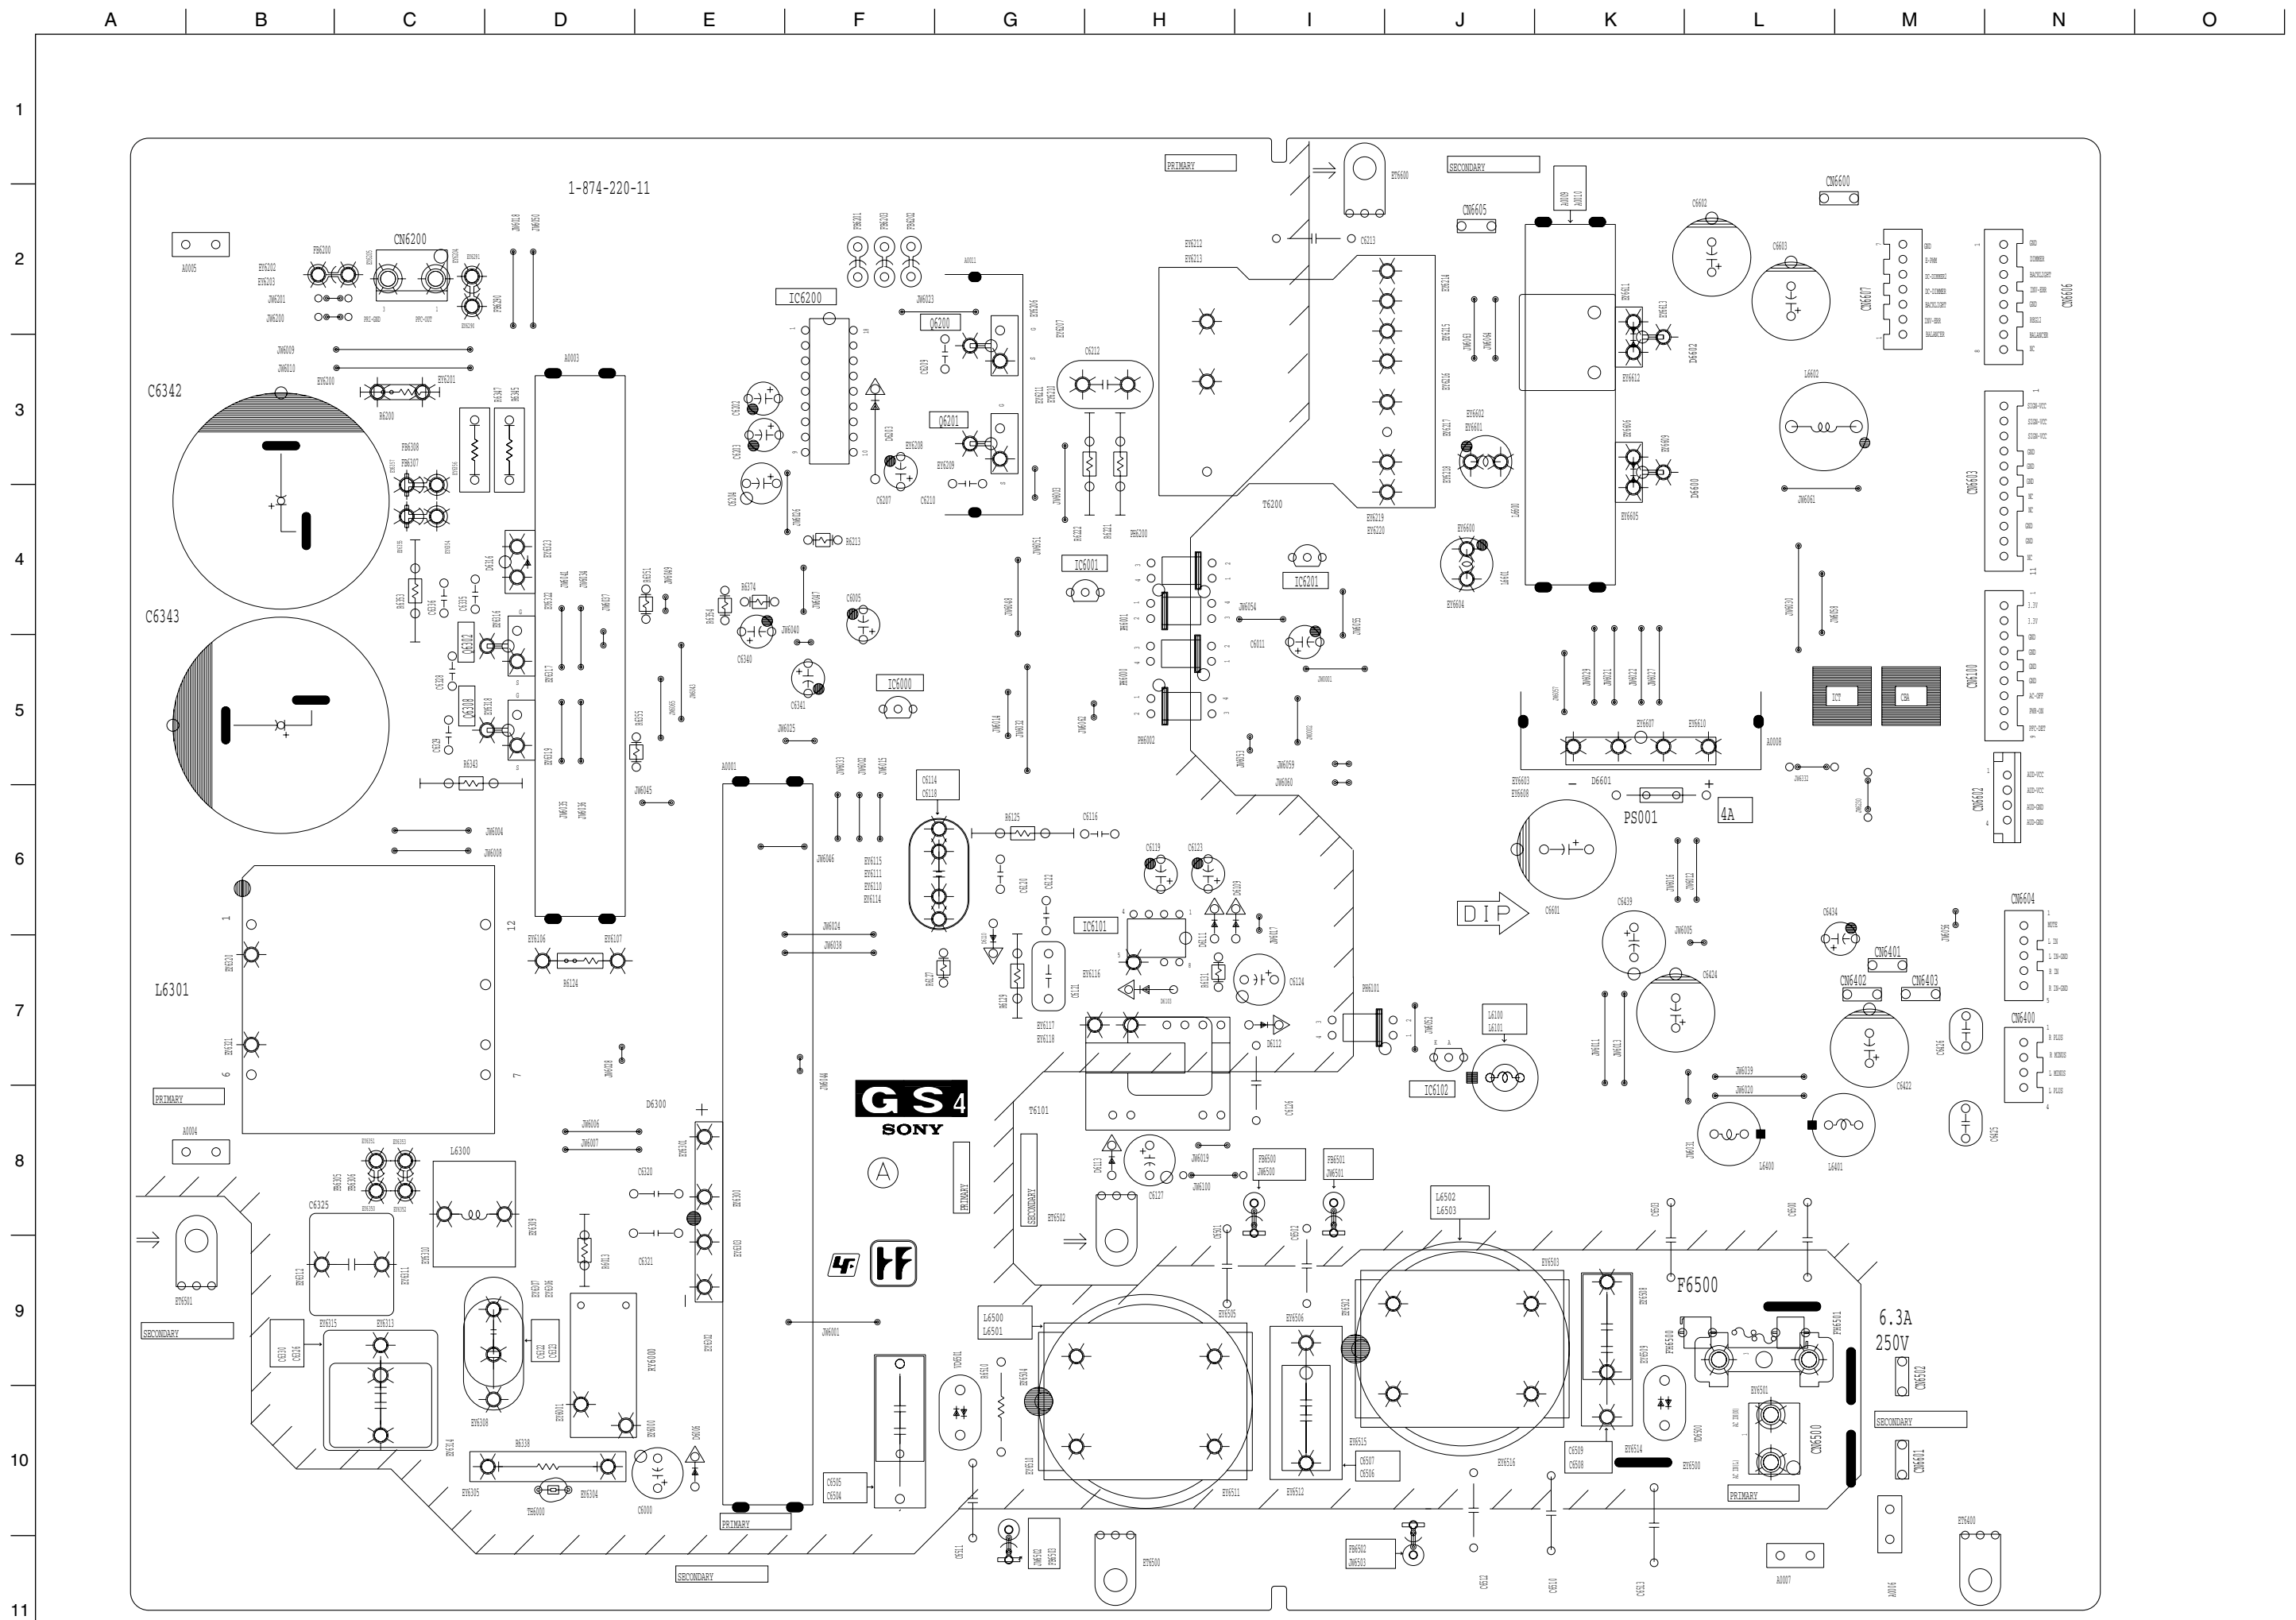

SECTION 5 EXPLODED VIEWS


NOTE :

- Non-serviceable items with no part number and no description are not stocked because they are not required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

5-1. CHASSIS (26 & 32 Inches)

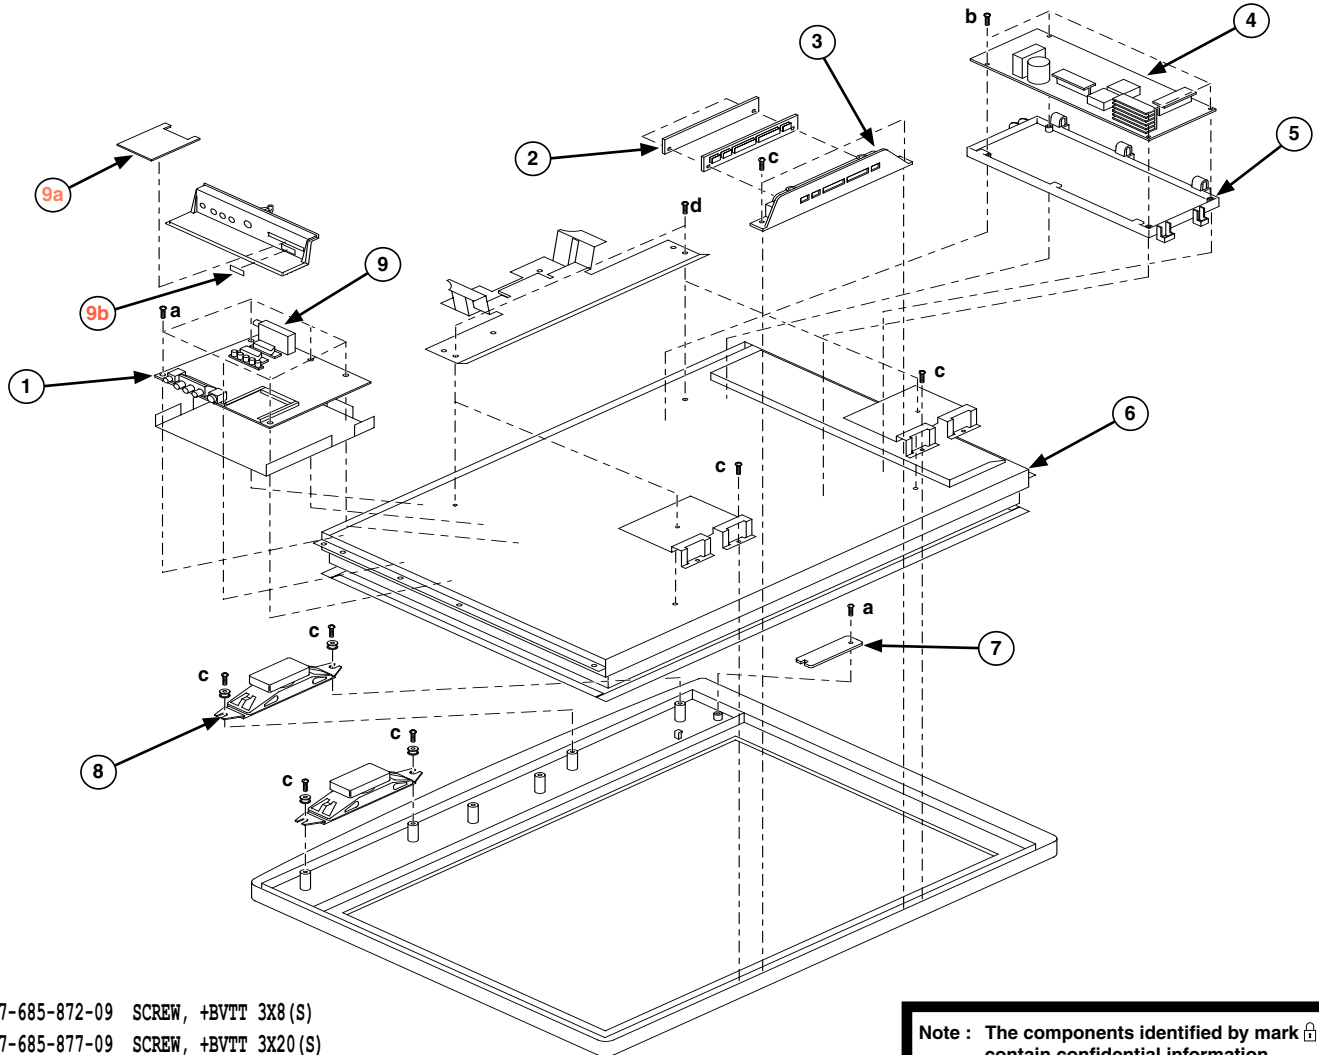


- a 7-685-872-09 SCREW, +BVTT 3X8(S)
b 7-685-877-09 SCREW, +BVTT 3X20(S)
c 2-580-640-01 SCREW, +BVTP2 4X16
d 2-580-600-01 SCREW, +PSW M4X8

Note : The components identified by mark Δ contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
1	Δ *A-1454-412-A	B1 BOARD, COMPLETE	26P30x0	6	1-802-565-11	LCD PANEL (26 INCH WXGA TFT) 26 inches	
	Δ *A-1336-696-A	B1 BOARD, COMPLETE	32P30x0		1-802-494-11	LCD PANEL (32 INCH WXGA TFT) 32 inches	
	Δ *A-1486-565-A	B1 BOARD, COMPLETE	26P30xH	7	*A-1276-476-A	H3PS BOARD, COMPLETE	
	Δ *A-1486-566-A	B1 BOARD, COMPLETE	32P30xH	8	1-826-791-11	LOUDSPEAKER (4.2X15CM)	
2	*A-1276-475-A	H1PS BOARD, COMPLETE		9	8-597-585-10	TUNER, FSS BTP-HC401	
3	X-2178-919-1	MULTI BUTTON ASSY		9a	*4-101-356-02	CARD, DUMMY	
4	*A-1276-472-A	GS2 BOARD, COMPLETE	26/32 inches	9b	2-689-737-01	COVER, MS	
5	*3-100-996-01	BRACKET , G1					

5-2. CHASSIS (37 & 40 Inches)

Note : The components identified by mark  contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

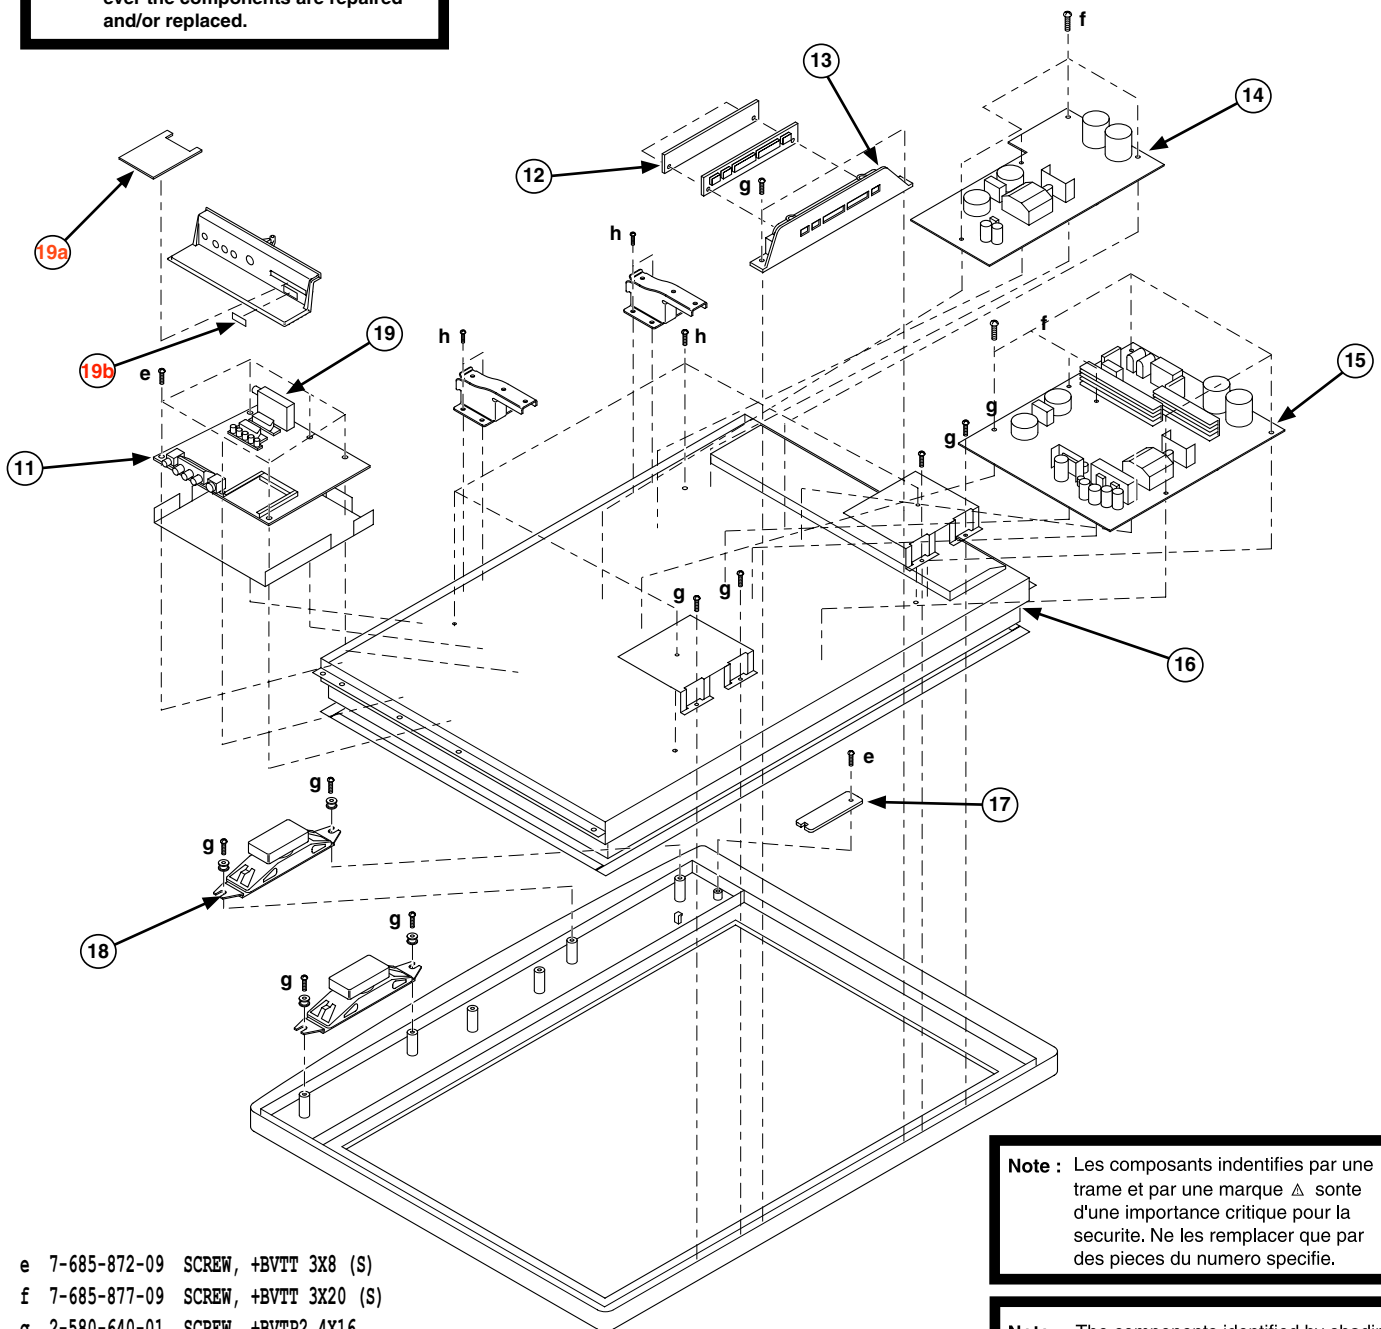

- e 7-685-872-09 SCREW, +BVTT 3X8 (S)
 f 7-685-877-09 SCREW, +BVTT 3X20 (S)
 g 2-580-640-01 SCREW, +BVTP2 4X16
 h 2-580-607-01 SCREW, +PSW M5X12

Note : Les composants indentifiés par une trame et par une marque  sont d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.


Note : The components identified by shading and marked  are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
11	 *A-1336-697-A	B1 BOARD, COMPLETE	37P30x0	16	1-802-524-12	LCD PANEL (37 INCH WXGA TFT)	37 inches
	 *A-1382-602-A	B1 BOARD, COMPLETE	40P30x0		1-802-567-11	LCD PANEL (40 INCH WXGA TFT)	40 inches
	 *A-1486-567-A	B1 BOARD, COMPLETE	37P30xH	17	*A-1276-476-A	H3PS BOARD, COMPLETE	
	 *A-1486-568-A	B1 BOARD, COMPLETE	40P30xH	18	1-826-790-11	LOUDSPEAKER (5.5X15CM)	
12	*A-1276-475-A	HIPS BOARD, COMPLETE		19	8-597-585-10	TUNER, FSS BTP-HC401	
13	X-2178-919-1	MULTI BUTTON ASSY		19a	*4-101-356-02	CARD, DUMMY	
14	*A-1276-478-A	DS1 BOARD, COMPLETE	40 inches	19b	2-689-737-01	COVER, MS	
15	*A-1276-473-A	GS3 BOARD, COMPLETE	37 inches				
	*A-1276-474-A	GS4 BOARD, COMPLETE	40 inches				

5-3. REAR COVER, STAND & BEZEL (26 & 32 Inches)

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

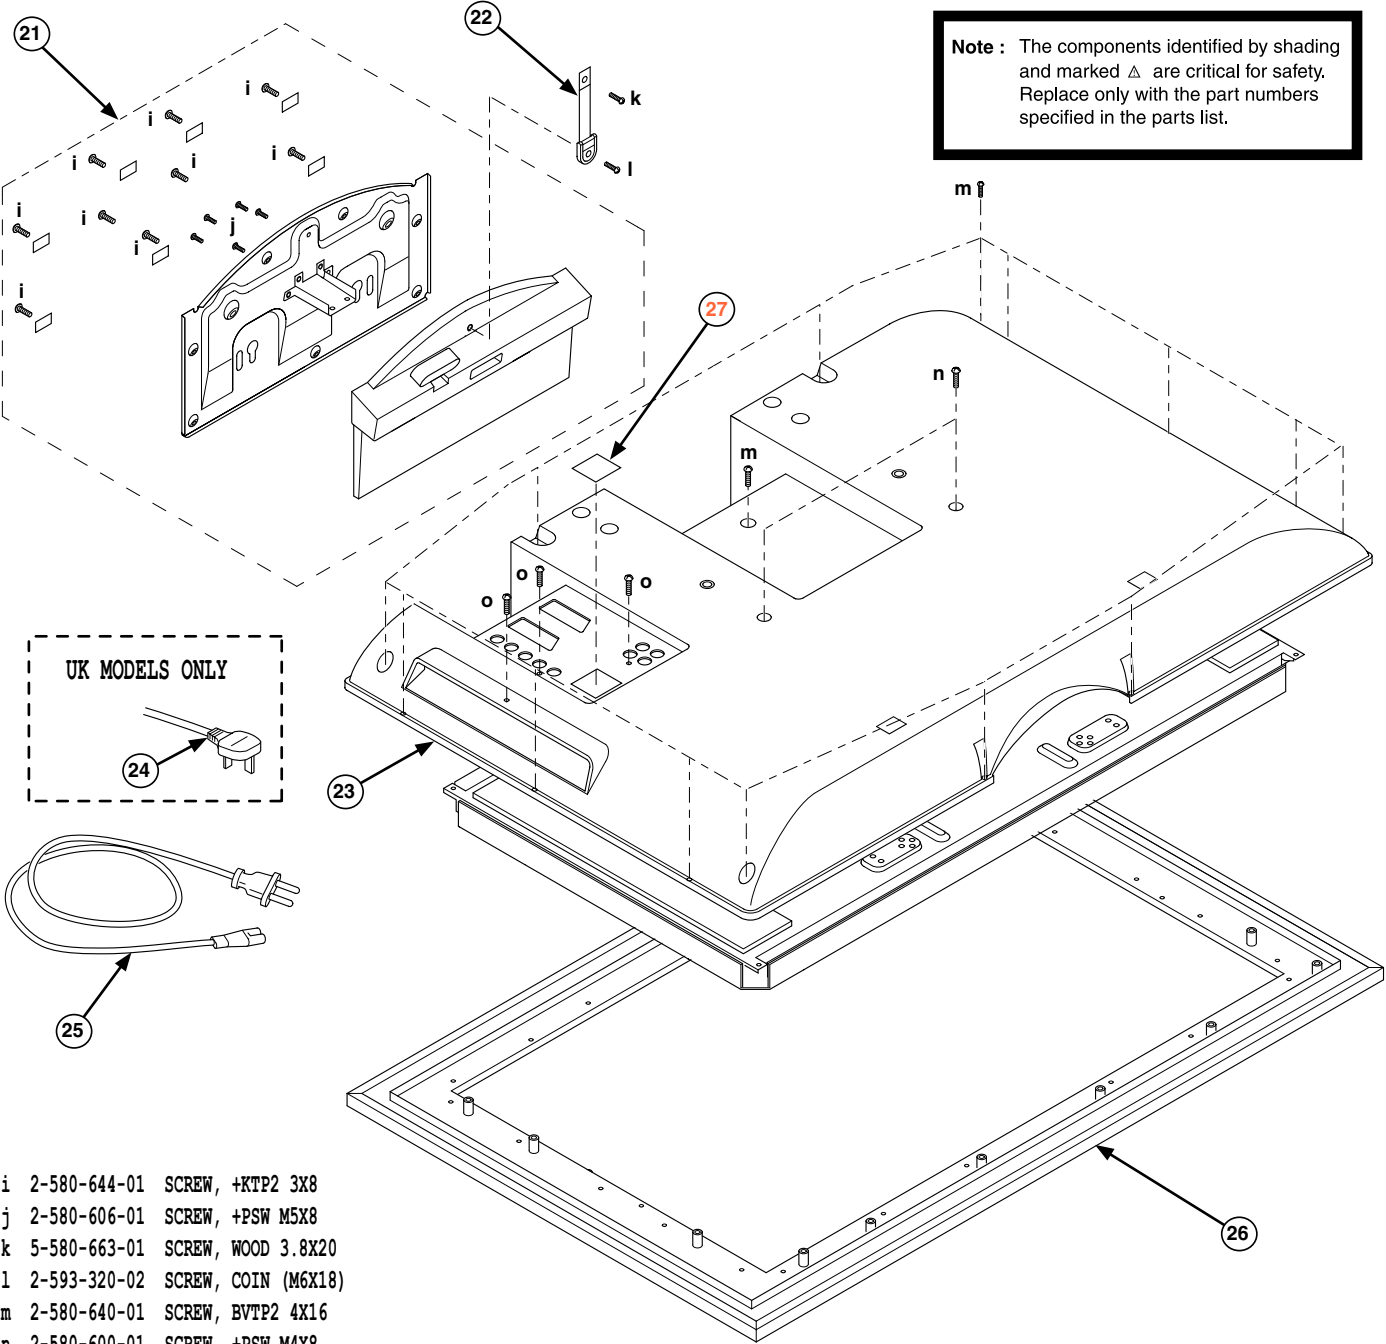


- i 2-580-644-01 SCREW, +KTP2 3X8
- j 2-580-606-01 SCREW, +PSW M5X8
- k 5-580-663-01 SCREW, WOOD 3.8X20
- l 2-593-320-02 SCREW, COIN (M6X18)
- m 2-580-640-01 SCREW, BVTP2 4X16
- n 2-580-600-01 SCREW, +PSW M4X8
- o 2-580-639-01 SCREW, +BVTP 4X12

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
21	*X-2179-137-2	STAND (M) ASSY	26/32P3000	24	Δ 1-832-170-41	POWER SUPPLY CORD (UK PLUG)	
	*X-2188-771-1	STAND (M_WS) ASSY	26/32P300H	25	Δ 1-832-132-31	POWER-SUPPLY CORD (AEP)	
22	*X-2102-511-3	BAG ASSY, RUDDER LOCK	P30x0 only	26	X-2179-139-1	BEZEL (26P) ASSY	26 inches
23	X-2179-138-1	REAR COVER ASSY (26)	26 inches		X-2179-142-1	BEZEL (32P) ASSY	32 inches
	X-2179-141-1	REAR COVER ASSY (32)	32 inches	27	3-094-483-01	COVER,ECS	

5-4. REAR COVER, STAND & BEZEL (37 & 40 Inches)

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

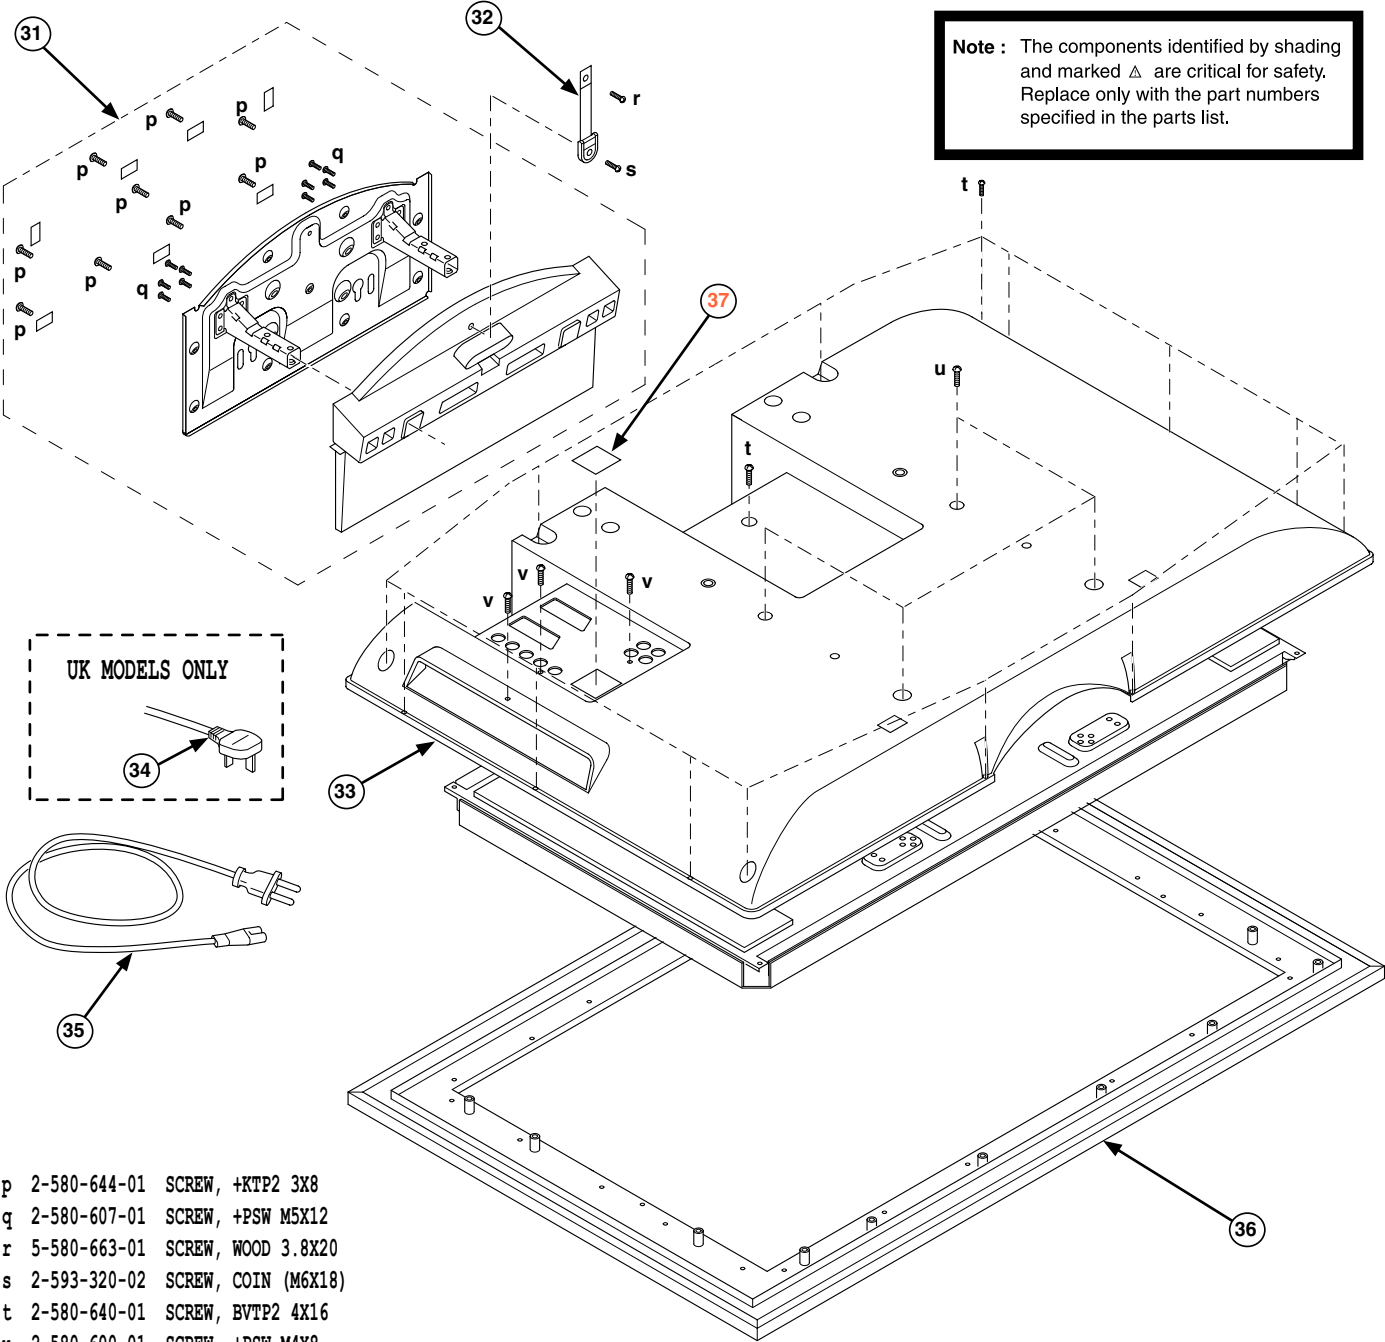

- p 2-580-644-01 SCREW, +KTP2 3X8
q 2-580-607-01 SCREW, +PSW M5X12
r 5-580-663-01 SCREW, WOOD 3.8X20
s 2-593-320-02 SCREW, COIN (M6X18)
t 2-580-640-01 SCREW, BVTP2 4X16
u 2-580-600-01 SCREW, +PSW M4X8
v 2-580-639-01 SCREW, +BVTP 4X12

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
31	*X-2179-140-2	STAND (ML) ASSY	37/40P3000	34	Δ 1-832-170-41	POWER SUPPLY CORD (UK PLUG)	
	*X-2188-761-1	STAND (ML) ASSY	37/40P300H	35	Δ 1-832-132-31	POWER-SUPPLY CORD (AEP)	
32	*X-2102-511-3	BAG ASSY, RUDDER LOCK	P30x0 only	36	X-2179-144-1	BEZEL (37P) ASSY	37 inches
33	X-2179-143-2	REAR COVER ASSY (37)	37 inches		X-2179-146-1	BEZEL (40P) ASSY	40 inches
	X-2179-145-1	REAR COVER ASSY (40)	40 inches	37	3-094-483-01	COVER,ECS	

SECTION 6 ELECTRICAL PARTS LIST

PARTS LISTING TABLE OF CONTENTS

	<u>Page</u>
H1PS BOARD COMPLETE Parts List :	79
H3PS BOARD COMPLETE Parts List :	79
GS4 BOARD COMPLETE Parts List :	40 inches only 79
DS1 BOARD COMMON Parts List :	40 inches only 84
B1 BOARD COMPLETE Parts List :	Parts common to KDL-26/32/37/40P30x0 listed in this manual . 86
Model	Parts that belong only to the model specified
KDL-26P30x0 only	103
KDL-32P30x0 only	104
KDL-37P30x0 only	104
KDL-40P30x0 only	104
GS3 BOARD COMPLETE Parts List :	37 inches only 105
GS2 BOARD COMPLETE Parts List :	26/32 inches only 109
B1 BOARD COMPLETE Parts List :	Parts common to KDL-26/32/37/40P30xH listed in this manual . 112
Model	Parts that belong only to the model specified
KDL-26P30xH only	129
KDL-32P30xH only	130
KDL-37P30xH only	130
KDL-40P30xH only	131
ACCESSORIES AND CONNECTORS :	132
REMOTE COMMANDER :	132

Note : Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
Parts indicated (XX) on the Schematic Diagram are not used in this model and therefore do not appear in the Parts List.

REF.NO. PART.NO DESCRIPTION REMARK

*** A-1276-475-A H1PS COMPLETE**

< CAPACITOR >

C104	1-112-775-11	CERAMIC CHIP 0.0022UF	10%	50V
C105	1-112-775-11	CERAMIC CHIP 0.0022UF	10%	50V

< CONNECTOR >

CN101	*1-820-180-11	HEADER ASSEMBLY (PRINT PWB) 3P
-------	---------------	--------------------------------

< FERRITE BEAD >

FB100	1-400-807-21	FERRITE	OUH
FB101	1-400-807-21	FERRITE	OUH

< RESISTOR >

R101	1-218-841-11	METAL CHIP	560	0.5%	1/10W
R103	1-218-833-11	METAL CHIP	270	0.5%	1/10W
R104	1-218-841-11	METAL CHIP	560	0.5%	1/10W
R105	1-218-859-11	METAL CHIP	3.3K	0.5%	1/10W
R106	1-218-833-11	METAL CHIP	270	0.5%	1/10W

R108	1-216-864-11	SHORT CHIP	0
------	--------------	------------	---

< SWITCH >

S101	1-572-595-31	SWITCH, TACTILE (REFLOW TYPE)
S102	1-572-595-31	SWITCH, TACTILE (REFLOW TYPE)
S103	1-572-595-31	SWITCH, TACTILE (REFLOW TYPE)
S104	1-572-595-31	SWITCH, TACTILE (REFLOW TYPE)
S105	1-572-595-31	SWITCH, TACTILE (REFLOW TYPE)
S106	1-572-595-31	SWITCH, TACTILE (REFLOW TYPE)
S107	1-572-595-31	SWITCH, TACTILE (REFLOW TYPE)

*** A-1276-476-A H3PS COMPLETE**

< CAPACITOR >

C311	1-162-960-11	CERAMIC CHIP 220PF	10.00%	50V
C312	1-119-667-11	CERAMIC CHIP 22UF		10V

< CONNECTOR >

CN301	*1-820-289-11	HEADER ASSEMBLY (PRINT PWB)10P
-------	---------------	--------------------------------

< DIODE >

D301	8-719-036-94	DIODE RD5.6SB-T1
D302	8-719-085-26	DIODE CL-165HR/SYG-D-T
D303	8-719-036-94	DIODE RD5.6SB-T1
D304	8-719-036-94	DIODE RD5.6SB-T1
D305	8-719-085-26	DIODE CL-165HR/SYG-D-T
D306	8-719-036-94	DIODE RD5.6SB-T1
D307	8-719-036-94	DIODE RD5.6SB-T1
D308	6-500-817-01	DIODE (LED) SML-512UWT86

REF.NO. PART.NO DESCRIPTION REMARK

D311	8-719-036-94	DIODE RD5.6SB-T1
------	--------------	------------------

< IC >

IC311	6-600-502-01	HIC GP1UE26RK0VF
-------	--------------	------------------

< TRANSISTOR >

Q301	8-729-028-96	TRANSISTOR DTC114EUA-T106
Q302	8-729-028-96	TRANSISTOR DTC114EUA-T106
Q303	8-729-028-96	TRANSISTOR DTC114EUA-T106
Q304	8-729-028-96	TRANSISTOR DTC114EUA-T106
Q305	8-729-028-96	TRANSISTOR DTC114EUA-T106

< RESISTOR >

R301	1-216-821-11	METAL CHIP	1K	5%	1/10W
R302	1-216-821-11	METAL CHIP	1K	5%	1/10W
R303	1-216-821-11	METAL CHIP	1K	5%	1/10W
R304	1-216-821-11	METAL CHIP	1K	5%	1/10W
R305	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R311	1-216-817-11	METAL CHIP	470	5%	1/10W
R312	1-216-805-11	METAL CHIP	47	5%	1/10W

*** A-1276-474-A GS4 COMPLETE (40 inches only)**

4-382-854-01	SCREW (M3X8), P, SW (+)
4-382-854-11	SCREW (M3X10), P, SW (+)

< CAPACITOR >

C6000	1-107-910-11	ELECT	100UF	20%	50V
C6005	1-107-906-11	ELECT	10UF	20%	50V
C6006	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C6007	1-162-964-31	CERAMIC CHIP	0.001UF	5.00%	50V
C6008	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
C6009	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C6010	1-125-891-11	CERAMIC CHIP	0.47UF	10.00%	10V
C6012	1-125-891-11	CERAMIC CHIP	0.47UF	10.00%	10V
C6013	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C6014	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C6015	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C6016	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C6017	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6018	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6114	1-112-744-61	MYLAR	1UF	10%	450V
C6115	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C6117	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C6119	1-107-903-11	ELECT	2.2UF	20%	50V
C6121	1-100-139-31	FILM	0.001UF	5%	630V
C6123	1-107-904-11	ELECT	3.3UF	20%	50V
C6124	1-107-910-11	ELECT	100UF	20%	50V
C6125	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C6126	1-119-892-51	CERAMIC	470PF	10.00%	250V

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GS4

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C6127	1-112-226-21	ELECT	470UF 20% 16V	C6429	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6128	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V	C6430	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6200	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V	C6431	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6201	1-100-831-91	CERAMIC CHIP	0.001UF 2% 50V	C6432	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6202	1-107-906-11	ELECT	10UF 20% 50V	C6433	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6203	1-107-905-11	ELECT	4.7UF 20% 50V	C6434	1-107-888-11	ELECT	47UF 20% 25V
C6204	1-107-910-11	ELECT	100UF 20% 50V	C6439	1-107-895-11	ELECT	330UF 20% 35V
C6206	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V	C6440	1-162-959-11	CERAMIC CHIP	330PF 5.00% 50V
C6207	1-107-888-11	ELECT	47UF 20% 25V	C6441	1-125-891-11	CERAMIC CHIP	0.47UF 10.00% 10V
C6208	1-115-340-11	CERAMIC CHIP	0.22UF 10.00% 25V	C6442	1-164-245-11	CERAMIC CHIP	0.015UF 10.00% 25V
C6210	1-112-481-11	CERAMIC	470PF 10% 1KV	C6443	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V
C6211	1-163-021-91	CERAMIC CHIP	0.01UF 10.00% 50V	C6500	1-113-889-11	CERAMIC	0.001UF 20.00% 250V
C6212	1-100-310-11	FILM	18000PF 3% 800V	C6501 Δ	1-114-153-11	CERAMIC	680PF 10% 250V
C6215	1-104-760-11	CERAMIC CHIP	0.047UF 10.00% 50V	C6502 Δ	1-119-892-51	CERAMIC	470PF 10.00% 250V
C6313	1-163-021-91	CERAMIC CHIP	0.01UF 10.00% 50V	C6504 Δ	1-165-529-11	MYLAR	0.22UF 10 275V
C6314	1-163-021-91	CERAMIC CHIP	0.01UF 10.00% 50V	C6508 Δ	1-165-530-11	MYLAR	0.47UF 10 275V
C6316	1-163-021-91	CERAMIC CHIP	0.01UF 10.00% 50V	C6511 Δ	1-114-153-11	CERAMIC	680PF 10% 250V
C6320 Δ	1-161-964-91	CERAMIC	0.0047UF 250V	C6512 Δ	1-119-892-51	CERAMIC	470PF 10.00% 250V
C6321 Δ	1-161-964-91	CERAMIC	0.0047UF 250V	C6513	1-113-889-11	CERAMIC	0.001UF 20.00% 250V
C6322	1-112-744-61	MYLAR	1UF 10% 450V	C6540	1-162-964-31	CERAMIC CHIP	0.001UF 5.00% 50V
C6324	1-162-969-11	CERAMIC CHIP	0.0068UF 10.00% 25V	C6541	1-162-964-31	CERAMIC CHIP	0.001UF 5.00% 50V
C6325	1-117-227-11	MYLAR	1UF 10.00% 450V	C6542	1-162-964-31	CERAMIC CHIP	0.001UF 5.00% 50V
C6326	1-117-227-11	MYLAR	1UF 10.00% 450V	C6543	1-162-964-31	CERAMIC CHIP	0.001UF 5.00% 50V
C6328	1-100-613-81	CERAMIC	470PF 5% 1KV	C6544	1-162-964-31	CERAMIC CHIP	0.001UF 5.00% 50V
C6329	1-100-613-81	CERAMIC	470PF 5% 1KV	C6545	1-162-964-31	CERAMIC CHIP	0.001UF 5.00% 50V
C6332	1-107-823-11	CERAMIC CHIP	0.47UF 10.00% 16V	C6601	1-114-231-21	ELECT	3300UF 20% 35V
C6333	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V	C6602	1-112-231-21	ELECT	2200UF 20% 16V
C6334	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V	C6603	1-112-231-21	ELECT	2200UF 20% 16V
C6339	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V	C6606	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V
C6341	1-107-906-11	ELECT	10UF 20% 50V	C6610	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C6342	1-135-361-11	ELECT (BLOCK)	180UF 20% 450V	C6613	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C6343	1-135-361-11	ELECT (BLOCK)	180UF 20% 450V	C6615	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C6400	1-125-891-11	CERAMIC CHIP	0.47UF 10.00% 10V	C6616	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C6401	1-125-891-11	CERAMIC CHIP	0.47UF 10.00% 10V	< CONNECTOR >			
C6403	1-125-891-11	CERAMIC CHIP	0.47UF 10.00% 10V	CN6100	*1-785-705-11	PIN, CONNECTOR (PC BOARD)	9P
C6405	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V	CN6200	*1-793-660-11	PIN, CONNECTOR (PC BOARD)	3P
C6406	1-125-891-11	CERAMIC CHIP	0.47UF 10.00% 10V	CN6400	*1-779-944-11	PIN, CONNECTOR (PC BOARD)	4P
C6407	1-162-959-11	CERAMIC CHIP	330PF 5.00% 50V	CN6401	*1-695-915-11	TAB (CONTACT)	
C6416	1-104-329-11	CERAMIC CHIP	0.1UF 10.00% 50V	CN6402	*1-695-915-11	TAB (CONTACT)	
C6417	1-164-315-11	CERAMIC CHIP	470PF 5.00% 50V	CN6500 Δ	*1-793-660-11	PIN, CONNECTOR (PC BOARD)	3P
C6418	1-164-315-11	CERAMIC CHIP	470PF 5.00% 50V	CN6602	*1-564-507-11	PLUG, CONNECTOR	4P
C6419	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V	CN6603	*1-785-707-11	PIN, CONNECTOR (PC BOARD)	11P
C6421	1-131-992-91	CERAMIC CHIP	100000PF 35V	CN6604	*1-785-702-11	PIN, CONNECTOR (PC BOARD)	5P
C6422	1-128-959-31	ELECT	1000UF 20% 35V	CN6606	*1-778-853-11	PIN, CONNECTOR (PC BOARD)	8P
C6423	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V	CN6606	*1-778-853-21	PIN, CONNECTOR (PC BOARD)	8P
C6424	1-128-959-31	ELECT	1000UF 20% 35V	CN6607	*1-785-704-11	PIN, CONNECTOR (PC BOARD)	7P
C6425	1-136-171-00	FILM	0.33UF 5.00% 50V				
C6426	1-136-171-00	FILM	0.33UF 5.00% 50V				
C6427	1-104-329-11	CERAMIC CHIP	0.1UF 10.00% 50V				
C6428	1-164-245-11	CERAMIC CHIP	0.015UF 10.00% 25V				

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GS4

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
< DIODE >				< FUSE >			
D6000	6-500-108-01	DIODE EP05FA20		F6500 Δ	1-576-233-51	FUSE	6.3A 250V
D6001	8-719-404-50	DIODE MA111-TX		FH6502 Δ	1-533-725-21	FUSE HOLDER	6.3A 250V
D6002	6-500-108-01	DIODE EP05FA20		< FERRITE BEAD >			
D6003	8-719-404-50	DIODE MA111-TX		FB6200	1-412-911-11	FERRITE	0UH
D6004	8-719-018-01	DIODE MA8220-TX		FB6202	1-412-911-11	FERRITE	0UH
D6005	8-719-404-50	DIODE MA111-TX		FB6203	1-412-911-11	FERRITE	0UH
D6006	6-501-297-01	DIODE 1F6G		FB6290	1-412-911-11	FERRITE	0UH
D6008	8-719-404-50	DIODE MA111-TX		FB6305	1-412-911-11	FERRITE	0UH
D6011	8-719-404-50	DIODE MA111-TX		FB6306	1-412-911-11	FERRITE	0UH
D6013	8-719-404-50	DIODE MA111-TX		FB6307	1-410-396-41	FERRITE	0.45UH
D6016	8-719-404-50	DIODE MA111-TX		FB6308	1-410-396-41	FERRITE	0.45UH
D6018	8-719-404-50	DIODE MA111-TX		FB6400	1-469-324-21	FERRITE	0UH
D6019	8-719-017-89	DIODE MA8150-TX		FB6401	1-469-869-21	FERRITE	0UH
D6020	8-719-404-50	DIODE MA111-TX		FB6402	1-469-324-21	FERRITE	0UH
D6108	6-501-043-01	DIODE UMZ16NT106		FB6403	1-469-324-21	FERRITE	0UH
D6109	6-500-567-31	DIODE 10ERB20-TB3		FB6404	1-469-324-21	FERRITE	0UH
D6110	6-501-297-01	DIODE 1F6G		FB6501 Δ	1-410-396-41	FERRITE	0.45UH
D6111	6-500-567-31	DIODE 10ERB20-TB3		FB6502 Δ	1-410-396-41	FERRITE	0.45UH
D6112	6-500-567-31	DIODE 10ERB20-TB3		< IC >			
D6113	8-719-510-02	DIODE D1NS4		IC6000	6-709-368-01	IC MM1431ATT (CN)	
D6114	8-719-073-35	DIODE RB551V-30TE-17		IC6001	6-709-368-01	IC MM1431ATT (CN)	
D6200	8-719-081-67	DIODE M1FM3		IC6101	6-708-801-01	IC MIP2H2	
D6201	6-500-137-01	DIODE BAT54HT1		IC6102	6-709-442-01	IC MM1530ATT	
D6202	8-719-017-89	DIODE MA8150-TX		IC6200	6-707-749-01	IC CXD9841P	
D6203	8-719-979-64	DIODE UF4005/23		IC6201	6-709-368-01	IC MM1431ATT (CN)	
D6204	8-719-081-67	DIODE M1FM3		IC6302	6-709-192-01	IC FA5501AN-D1-FE1	
D6215	6-500-253-01	DIODE RB053L-30TE25		IC6400	6-711-308-01	IC TDA8932BT-N2	
D6300	8-719-054-89	DIODE D15XB60		< COIL >			
D6312	8-719-976-99	DIODE DT25.1B		L6101	1-414-183-41	INDUCTOR	10UH
D6314	8-719-081-97	DIODE MMDL914T1		L6300	1-457-218-11	INDUCTOR	100UH
D6315	6-501-043-01	DIODE UMZ16NT106		L6301	1-457-141-11	INDUCTOR	175UH
D6316	8-719-054-59	DIODE FSF05A60		L6400	1-456-755-11	INDUCTOR	47UH
D6317	6-500-137-01	DIODE BAT54HT1		L6401	1-456-755-11	INDUCTOR	47UH
D6318	6-501-043-01	DIODE UMZ16NT106		L6501 Δ	1-456-856-11	LINE FILTER COIL	
D6319	6-500-108-01	DIODE EP05FA20		L6503 Δ	1-456-856-11	LINE FILTER COIL	
D6320	6-500-108-01	DIODE EP05FA20		L6600	1-414-487-41	INDUCTOR	1UH
D6321	8-719-081-97	DIODE MMDL914T1		L6601	1-414-487-41	INDUCTOR	1UH
D6322	8-719-081-97	DIODE MMDL914T1		L6602	1-457-239-11	INDUCTOR	4.7UH
D6333	6-500-253-01	DIODE RB053L-30TE25		< PHOTOCOUPLER >			
D6400	8-719-081-67	DIODE M1FM3		PH6000	6-600-187-01	PHOTO COUPLER	PC123Y22J00F
D6401	8-719-081-67	DIODE M1FM3		PH6001	6-600-187-01	PHOTO COUPLER	PC123Y22J00F
D6601	8-719-060-88	DIODE D4SBS6		PH6002	6-600-187-01	PHOTO COUPLER	PC123Y22J00F
D6602	6-501-545-01	DIODE SG10SC6-F5		PH6101	6-600-187-01	PHOTO COUPLER	PC123Y22J00F
ET6501	1-537-770-21	TERMINAL BOARD, GROUND		PH6200	6-600-187-01	PHOTO COUPLER	PC123Y22J00F
ET6502	1-537-770-21	TERMINAL BOARD, GROUND					
ET6600	1-537-770-21	TERMINAL BOARD, GROUND					

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GS4

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
< PROTECTOR MODULE >				R6026	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
PS001 Δ	1-533-596-21	IC LINK	4A 90V	R6027	1-216-864-11	SHORT CHIP	0
< TRANSISTOR >				R6028	1-218-887-11	METAL CHIP	47K 0.5% 1/10W
Q6001	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R6029	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q6002	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R6031	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
Q6003	6-551-678-01	TRANSISTOR 2SA1364-T111-1DE		R6032	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q6004	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R6034	1-216-821-11	METAL CHIP	1K 5% 1/10W
Q6005	6-551-714-01	TRANSISTOR INK0001AC1-T112A-1		R6035	1-216-821-11	METAL CHIP	1K 5% 1/10W
Q6006	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R6036	1-216-864-11	SHORT CHIP	0
Q6007	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R6037	1-216-837-11	METAL CHIP	22K 5% 1/10W
Q6008	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R6038	1-216-821-11	METAL CHIP	1K 5% 1/10W
Q6009	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R6039	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
Q6010	6-551-714-01	TRANSISTOR INK0001AC1-T112A-1		R6040	1-218-903-11	METAL CHIP	220K 0.5% 1/10W
Q6200	6-551-302-01	TRANSISTOR 2SK3561(LBS1SONY,Q		R6041	1-218-887-11	METAL CHIP	47K 0.5% 1/10W
Q6201	6-551-302-01	TRANSISTOR 2SK3561(LBS1SONY,Q		R6042	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q6302	6-551-403-01	TRANSISTOR 2SK3797(LBS1SONY.		R6044	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
Q6308	6-551-403-01	TRANSISTOR 2SK3797(LBS1SONY.		R6045	1-218-889-11	METAL CHIP	56K 0.5% 1/10W
Q6309	8-729-807-17	TRANSISTOR 2SD1621-S		R6046	1-216-837-11	METAL CHIP	22K 5% 1/10W
Q6310	8-729-804-41	TRANSISTOR 2SB1122-S		R6047	1-216-849-11	METAL CHIP	220K 5% 1/10W
< RESISTOR >				R6048	1-216-821-11	METAL CHIP	1K 5% 1/10W
JR6001	1-216-864-11	SHORT CHIP	0	R6049	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR6003	1-216-296-11	SHORT CHIP	0	R6050	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR6004	1-216-296-11	SHORT CHIP	0	R6052	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR6005	1-216-295-91	SHORT CHIP	0	R6053	1-216-809-11	METAL CHIP	100 5% 1/10W
JR6006	1-216-864-11	SHORT CHIP	0	R6054	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6000 Δ	1-218-760-11	METAL CHIP	220K 0.5% 1/10W	R6055	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6001 Δ	1-218-760-11	METAL CHIP	220K 0.5% 1/10W	R6056	1-216-837-11	METAL CHIP	22K 5% 1/10W
R6002 Δ	1-208-830-11	METAL CHIP	100K 0.5% 1/10W	R6058	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6003	1-218-911-11	METAL CHIP	470K 0.5% 1/10W	R6059	1-216-864-11	SHORT CHIP	0
R6004 Δ	1-218-760-11	METAL CHIP	220K 0.5% 1/10W	R6124 Δ	1-212-958-00	FUSIBLE	10 5% 1/2W
R6005 Δ	1-218-760-11	METAL CHIP	220K 0.5% 1/10W	R6126	1-216-864-11	SHORT CHIP	0
R6006	1-218-911-11	METAL CHIP	470K 0.5% 1/10W	R6127	1-249-389-11	CARBON	4.7 5% 1/4W
R6007	1-218-887-11	METAL CHIP	47K 0.5% 1/10W	R6128	1-218-865-11	METAL CHIP	5.6K 0.5% 1/10W
R6008	1-216-843-11	METAL CHIP	68K 5% 1/10W	R6129	1-243-725-21	METAL OXIDE	100K 5% 1W
R6009	1-208-814-91	METAL CHIP	22K 0.5% 1/10W	R6130	1-216-864-11	SHORT CHIP	0
R6010	1-208-814-91	METAL CHIP	22K 0.5% 1/10W	R6131	1-249-385-11	CARBON	2.2 5% 1/4W
R6011	1-218-847-11	METAL CHIP	1K 0.5% 1/10W	R6132	1-216-821-11	METAL CHIP	1K 5% 1/10W
R6012	1-216-793-11	METAL CHIP	4.7 5% 1/10W	R6134	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
R6018	1-218-903-11	METAL CHIP	220K 0.5% 1/10W	R6137	1-216-805-11	METAL CHIP	47 5% 1/10W
R6019	1-216-835-11	METAL CHIP	15K 5% 1/10W	R6138	1-218-879-11	METAL CHIP	22K 0.5% 1/10W
R6020	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6139	1-218-871-11	METAL CHIP	10K 0.5% 1/10W
R6021	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6140	1-218-867-11	METAL CHIP	6.8K 0.5% 1/10W
R6022	1-218-903-11	METAL CHIP	220K 0.5% 1/10W	R6141	1-216-864-11	SHORT CHIP	0
R6023	1-218-885-11	METAL CHIP	39K 0.5% 1/10W	R6143	1-216-817-11	METAL CHIP	470 5% 1/10W
R6024	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W	R6200 Δ	1-202-933-61	FUSIBLE	0.1 10% 1/2W
R6025	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6201	1-218-885-11	METAL CHIP	39K 0.5% 1/10W
				R6202	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
				R6203	1-218-827-11	METAL CHIP	150 0.5% 1/10W
				R6204	1-218-877-11	METAL CHIP	18K 0.5% 1/10W
				R6206	1-208-854-11	METAL CHIP	1M 0.5% 1/10W

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GS4

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R6207	1-208-854-11	METAL CHIP	1M 0.5% 1/10W	R6367	1-208-848-11	METAL CHIP	560K 0.5% 1/10W
R6208	1-208-854-11	METAL CHIP	1M 0.5% 1/10W	R6368	1-208-848-11	METAL CHIP	560K 0.5% 1/10W
R6209	1-208-854-11	METAL CHIP	1M 0.5% 1/10W	R6369	1-208-848-11	METAL CHIP	560K 0.5% 1/10W
R6210	1-218-760-11	METAL CHIP	220K 0.5% 1/10W	R6370	1-208-846-11	METAL CHIP	470K 0.5% 1/10W
R6211	1-218-877-11	METAL CHIP	18K 0.5% 1/10W	R6371	1-208-844-11	METAL CHIP	390K 0.5% 1/10W
R6213	1-249-385-11	CARBON	2.2 5% 1/4W	R6372	1-218-875-11	METAL CHIP	15K 0.5% 1/10W
R6215	1-211-981-11	METAL CHIP	33 0.5% 1/10W	R6373	1-218-851-11	METAL CHIP	1.5K 0.5% 1/10W
R6216	1-216-009-91	RES-CHIP	22 5% 1/10W	R6374	1-249-393-11	CARBON	10 5% 1/4W
R6217	1-216-009-91	RES-CHIP	22 5% 1/10W	R6400	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
R6218	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6401	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
R6219	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6402	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
R6220	1-216-857-11	METAL CHIP	1M 5% 1/10W	R6403	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
R6221	1-216-361-00	METAL OXIDE	0.22 5% 2W	R6404	1-220-238-11	METAL CHIP	10 5% 1/4W
R6222	1-216-361-00	METAL OXIDE	0.22 5% 2W	R6405	1-216-841-11	METAL CHIP	47K 5% 1/10W
R6223	1-218-847-11	METAL CHIP	1K 0.5% 1/10W	R6406	1-216-841-11	METAL CHIP	47K 5% 1/10W
R6224	1-216-821-11	METAL CHIP	1K 5% 1/10W	R6407	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6225	1-216-821-11	METAL CHIP	1K 5% 1/10W	R6408	1-216-864-11	SHORT CHIP	0
R6226	1-216-821-11	METAL CHIP	1K 5% 1/10W	R6409	1-216-864-11	SHORT CHIP	0
R6227	1-218-859-11	METAL CHIP	3.3K 0.5% 1/10W	R6410	1-216-857-11	METAL CHIP	1M 5% 1/10W
R6228	1-218-875-11	METAL CHIP	15K 0.5% 1/10W	R6411	1-216-857-11	METAL CHIP	1M 5% 1/10W
R6230	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W	R6413	1-220-238-11	METAL CHIP	10 5% 1/4W
R6307	1-216-857-11	METAL CHIP	1M 5% 1/10W	R6414	1-245-973-11	METAL CHIP	22 5% 1/3W
R6337	1-216-857-11	METAL CHIP	1M 5% 1/10W	R6420	1-216-821-11	METAL CHIP	1K 5% 1/10W
R6338 Δ	1-240-251-92	METAL	6.8 5% 10W	R6421	1-216-821-11	METAL CHIP	1K 5% 1/10W
R6339	1-218-913-91	METAL CHIP	560K 0.5% 1/10W	R6422	1-245-973-11	METAL CHIP	22 5% 1/3W
R6340	1-216-864-11	SHORT CHIP	0	R6423	1-220-238-11	METAL CHIP	10 5% 1/4W
R6341	1-218-879-11	METAL CHIP	22K 0.5% 1/10W	R6424	1-216-837-11	METAL CHIP	22K 5% 1/10W
R6342	1-218-823-11	METAL CHIP	100 0.5% 1/10W	R6429	1-218-859-11	METAL CHIP	3.3K 0.5% 1/10W
R6343	1-215-882-21	METAL OXIDE	22 5% 2W	R6430	1-218-859-11	METAL CHIP	3.3K 0.5% 1/10W
R6344	1-216-864-11	SHORT CHIP	0	R6600	1-216-841-11	METAL CHIP	47K 5% 1/10W
R6345	1-217-157-00	METAL	0.33 10% 5W	R6601	1-216-864-11	SHORT CHIP	0
R6346	1-216-295-91	SHORT CHIP	0	R6602	1-216-864-11	SHORT CHIP	0
R6347	1-217-157-00	METAL	0.33 10% 5W	R6603	1-216-864-11	SHORT CHIP	0
R6348	1-211-981-11	METAL CHIP	33 0.5% 1/10W	R6604	1-216-864-11	SHORT CHIP	0
R6349	1-218-823-11	METAL CHIP	100 0.5% 1/10W	< RELAY >			
R6350	1-216-833-11	METAL CHIP	10K 5% 1/10W	RY6000 Δ 1-755-516-11 RELAY (AC POWER)			
R6351	1-249-389-11	CARBON	4.7 5% 1/4W	< TRANSFORMER >			
R6352	1-216-833-11	METAL CHIP	10K 5% 1/10W	T6101 Δ 1-443-984-11 CONVERTER TRANSFORMER (SBT)			
R6354	1-249-405-11	CARBON	100 5% 1/4W	T6200 Δ 1-445-309-11 CONVERTER TRANSFORMER (PIT)			
R6355	1-249-389-11	CARBON	4.7 5% 1/4W	< VARISTOR >			
R6356	1-216-813-11	METAL CHIP	220 5% 1/10W	VD6500 Δ 1-804-996-21 VARISTOR			
R6357	1-216-813-11	METAL CHIP	220 5% 1/10W	VD6501 Δ 1-804-996-21 VARISTOR			
R6358	1-208-814-91	METAL CHIP	22K 0.5% 1/10W				
R6360	1-216-813-11	METAL CHIP	220 5% 1/10W				
R6361	1-216-813-11	METAL CHIP	220 5% 1/10W				
R6362	1-208-814-91	METAL CHIP	22K 0.5% 1/10W				
R6363	1-218-907-11	METAL CHIP	330K 0.5% 1/10W				
R6364	1-218-879-11	METAL CHIP	22K 0.5% 1/10W				
R6365	1-218-895-11	METAL CHIP	100K 0.5% 1/10W				
R6366	1-216-809-11	METAL CHIP	100 5% 1/10W				

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
* A-1276-478-A DS1 COMPLETE (40 inches only)							
	4-382-854-01	SCREW (M3X8) , P, SW (+)		C6746	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
	< CAPACITOR >			C6747	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6600	1-165-794-21	MYLAR 1UF	10% 450V	C6748	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
C6601	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C6749	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6602	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C6750	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6604	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V				
C6606	1-165-794-21	MYLAR 1UF	10% 450V	C6753	1-107-906-11	ELECT 10UF	20% 50V
				C6754	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C6609	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C6755	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C6612	1-119-891-51	CERAMIC 220PF	10.00% 250V	C6756	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6700	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C6757	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6701	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V				
C6702	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C6759	1-107-882-91	ELECT 100UF	20% 16V
				C6785	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6703	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C6789	1-107-888-11	ELECT 47UF	20% 25V
C6706	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C6794	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6707	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V				
C6709	1-104-742-11	CERAMIC 33PF	5% 6.3KV	< CONNECTOR >			
C6710	1-162-965-11	CERAMIC CHIP 0.0015UF	10.00% 50V	CN6600	*1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P	
				CN6700	*1-821-072-11	HEADER ASSEMBLY FOR PWB 2P	
C6711	1-104-742-11	CERAMIC 33PF	5% 6.3KV	CN6701	*1-785-704-11	PIN, CONNECTOR (PC BOARD) 7P	
C6712	1-162-965-11	CERAMIC CHIP 0.0015UF	10.00% 50V	CN6707	*1-778-853-11	PIN, CONNECTOR (PC BOARD) 8P	
C6713	1-162-965-11	CERAMIC CHIP 0.0015UF	10.00% 50V				
C6714	1-162-965-11	CERAMIC CHIP 0.0015UF	10.00% 50V	< DIODE >			
C6715	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	D6608	8-719-041-97	DIODE MA113-(TX)	
				D6609	8-719-041-97	DIODE MA113-(TX)	
C6716	1-162-970-11	CERAMIC CHIP 0.01UF	5.00% 25V	D6612	6-501-848-01	DIODE S3K60	
C6717	1-164-217-11	CERAMIC CHIP 150PF	5.00% 50V	D6613	6-501-848-01	DIODE S3K60	
C6718	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6614	6-501-848-01	DIODE S3K60	
C6719	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V				
C6720	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D6615	6-501-848-01	DIODE S3K60	
				D6623	8-719-083-57	DIODE UDZSNPTE-173.6B	
C6721	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D6624	8-719-083-57	DIODE UDZSNPTE-173.6B	
C6723	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D6625	6-500-137-01	DIODE BAT54HT1	
C6724	1-127-804-91	CERAMIC CHIP 100PF	1% 50V	D6700	8-719-420-90	DIODE MA8051-M	
C6725	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V				
C6726	1-127-573-11	CERAMIC CHIP 1UF	10% 16V	D6701	8-719-420-90	DIODE MA8051-M	
				D6702	8-719-404-50	DIODE MA111-TX	
C6727	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D6703	8-719-404-50	DIODE MA111-TX	
C6728	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6704	8-719-800-76	DIODE 1SS226	
C6729	1-107-882-91	ELECT 100UF	20% 16V	D6705	8-719-800-76	DIODE 1SS226	
C6730	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V				
C6731	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D6708	6-500-335-01	DIODE MC2838-T112-1	
				D6709	8-719-017-58	DIODE MA8068	
C6732	1-100-591-91	CERAMIC CHIP 1UF	10% 25V	D6710	8-719-017-58	DIODE MA8068	
C6735	1-165-176-11	CERAMIC CHIP 0.047UF	10.00% 16V	D6714	8-719-422-12	DIODE MA8039	
C6738	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D6715	8-719-422-12	DIODE MA8039	
C6739	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V				
C6740	1-107-882-91	ELECT 100UF	20% 16V	D6717	8-719-404-50	DIODE MA111-TX	
				D6718	8-719-404-50	DIODE MA111-TX	
C6741	1-165-908-11	CERAMIC CHIP 1UF	10% 10V				
C6742	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	ET6700	1-537-770-21	TERMINAL BOARD, GROUND	
C6743	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	ET6701	1-537-770-21	TERMINAL BOARD, GROUND	
C6744	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V				
C6745	1-107-909-11	ELECT 47UF	20% 50V	< FERRITE BEAD >			
				FB6604	1-412-911-11	FERRITE 0UH	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
FB6605	1-412-911-11	FERRITE	0UH	JR6719	1-216-296-11	SHORT CHIP	0
FB6606	1-412-911-11	FERRITE	0UH	JR6721	1-216-296-11	SHORT CHIP	0
FB6607	1-412-911-11	FERRITE	0UH	JR6724	1-216-296-11	SHORT CHIP	0
FB6609	1-481-256-11	FERRITE	0UH	JR6725	1-216-864-11	SHORT CHIP	0
FB6610	1-410-396-41	FERRITE	0.45UH	JR6726	1-216-296-11	SHORT CHIP	0
FB6700	1-412-911-11	FERRITE	0UH	R6609	1-216-857-11	METAL CHIP	1M 5% 1/10W
FB6701	1-412-911-11	FERRITE	0UH	R6610	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
FB6702	1-412-911-11	FERRITE	0UH	R6611	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
< IC >				R6612	1-249-403-11	CARBON	68 5% 1/4W
IC6701	6-711-021-01	IC LX1692BIDW-TR		R6613	1-249-403-11	CARBON	68 5% 1/4W
IC6702	6-708-762-01	IC PQ200WNA1ZPH		R6614	1-216-793-11	METAL CHIP	4.7 5% 1/10W
IC6703	8-759-575-27	IC BA10339F-E2		R6615	1-216-793-11	METAL CHIP	4.7 5% 1/10W
IC6704	6-709-368-01	IC MM1431ATT (CN)		R6616	1-216-833-11	METAL CHIP	10K 5% 1/10W
< COIL >				R6617	1-216-833-11	METAL CHIP	10K 5% 1/10W
L6600	1-406-977-21	INDUCTOR	100UH	R6626	1-216-864-11	SHORT CHIP	0
L6601	1-414-487-41	INDUCTOR	1UH	R6634	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
L6602	1-414-487-41	INDUCTOR	1UH	R6635	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
< TRANSISTOR >				R6700	1-216-793-11	METAL CHIP	4.7 5% 1/10W
Q6604	8-729-804-41	TRANSISTOR 2SB1122-S		R6701	1-216-793-11	METAL CHIP	4.7 5% 1/10W
Q6605	8-729-804-41	TRANSISTOR 2SB1122-S		R6702	1-216-793-11	METAL CHIP	4.7 5% 1/10W
Q6606	6-551-713-01	TRANSISTOR 2SK3569 (LBS1SONY.Q		R6703	1-216-793-11	METAL CHIP	4.7 5% 1/10W
Q6607	6-551-713-01	TRANSISTOR 2SK3569 (LBS1SONY.Q		R6704	1-216-793-11	METAL CHIP	4.7 5% 1/10W
Q6700	6-551-687-01	TRANSISTOR 3LP02C-TB-E		R6705	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q6701	6-551-688-01	TRANSISTOR 3LN02C-TB-E		R6706	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q6702	6-551-687-01	TRANSISTOR 3LP02C-TB-E		R6707	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q6703	6-551-688-01	TRANSISTOR 3LN02C-TB-E		R6708	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q6704	8-729-028-27	TRANSISTOR 2SK2009 (TE85L)		R6711	1-243-831-71	METAL OXIDE	12 5% 1W
Q6705	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R6712	1-243-831-71	METAL OXIDE	12 5% 1W
Q6711	8-729-029-14	TRANSISTOR DTC144EUA-T106		R6714	1-218-857-11	METAL CHIP	2.7K 0.5% 1/10W
Q6712	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R6715	1-218-881-11	METAL CHIP	27K 0.5% 1/10W
Q6714	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R6716	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
< RESISTOR >				R6721	1-216-817-11	METAL CHIP	470 5% 1/10W
JR6700	1-216-296-11	SHORT CHIP	0	R6722	1-218-897-11	METAL CHIP	120K 0.5% 1/10W
JR6701	1-216-296-11	SHORT CHIP	0	R6723	1-218-871-11	METAL CHIP	10K 0.5% 1/10W
JR6702	1-216-296-11	SHORT CHIP	0	R6724	1-216-864-11	SHORT CHIP	0
JR6703	1-216-296-11	SHORT CHIP	0	R6725	1-218-891-11	METAL CHIP	68K 0.5% 1/10W
JR6704	1-216-296-11	SHORT CHIP	0	R6727	1-216-841-11	METAL CHIP	47K 5% 1/10W
JR6705	1-216-296-11	SHORT CHIP	0	R6729	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
JR6706	1-216-296-11	SHORT CHIP	0	R6730	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
JR6707	1-216-296-11	SHORT CHIP	0	R6731	1-216-837-11	METAL CHIP	22K 5% 1/10W
JR6709	1-216-296-11	SHORT CHIP	0	R6732	1-218-893-11	METAL CHIP	82K 0.5% 1/10W
JR6710	1-216-296-11	SHORT CHIP	0	R6733	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
JR6711	1-216-296-11	SHORT CHIP	0	R6734	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR6714	1-216-296-11	SHORT CHIP	0	R6736	1-218-885-11	METAL CHIP	39K 0.5% 1/10W
JR6717	1-216-864-11	SHORT CHIP	0	R6737	1-216-821-11	METAL CHIP	1K 5% 1/10W
JR6718	1-216-864-11	SHORT CHIP	0	R6739	1-216-864-11	SHORT CHIP	0
				R6750	1-218-895-11	METAL CHIP	100K 0.5% 1/10W
				R6751	1-218-871-11	METAL CHIP	10K 0.5% 1/10W
				R6754	1-218-828-11	METAL CHIP	160 0.5% 1/10W
				R6755	1-216-861-11	METAL CHIP	2.2M 5% 1/10W

Note : The components identified by mark  contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

DS1 **B1**

REF.NO.	PART.NO	DESCRIPTION	REMARK		
R6756	1-218-828-11	METAL CHIP	160	0.5%	1/10W
R6757	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6760	1-218-854-11	METAL CHIP	2K	0.5%	1/10W
R6761	1-218-853-11	METAL CHIP	1.8K	0.5%	1/10W
R6762	1-218-828-11	METAL CHIP	160	0.5%	1/10W
R6763	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R6764	1-218-828-11	METAL CHIP	160	0.5%	1/10W
R6766	1-216-864-11	SHORT CHIP	0		
R6770	1-218-873-11	METAL CHIP	12K	0.5%	1/10W
R6771	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6772	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6773	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6775	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6776	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R6778	1-216-864-11	SHORT CHIP	0		
R6779	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6780	1-216-864-11	SHORT CHIP	0		
R6782	1-218-887-11	METAL CHIP	47K	0.5%	1/10W
R6783	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R6786	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R6787	1-216-817-11	METAL CHIP	470	5%	1/10W
R6788	1-218-823-11	METAL CHIP	100	0.5%	1/10W
R6789	1-218-887-11	METAL CHIP	47K	0.5%	1/10W
R6790	1-218-883-11	METAL CHIP	33K	0.5%	1/10W
R6792	1-218-885-11	METAL CHIP	39K	0.5%	1/10W
R6793	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6794	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6795	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6802	1-218-887-11	METAL CHIP	47K	0.5%	1/10W
R6804	1-249-381-11	CARBON	1	5%	1/4W
R6805	1-216-793-11	METAL CHIP	4.7	5%	1/10W
R6806	1-216-864-11	SHORT CHIP	0		
R6807	1-216-864-11	SHORT CHIP	0		
R6809	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R6810	1-218-875-11	METAL CHIP	15K	0.5%	1/10W
R6811	1-218-901-11	METAL CHIP	180K	0.5%	1/10W
R6816	1-216-864-11	SHORT CHIP	0		
R6819	1-216-864-11	SHORT CHIP	0		
R6823	1-216-864-11	SHORT CHIP	0		
R6824	1-216-864-11	SHORT CHIP	0		
R6909	1-216-821-11	METAL CHIP	1K	5%	1/10W

< TRANSFORMER >

T6800	1-445-237-11	TRANSFORMER, DRIVE
T6801	8-597-060-00	TRANSFORMER, H-V INSULATION

REF.NO.	PART.NO	DESCRIPTION	REMARK
	A-1454-412-A	B1 COMPLETE (KDL-26P30x0 only)	
	A-1336-696-A	B1 COMPLETE (KDL-32P30x0 only)	
	A-1336-697-A	B1 COMPLETE (KDL-37P30x0 only)	
	A-1382-602-A	B1 COMPLETE (KDL-40P30x0 only)	

B1 Board Common Parts

< CAPACITOR >

C2000	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C2001	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C2002	1-164-858-11	CERAMIC CHIP 22PF	5.00%	50V
C2003	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2004	1-164-858-11	CERAMIC CHIP 22PF	5.00%	50V
C2005	1-164-872-11	CERAMIC CHIP 82PF	5.00%	50V
C2006	1-164-872-11	CERAMIC CHIP 82PF	5.00%	50V
C2007	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2008	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C2009	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C2010	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2011	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2012	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2014	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C2015	1-124-779-00	ELECT CHIP 10UF	20.00%	16V
C2016	1-124-779-00	ELECT CHIP 10UF	20.00%	16V
C2017	1-124-779-00	ELECT CHIP 10UF	20.00%	16V
C2018	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2019	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2020	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2021	1-164-858-11	CERAMIC CHIP 22PF	5.00%	50V
C2022	1-164-858-11	CERAMIC CHIP 22PF	5.00%	50V
C2023	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2024	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2025	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2026	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2027	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C2028	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2029	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2030	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2031	1-124-779-00	ELECT CHIP 10UF	20.00%	16V
C2032	1-124-779-00	ELECT CHIP 10UF	20.00%	16V
C2033	1-124-779-00	ELECT CHIP 10UF	20.00%	16V
C2035	1-109-982-11	CERAMIC CHIP 1UF	10.00%	10V
C2036	1-107-823-11	CERAMIC CHIP 0.47UF	10.00%	16V
C2201	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C2202	1-164-870-11	CERAMIC CHIP 68PF	5.00%	50V
C2203	1-164-870-11	CERAMIC CHIP 68PF	5.00%	50V
C2204	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2206	1-126-404-11	ELECT CHIP 4.7UF	20.00%	50V
C2207	1-100-588-21	ELECT CHIP 1000UF	20%	6.3V
C2208	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2210	1-165-621-91	CERAMIC CHIP 0.1UF		50V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C2212	1-100-309-21	ELECT CHIP 22UF	20% 25V	C3013	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2213	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3014	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2214	1-100-740-81	CERAMIC CHIP 390PF	5% 50V	C3019	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2215	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3020	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2216	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3021	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2217	1-127-715-11	CERAMIC CHIP 0.22UF	10% 16V	C3022	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2218	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C3023	1-126-395-11	ELECT CHIP 22UF	20.00% 16V
C2219	1-114-214-81	CERAMIC CHIP 470PF	5% 50V	C3024	1-126-395-11	ELECT CHIP 22UF	20.00% 16V
C2220	1-131-664-91	CERAMIC CHIP 0.15UF	10% 10V	C3027	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C2222	1-112-779-11	CERAMIC CHIP 0.047UF	10% 25V	C3028	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C2225	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3029	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2227	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3030	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2228	1-164-872-11	CERAMIC CHIP 82PF	5.00% 50V	C3031	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2229	1-164-876-11	CERAMIC CHIP 120PF	5.00% 50V	C3032	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2230	1-112-001-81	CERAMIC CHIP 270PF	5% 50V	C3033	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2231	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C3034	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2232	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3035	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2235	1-100-904-11	CERAMIC CHIP 330PF	10% 50V	C3036	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2236	1-165-900-11	ELECT CHIP 100UF	20% 16V	C3039	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2237	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	C3046	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2238	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3047	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2239	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3048	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
C2241	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C3049	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2242	1-117-720-11	CERAMIC CHIP 4.7UF	10V	C3050	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
C2243	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3051	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2244	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3052	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2245	1-165-882-91	CERAMIC CHIP 2.2UF	50V	C3053	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2246	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3054	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2247	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3055	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2248	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3056	1-126-395-11	ELECT CHIP 22UF	20.00% 16V
C2249	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3057	1-126-395-11	ELECT CHIP 22UF	20.00% 16V
C2250	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3062	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C2253	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C3063	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C2254	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C3200	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C2255	1-100-567-81	CERAMIC CHIP 0.01UF	10% 25V	C3202	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C2256	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	C3205	1-125-889-11	CERAMIC CHIP 2.2UF	10% 10V
C2257	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3206	1-125-889-11	CERAMIC CHIP 2.2UF	10% 10V
C2258	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3209	1-125-889-11	CERAMIC CHIP 2.2UF	10% 10V
C2259	1-100-588-21	ELECT CHIP 1000UF	20% 6.3V	C3210	1-125-889-11	CERAMIC CHIP 2.2UF	10% 10V
C3000	1-162-959-11	CERAMIC CHIP 330PF	5.00% 50V	C3213	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C3001	1-162-959-11	CERAMIC CHIP 330PF	5.00% 50V	C3214	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C3004	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C3215	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3005	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C3216	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C3006	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V	C3217	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C3007	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V	C3218	1-125-889-11	CERAMIC CHIP 2.2UF	10% 10V
C3008	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C3219	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C3009	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V	C3222	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C3010	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C3223	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C3011	1-164-505-11	CERAMIC CHIP 2.2UF	16V	C3224	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3012	1-164-505-11	CERAMIC CHIP 2.2UF	16V	C3225	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C3226	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C4033	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3227	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V	C4034	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3234	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V	C4035	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3235	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V	C4036	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3236	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V	C4037	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3238	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C4038	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3239	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C4039	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3240	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C4040	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3242	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C4041	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3243	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C4042	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3244	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C4043	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3245	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4044	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3400	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4045	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3401	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C4046	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3402	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C4047	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3407	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C4048	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3408	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C4050	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V
C3411	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4051	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3414	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4052	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3415	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4053	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3417	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C4054	1-127-715-11	CERAMIC CHIP 0.22UF	10% 16V
C3419	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4055	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3420	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4056	1-126-394-11	ELECT CHIP 10UF	20.00% 16V
C3421	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C4057	1-127-715-11	CERAMIC CHIP 0.22UF	10% 16V
C3422	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C4058	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3423	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C4059	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3424	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4061	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3600	1-165-900-11	ELECT CHIP 100UF	20% 16V	C4064	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C3601	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C4065	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C4001	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C4066	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4002	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C4067	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4004	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C4068	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C4005	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C4069	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C4006	1-127-573-11	CERAMIC CHIP 1UF	10% 16V	C4070	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4008	1-163-037-11	CERAMIC CHIP 0.022UF	10.00% 50V	C4071	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C4011	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4072	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C4014	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4073	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4016	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V	C4074	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4017	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4076	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4018	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V	C4077	1-162-928-11	CERAMIC CHIP 120PF	5.00% 50V
C4020	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4078	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4024	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4080	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4025	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4081	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4026	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4082	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
C4027	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4083	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4028	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4084	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C4029	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4085	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4030	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4086	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C4031	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4087	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C4032	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4088	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C4089	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5525	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4092	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5526	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4093	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C5527	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4094	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5529	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4095	1-112-001-81	CERAMIC CHIP 270PF	5% 50V	C5530	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4096	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5531	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4097	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C5532	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4098	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5533	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4099	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5534	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4101	1-162-917-11	CERAMIC CHIP 15PF	5.00% 50V	C5535	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4102	1-162-917-11	CERAMIC CHIP 15PF	5.00% 50V	C5536	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4103	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5537	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4105	1-127-715-11	CERAMIC CHIP 0.22UF	10% 16V	C5538	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4106	1-115-340-11	CERAMIC CHIP 0.22UF	10.00% 25V	C5539	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4107	1-112-068-11	CERAMIC CHIP 220PF	10% 50V	C5540	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4111	1-126-390-11	ELECT CHIP 22UF	20.00% 6.3V	C5541	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4113	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5542	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4114	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5543	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4122	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C5544	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4123	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5545	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4135	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5546	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4137	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5547	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4138	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5548	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4309	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5551	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4310	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6400	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4500	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6401	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4501	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6402	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4511	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6403	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4516	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6404	1-112-791-11	ELECT CHIP 100UF	20% 16V
C5500	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6405	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C5501	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6406	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C5502	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6407	1-164-868-11	CERAMIC CHIP 56PF	5.00% 50V
C5503	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6408	1-112-791-11	ELECT CHIP 100UF	20% 16V
C5504	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6409	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C5505	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6410	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C5506	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6411	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C5507	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6412	1-164-864-11	CERAMIC CHIP 39PF	5.00% 50V
C5508	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6413	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C5509	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6414	1-164-677-11	CERAMIC CHIP 0.033UF	10.00% 16V
C5510	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6415	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C5511	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6416	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5512	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6417	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C5513	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6418	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C5514	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6420	1-115-412-11	CERAMIC CHIP 680PF	5.00% 25V
C5515	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6421	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V
C5517	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6422	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C5518	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6423	1-127-715-11	CERAMIC CHIP 0.22UF	10% 16V
C5519	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6424	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5521	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6425	1-127-715-11	CERAMIC CHIP 0.22UF	10% 16V
C5523	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6426	1-100-912-11	CERAMIC CHIP 1UF	10% 25V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C6427	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C6492	1-128-994-21	ELECT CHIP 47UF	20% 10V
C6428	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C6493	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6429	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6494	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6430	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V	C6495	1-128-994-21	ELECT CHIP 47UF	20% 10V
C6431	1-114-415-21	ELECT CHIP 100UF	20% 6.3V	C6496	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6432	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6497	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6433	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C6498	1-162-959-11	CERAMIC CHIP 330PF	5.00% 50V
C6434	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C6499	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V
C6435	1-114-415-21	ELECT CHIP 100UF	20% 6.3V	C6500	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6437	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6501	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6438	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	C6502	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6439	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6503	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6440	1-164-868-11	CERAMIC CHIP 56PF	5.00% 50V	C6504	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6441	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V	C6505	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6442	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C6506	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6444	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C6507	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6445	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C6508	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C6446	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6509	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6447	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C6510	1-128-994-21	ELECT CHIP 47UF	20% 10V
C6448	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C6511	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C6449	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6512	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6450	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6513	1-128-994-21	ELECT CHIP 47UF	20% 10V
C6451	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C6514	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6452	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C6515	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C6453	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6516	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6454	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6520	1-127-760-11	CERAMIC CHIP 4.7UF	10% 6.3V
C6455	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6521	1-100-740-81	CERAMIC CHIP 390PF	5% 50V
C6456	1-114-130-11	CERAMIC CHIP 1UF	6.3V	C6522	1-100-740-81	CERAMIC CHIP 390PF	5% 50V
C6457	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6523	1-100-740-81	CERAMIC CHIP 390PF	5% 50V
C6458	1-114-130-11	CERAMIC CHIP 1UF	6.3V	C6524	1-100-740-81	CERAMIC CHIP 390PF	5% 50V
C6459	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6525	1-100-740-81	CERAMIC CHIP 390PF	5% 50V
C6460	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6526	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
C6463	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7101	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C6465	1-114-130-11	CERAMIC CHIP 1UF	6.3V	C7102	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6466	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7104	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6468	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C7105	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6469	1-114-130-11	CERAMIC CHIP 1UF	6.3V	C7106	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6471	1-127-573-11	CERAMIC CHIP 1UF	10% 16V	C7107	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6472	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C7108	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6481	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7109	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6482	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C7110	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6483	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C7111	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6484	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C7112	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6485	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7113	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6486	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C7114	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6487	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7115	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6488	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7116	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6489	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7118	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C6490	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7122	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6491	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7123	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C7124	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7236	1-104-905-11	DOUBLE LAYER 0.22F	5.5V
C7125	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7300	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7126	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7301	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7127	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7302	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7128	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7303	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C7132	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C7304	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7135	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C7305	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C7136	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7306	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7137	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7307	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7138	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C7308	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7139	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7309	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7140	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7310	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7141	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7311	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7142	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C7313	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7143	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7314	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C7144	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7315	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7145	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	< CONNECTOR >			
C7200	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN3000	*1-417-602-11	SOCKET 21PIN	
C7201	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	CN3002	*1-417-602-11	SOCKET 21PIN	
C7202	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN4000	*1-818-656-21	HEADER ASSEMBLY 30P	
C7203	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN4001	*1-819-441-11	PWB HEADER, 13P	
C7204	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN4004	*1-779-936-51	CONNECTOR, FFC/FPC 18P	
C7205	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	CN4005	*1-820-180-11	HEADER ASSEMBLY (PRINT PWB) 3P	
C7208	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN4500	*1-817-804-11	CONNECTOR, D SUB 15P	
C7209	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	CN5500	*1-821-188-11	HDMI CONNECTOR	
C7210	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN5501	*1-821-188-11	HDMI CONNECTOR	
C7211	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	CN6400	*1-819-443-11	HEADER ASSEMBLY FOR PWB 15P	
C7212	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN6401	*1-819-335-11	HEADER ASSEMBLY FOR PWB, 9P	
C7213	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	CN6403	*1-819-475-11	HEADER ASSEMBLY FOR PWB 7P	
C7214	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	CN7300	*1-793-769-22	CONNECTOR, CARD (PCMCIA CARD)	
C7215	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	CN7501	*1-820-209-11	MEMORY STICK CONNECTOR	
C7216	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	< DIODE >			
C7217	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	D2201	6-501-633-01	DIODE PZU33B	
C7218	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D2202	6-501-614-01	DIODE PZU5.6B2	
C7219	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D2206	8-719-066-14	DIODE HSC277-TRF-E	
C7220	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3000	6-501-622-01	DIODE PZU12B2	
C7221	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3001	6-501-622-01	DIODE PZU12B2	
C7222	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3002	6-501-622-01	DIODE PZU12B2	
C7223	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3003	6-501-622-01	DIODE PZU12B2	
C7224	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	D3004	6-501-619-01	DIODE PZU9.1B2	
C7225	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	D3005	6-501-623-01	DIODE PZU13B2	
C7226	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3006	6-501-619-01	DIODE PZU9.1B2	
C7227	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3007	6-501-619-01	DIODE PZU9.1B2	
C7228	1-164-860-11	CERAMIC CHIP 27PF	5.00% 50V	D3008	6-501-619-01	DIODE PZU9.1B2	
C7229	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V	D3009	6-501-614-01	DIODE PZU5.6B2	
C7231	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	D3010	6-501-619-01	DIODE PZU9.1B2	
C7232	1-164-840-11	CERAMIC CHIP 1PF	0.25PF 50V	D3011	6-501-620-01	DIODE PZU10B2	
C7233	1-164-840-11	CERAMIC CHIP 1PF	0.25PF 50V				
C7234	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V				
C7235	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V				

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
D3012	6-501-620-01	DIODE PZU10B2		D4015	6-501-614-01	DIODE PZU5.6B2	
D3013	6-501-619-01	DIODE PZU9.1B2		D4020	6-501-614-01	DIODE PZU5.6B2	
D3014	6-501-619-01	DIODE PZU9.1B2		D4021	6-501-614-01	DIODE PZU5.6B2	
D3015	6-501-619-01	DIODE PZU9.1B2		D4500	6-501-614-01	DIODE PZU5.6B2	
D3016	6-501-619-01	DIODE PZU9.1B2		D4501	6-501-614-01	DIODE PZU5.6B2	
D3017	6-501-619-01	DIODE PZU9.1B2		D4502	6-501-614-01	DIODE PZU5.6B2	
D3018	6-501-619-01	DIODE PZU9.1B2		D4503	6-500-335-01	DIODE MC2838-T112-1	
D3019	6-501-619-01	DIODE PZU9.1B2		D4504	6-501-614-01	DIODE PZU5.6B2	
D3020	6-501-619-01	DIODE PZU9.1B2		D4505	6-501-614-01	DIODE PZU5.6B2	
D3021	6-501-619-01	DIODE PZU9.1B2		D4506	6-501-614-01	DIODE PZU5.6B2	
D3022	6-501-619-01	DIODE PZU9.1B2		D4507	6-501-614-01	DIODE PZU5.6B2	
D3023	6-501-619-01	DIODE PZU9.1B2		D4508	6-501-614-01	DIODE PZU5.6B2	
D3024	6-501-619-01	DIODE PZU9.1B2		D4509	6-501-614-01	DIODE PZU5.6B2	
D3025	6-501-619-01	DIODE PZU9.1B2		D4510	6-501-614-01	DIODE PZU5.6B2	
D3026	6-501-619-01	DIODE PZU9.1B2		D4511	6-501-614-01	DIODE PZU5.6B2	
D3027	6-501-619-01	DIODE PZU9.1B2		D4512	6-501-614-01	DIODE PZU5.6B2	
D3028	6-501-619-01	DIODE PZU9.1B2		D4513	6-501-614-01	DIODE PZU5.6B2	
D3029	6-501-614-01	DIODE PZU5.6B2		D5500	8-719-058-24	DIODE RB501V-40TE-17	
D3030	6-501-623-01	DIODE PZU13B2		D5502	8-719-404-50	DIODE MA111-TX	
D3031	6-501-619-01	DIODE PZU9.1B2		D5503	8-719-404-50	DIODE MA111-TX	
D3032	6-501-623-01	DIODE PZU13B2		D5505	8-719-404-50	DIODE MA111-TX	
D3033	6-501-614-01	DIODE PZU5.6B2		D5506	8-719-404-50	DIODE MA111-TX	
D3034	6-501-614-01	DIODE PZU5.6B2		D6402	6-501-657-01	DIODE MA24D5000BS0	
D3035	6-501-614-01	DIODE PZU5.6B2		D6403	6-501-657-01	DIODE MA24D5000BS0	
D3036	6-501-614-01	DIODE PZU5.6B2		D6404	6-500-334-01	DIODE MC2836-T112-1	
D3037	6-501-614-01	DIODE PZU5.6B2		D6406	6-501-528-01	DIODE 1SMA5915BT3G	
D3038	6-501-614-01	DIODE PZU5.6B2		D6407	6-501-528-01	DIODE 1SMA5915BT3G	
D3039	6-501-619-01	DIODE PZU9.1B2		D6410	6-501-336-01	DIODE RSX201L-30TE25	
D3040	6-501-619-01	DIODE PZU9.1B2		D6411	6-501-336-01	DIODE RSX201L-30TE25	
D3041	6-501-619-01	DIODE PZU9.1B2		D6415	6-501-623-01	DIODE PZU13B2	
D3042	6-501-619-01	DIODE PZU9.1B2		D6416	6-501-336-01	DIODE RSX201L-30TE25	
D3202	6-501-619-01	DIODE PZU9.1B2		D6417	8-719-404-50	DIODE MA111-TX	
D3203	6-501-619-01	DIODE PZU9.1B2		D6418	6-500-334-01	DIODE MC2836-T112-1	
D3206	8-719-404-50	DIODE MA111-TX		D6419	6-501-336-01	DIODE RSX201L-30TE25	
D3208	6-500-335-01	DIODE MC2838-T112-1		D6420	8-719-404-50	DIODE MA111-TX	
D3209	8-719-404-50	DIODE MA111-TX		D6421	6-501-623-01	DIODE PZU13B2	
D3210	8-719-404-50	DIODE MA111-TX		D6422	6-501-614-01	DIODE PZU5.6B2	
D3211	8-719-404-50	DIODE MA111-TX		D6423	6-501-614-01	DIODE PZU5.6B2	
D3212	8-719-404-50	DIODE MA111-TX		D6424	6-501-614-01	DIODE PZU5.6B2	
D3213	6-501-619-01	DIODE PZU9.1B2		D6425	6-501-614-01	DIODE PZU5.6B2	
D3214	8-719-404-50	DIODE MA111-TX		D6426	6-501-614-01	DIODE PZU5.6B2	
D4000	8-719-404-50	DIODE MA111-TX		D6427	6-501-614-01	DIODE PZU5.6B2	
D4002	8-719-404-50	DIODE MA111-TX		D6428	6-501-614-01	DIODE PZU5.6B2	
D4003	8-719-404-50	DIODE MA111-TX		D6430	6-501-336-01	DIODE RSX201L-30TE25	
D4008	8-719-404-50	DIODE MA111-TX		D7200	8-719-041-97	DIODE MA113-(TX)	
D4009	8-719-404-50	DIODE MA111-TX		ET2200	1-780-336-11	EARTH TERMINAL	
D4010	6-500-335-01	DIODE MC2838-T112-1		ET2201	1-780-336-11	EARTH TERMINAL	
D4012	6-500-335-01	DIODE MC2838-T112-1		ET6400	1-780-336-11	EARTH TERMINAL	
D4013	6-501-614-01	DIODE PZU5.6B2		ET6401	1-780-336-11	EARTH TERMINAL	
D4014	6-501-614-01	DIODE PZU5.6B2		ET6403	1-780-336-11	EARTH TERMINAL	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

B1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
< FUSE >				FB6406	1-414-445-11	FERRITE	OUI
FB4500	Δ 1-576-646-11	FUSE	0.5A 50V	FB6407	1-414-445-11	FERRITE	OUI
< FERRITE BEAD >				FB6408	1-414-445-11	FERRITE	OUI
FB2000	1-400-834-11	FERRITE	OUI	FB6409	1-414-445-11	FERRITE	OUI
FB2001	1-400-834-11	FERRITE	OUI	FB6410	1-400-110-21	FERRITE	OUI
FB2002	1-400-834-11	FERRITE	OUI	FB6411	1-400-110-21	FERRITE	OUI
FB2003	1-400-834-11	FERRITE	OUI	FB7100	1-469-869-21	FERRITE	OUI
FB2004	1-400-834-11	FERRITE	OUI	FB7101	1-469-869-21	FERRITE	OUI
FB2005	1-400-834-11	FERRITE	OUI	FB7102	1-469-869-21	FERRITE	OUI
FB2006	1-400-834-11	FERRITE	OUI	FB7103	1-469-869-21	FERRITE	OUI
FB2007	1-400-834-11	FERRITE	OUI	FB7104	1-400-244-11	FERRITE	OUI
FB2008	1-400-834-11	FERRITE	OUI	FB7105	1-400-244-11	FERRITE	OUI
FB2009	1-400-834-11	FERRITE	OUI	FB7106	1-400-244-11	FERRITE	OUI
FB2010	1-400-834-11	FERRITE	OUI	FB7107	1-400-244-11	FERRITE	OUI
FB2011	1-400-244-11	FERRITE	OUI	FB7108	1-400-834-11	FERRITE	OUI
FB2012	1-400-244-11	FERRITE	OUI	FB7109	1-400-834-11	FERRITE	OUI
FB2200	1-469-185-11	FERRITE	OUI	FB7110	1-400-834-11	FERRITE	OUI
FB2201	1-469-185-11	FERRITE	OUI	FB7111	1-400-834-11	FERRITE	OUI
FB2202	1-469-869-21	FERRITE	OUI	FB7112	1-400-834-11	FERRITE	OUI
FB3001	1-414-760-21	FERRITE	OUI	FB7113	1-400-834-11	FERRITE	OUI
FB3401	1-400-834-11	FERRITE	OUI	FB7114	1-400-834-11	FERRITE	OUI
FB3402	1-400-244-11	FERRITE	OUI	FB7115	1-400-834-11	FERRITE	OUI
FB4000	1-400-833-21	FERRITE	OUI	FB7116	1-400-834-11	FERRITE	OUI
FB4001	1-400-833-21	FERRITE	OUI	FB7117	1-400-834-11	FERRITE	OUI
FB4002	1-400-833-21	FERRITE	OUI	FB7118	1-469-869-21	FERRITE	OUI
FB4003	1-400-833-21	FERRITE	OUI	FB7200	1-400-244-11	FERRITE	OUI
FB4004	1-400-833-21	FERRITE	OUI	FB7201	1-400-244-11	FERRITE	OUI
FB4005	1-400-833-21	FERRITE	OUI	FB7202	1-400-244-11	FERRITE	OUI
FB4006	1-400-833-21	FERRITE	OUI	FB7300	1-400-834-11	FERRITE	OUI
FB4007	1-400-833-21	FERRITE	OUI	FB7301	1-400-834-11	FERRITE	OUI
FB4008	1-400-833-21	FERRITE	OUI	FB7302	1-400-834-11	FERRITE	OUI
FB4010	1-414-760-21	FERRITE	OUI	FB7303	1-400-834-11	FERRITE	OUI
FB4011	1-414-760-21	FERRITE	OUI	FB7304	1-400-834-11	FERRITE	OUI
FB4012	1-414-760-21	FERRITE	OUI	FB7305	1-400-834-11	FERRITE	OUI
FB4013	1-414-760-21	FERRITE	OUI	FB7306	1-400-834-11	FERRITE	OUI
FB4014	1-414-760-21	FERRITE	OUI	FB7307	1-400-834-11	FERRITE	OUI
FB4015	1-414-760-21	FERRITE	OUI	FB7308	1-400-834-11	FERRITE	OUI
FB4016	1-414-760-21	FERRITE	OUI	FB7309	1-469-869-21	FERRITE	OUI
FB4021	1-400-807-21	FERRITE	OUI	< IC >			
FB4022	1-400-807-21	FERRITE	OUI	IC2000	8-753-264-52	IC CXD1968R-T6	
FB4503	1-400-141-22	FERRITE	OUI	IC2002	6-709-932-01	IC MM3141CNRE	
FB5500	1-414-234-22	FERRITE	OUI	IC2200	6-704-747-01	IC TDA9886TS/V4,118	
FB5501	1-414-234-22	FERRITE	OUI	IC2202	6-709-257-01	IC 74LVC4066PW	
FB6400	1-400-915-21	FERRITE	OUI	IC2203	8-759-082-60	IC TC7S66FU	
FB6401	1-400-089-21	FERRITE	OUI	IC2204	6-709-607-01	IC LA5795T-TLM-E	
FB6403	1-469-324-21	FERRITE	OUI	IC3200	8-759-359-49	IC NJM3414AV(TE2)	
FB6404	1-414-445-11	FERRITE	OUI	IC3201	6-709-927-01	IC RT8H225C-TP-2	
FB6405	1-414-445-11	FERRITE	OUI	IC3400	6-710-905-01	IC AK4388ET-E2	
				IC3402	8-759-278-58	IC NJM4558V-TE2	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
IC3600	8-759-385-76	IC MC14052 BDR2		< COIL >			
IC4000	8-759-082-60	IC TC7S66FU		L2000	1-469-842-21	INDUCTOR	0.47UH
IC4001	6-701-173-01	IC MC74LVXT4053DTR2		L2001	1-412-058-11	INDUCTOR	10UH
IC4002	8-759-701-01	IC NJM2904M		L2002	1-412-058-11	INDUCTOR	10UH
IC4003	6-710-023-01	IC CAT24C32WI-GT3		L2003	1-412-058-11	INDUCTOR	10UH
				L2004	1-412-058-11	INDUCTOR	10UH
IC4004	6-703-175-01	IC PST3629UL					
IC4005	6-807-754-01	IC CXD9922R		L2005	1-412-058-11	INDUCTOR	10UH
IC4006	8-759-701-01	IC NJM2904M		L2006	1-412-058-11	INDUCTOR	10UH
IC4008	6-706-482-01	IC TC7SH00FU(T5RSOYJF)		L2200	1-412-006-31	INDUCTOR	10UH
IC4009	6-705-580-01	IC PST3616UL		L2201	1-414-580-21	INDUCTOR	100NH
				L2202	1-414-580-21	INDUCTOR	100NH
IC4500	6-701-162-01	IC MC74LVX259DTR2					
IC4501	6-710-018-01	IC CAT24C02WI-GT3		L2203	1-412-987-31	INDUCTOR	4.7UH
IC4502	6-701-166-01	IC MC74LVX4051DTR2		L2204	1-414-580-21	INDUCTOR	100NH
IC4503	6-701-162-01	IC MC74LVX259DTR2		L2205	1-412-006-31	INDUCTOR	10UH
IC5500	6-710-018-01	IC CAT24C02WI-GT3		L2206	1-412-987-31	INDUCTOR	4.7UH
				L2207	1-414-521-11	INDUCTOR	10UH
IC5501	6-709-806-01	IC IP4776CZ38					
IC5502	6-710-018-01	IC CAT24C02WI-GT3		L2208	1-410-993-42	INDUCTOR	1UH
IC5503	6-709-806-01	IC IP4776CZ38		L2209	1-412-006-31	INDUCTOR	10UH
IC6400	6-706-046-01	IC TK11185CSCL-G		L2210	1-410-993-42	INDUCTOR	1UH
IC6401	6-710-922-01	IC BD9853AFV-E2		L3200	1-412-058-11	INDUCTOR	10UH
				L3600	1-412-058-11	INDUCTOR	10UH
IC6402	6-710-922-01	IC BD9853AFV-E2					
IC6403	6-705-403-01	IC PQ070XZ01ZPH		L4000	1-456-984-11	INDUCTOR	0UH
IC6404	6-711-746-01	IC LD1117ASTR		L4001	1-456-984-11	INDUCTOR	0UH
IC6405	6-705-403-01	IC PQ070XZ01ZPH		L4002	1-456-984-11	INDUCTOR	0UH
IC7100	6-709-214-01	IC UPD61123F1-100-KA3-A		L4003	1-412-990-41	INDUCTOR	8.2UH
				L4004	1-456-984-11	INDUCTOR	0UH
IC7200	6-711-534-01	IC NAND128W3A2BN6F					
IC7201	6-705-306-01	IC HYB25DC256160CE-6		L4005	1-456-984-11	INDUCTOR	0UH
IC7202	6-708-916-01	IC ICS7150MLFT		L4006	1-412-052-21	INDUCTOR	1UH
IC7203	6-700-108-01	IC RV5C387A-E2-FB		L4007	1-400-180-21	FERRITE	0UH
IC7300	6-706-482-01	IC TC7SH00FU(T5RSOYJF)		L5500	1-414-394-11	INDUCTOR	2.2UH
				L5501	1-414-394-11	INDUCTOR	2.2UH
IC7301	6-707-850-01	IC TC74LCX245FT(EKJ)					
IC7302	6-706-482-01	IC TC7SH00FU(T5RSOYJF)		L5502	1-414-394-11	INDUCTOR	2.2UH
IC7303	6-707-846-01	IC TC74LCX14FT(EKJ)		L5503	1-414-394-11	INDUCTOR	2.2UH
IC7304	6-707-853-01	IC TC74LCX541FT(EKJ)		L5504	1-414-394-11	INDUCTOR	2.2UH
IC7305	6-707-853-01	IC TC74LCX541FT(EKJ)		L5505	1-414-394-11	INDUCTOR	2.2UH
				L5506	1-414-394-11	INDUCTOR	2.2UH
IC7306	6-707-853-01	IC TC74LCX541FT(EKJ)					
IC7307	6-707-853-01	IC TC74LCX541FT(EKJ)		L5507	1-414-394-11	INDUCTOR	2.2UH
IC7308	6-707-853-01	IC TC74LCX541FT(EKJ)		L5508	1-414-394-11	INDUCTOR	2.2UH
IC7309	6-707-853-01	IC TC74LCX541FT(EKJ)		L6400	1-457-549-11	INDUCTOR	4.9UH
IC7310	6-710-593-01	IC MIC2025-1YM		L6401	1-457-439-11	INDUCTOR	4.7UH
				L6402	1-414-398-11	INDUCTOR	10UH
< SOCKET >							
J3000	1-780-368-11	S TERMINAL BLOCK (RIGHT ANGLE)		L6403	1-457-439-11	INDUCTOR	4.7UH
J3001	1-819-327-31	PHONO JACK 2P		L6404	1-457-439-11	INDUCTOR	4.7UH
J3002	1-819-327-31	PHONO JACK 2P		L6405	1-457-549-11	INDUCTOR	4.9UH
J3003	1-820-021-11	JACK		L6406	1-457-455-11	INDUCTOR	10UH
J3004	1-821-055-31	PHONO JACK 5P		L6407	1-457-455-11	INDUCTOR	10UH
J3201	1-815-325-11	JACK		L6408	1-457-455-11	INDUCTOR	10UH
				L6409	1-457-455-11	INDUCTOR	10UH
				L6410	1-412-052-21	INDUCTOR	1UH

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

B1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
L6411	1-412-052-21	INDUCTOR	1UH	Q4006	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
L6412	1-412-052-21	INDUCTOR	1UH	Q4007	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L6413	1-414-394-11	INDUCTOR	2.2UH	Q4008	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L6414	1-412-052-21	INDUCTOR	1UH	Q4009	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
L6415	1-412-052-21	INDUCTOR	1UH	Q4010	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L6416	1-412-052-21	INDUCTOR	1UH	Q4011	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L6417	1-412-052-21	INDUCTOR	1UH	Q4013	8-729-050-10	TRANSISTOR PMBF170-215	
L6418	1-412-052-21	INDUCTOR	1UH	Q4014	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
L6419	1-412-052-21	INDUCTOR	1UH	Q4015	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
L6420	1-412-052-21	INDUCTOR	1UH	Q5500	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L6421	1-412-052-21	INDUCTOR	1UH	Q5501	8-729-421-22	TRANSISTOR UN2211	
L6422	1-412-052-21	INDUCTOR	1UH	Q5502	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L6423	1-414-394-11	INDUCTOR	2.2UH	Q5503	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L6424	1-414-394-11	INDUCTOR	2.2UH	Q5504	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L7100	1-414-398-11	INDUCTOR	10UH	Q5505	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L7200	1-412-008-31	INDUCTOR	15UH	Q5506	8-729-027-43	TRANSISTOR DTC114EKA-T146	
< PROTECTOR MODULE >				Q5507	8-729-028-96	TRANSISTOR DTC114EUA-T106	
PS6400	Δ 1-576-736-41	IC LINK	3.15A 24V	Q5508	8-729-028-96	TRANSISTOR DTC114EUA-T106	
PS6401	Δ 1-576-736-41	IC LINK	3.15A 24V	Q6400	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
PS6402	Δ 1-576-736-41	IC LINK	3.15A 24V	Q6401	8-729-027-43	TRANSISTOR DTC114EKA-T146	
< TRANSISTOR >				Q6402	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
Q2200	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		Q6403	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q2201	6-551-392-01	TRANSISTOR RT6N140C-TP-1		Q6404	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q2203	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		Q6405	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
Q2204	8-729-038-28	TRANSISTOR RT1N441C-TP-1		Q6406	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
Q2205	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		Q6407	6-550-828-01	TRANSISTOR RSQ035P03TR	
Q2206	8-729-027-43	TRANSISTOR DTC114EKA-T146		Q6408	6-550-828-01	TRANSISTOR RSQ035P03TR	
Q2209	8-729-038-28	TRANSISTOR RT1N441C-TP-1		Q6409	6-550-355-01	TRANSISTOR RTQ045N03TR	
Q3000	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		Q6410	6-550-355-01	TRANSISTOR RTQ045N03TR	
Q3001	8-729-120-28	TRANSISTOR 2SC1623-L5L6		Q6411	6-550-828-01	TRANSISTOR RSQ035P03TR	
Q3002	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		Q6412	6-551-334-01	TRANSISTOR RTL035N03TR	
Q3003	8-729-120-28	TRANSISTOR 2SC1623-L5L6		Q6413	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
Q3200	6-551-677-01	TRANSISTOR RTAN140M-T111-1		Q6414	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
Q3201	6-551-677-01	TRANSISTOR RTAN140M-T111-1		Q6415	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q3202	6-550-586-01	TRANSISTOR 2PA1576R-115		Q6416	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
Q3205	8-729-422-29	TRANSISTOR 2SD601A-S		Q6417	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
Q3206	8-729-422-29	TRANSISTOR 2SD601A-S		Q6418	6-550-369-01	TRANSISTOR TPC8109 (TE12L)	
Q3207	8-729-038-28	TRANSISTOR RT1N441C-TP-1		Q6419	6-550-585-01	TRANSISTOR 2PC4081R-115	
Q3208	8-729-421-19	TRANSISTOR UN2213		Q6420	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q3600	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		Q6421	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q3601	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		Q6422	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
Q4000	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		Q6423	6-550-369-01	TRANSISTOR TPC8109 (TE12L)	
Q4001	8-729-028-73	TRANSISTOR DTA114EUA-T106		Q6424	6-550-585-01	TRANSISTOR 2PC4081R-115	
Q4002	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		Q6425	6-550-585-01	TRANSISTOR 2PC4081R-115	
Q4003	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		Q7200	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
Q4004	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		Q7201	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
Q4005	8-729-038-28	TRANSISTOR RT1N441C-TP-1		Q7202	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
				Q7203	8-729-028-96	TRANSISTOR DTC114EUA-T106	
				Q7204	8-729-028-86	TRANSISTOR DTA143EUA-T106	

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
< RESISTOR >						R2236	1-218-951-11	RES-CHIP	680	5%	1/16W
R2000	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2238	1-218-990-81	SHORT CHIP	0		
	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2239	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2240	1-218-954-11	RES-CHIP	1.2K	5%	1/16W
	1-218-941-81	RES-CHIP	100	5%	1/16W	R2242	1-218-939-11	RES-CHIP	68	5%	1/16W
	1-218-941-81	RES-CHIP	100	5%	1/16W						
R2006	1-218-953-11	RES-CHIP	1K	5%	1/16W	R2243	1-218-939-11	RES-CHIP	68	5%	1/16W
R2008	1-218-941-81	RES-CHIP	100	5%	1/16W	R2244	1-218-946-11	RES-CHIP	270	5%	1/16W
R2010	1-218-989-11	RES-CHIP	1M	5%	1/16W	R2245	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2011	1-218-941-81	RES-CHIP	100	5%	1/16W	R2247	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2013	1-218-937-11	RES-CHIP	47	5%	1/16W	R2248	1-218-990-81	SHORT CHIP	0		
R2014	1-218-941-81	RES-CHIP	100	5%	1/16W	R2249	1-218-944-11	RES-CHIP	180	5%	1/16W
R2015	1-218-941-81	RES-CHIP	100	5%	1/16W	R2250	1-218-933-11	RES-CHIP	22	5%	1/16W
R2016	1-216-864-11	SHORT CHIP	0			R2251	1-218-953-11	RES-CHIP	1K	5%	1/16W
R2017	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2252	1-218-990-81	SHORT CHIP	0		
R2018	1-218-941-81	RES-CHIP	100	5%	1/16W	R2259	1-218-990-81	SHORT CHIP	0		
R2019	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2260	1-218-990-81	SHORT CHIP	0		
R2021	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2264	1-218-990-81	SHORT CHIP	0		
R2022	1-218-941-81	RES-CHIP	100	5%	1/16W	R2267	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2023	1-218-941-81	RES-CHIP	100	5%	1/16W	R2270	1-218-953-11	RES-CHIP	1K	5%	1/16W
R2024	1-218-941-81	RES-CHIP	100	5%	1/16W	R2274	1-216-864-11	SHORT CHIP	0		
R2026	1-216-864-11	SHORT CHIP	0			R2275	1-216-864-11	SHORT CHIP	0		
R2027	1-216-864-11	SHORT CHIP	0			R2276	1-216-864-11	SHORT CHIP	0		
R2029	1-216-864-11	SHORT CHIP	0			R2279	1-218-990-81	SHORT CHIP	0		
R2030	1-218-989-11	RES-CHIP	1M	5%	1/16W	R2280	1-218-990-81	SHORT CHIP	0		
R2201	1-218-967-11	RES-CHIP	15K	5%	1/16W	R2283	1-218-990-81	SHORT CHIP	0		
R2202	1-218-953-11	RES-CHIP	1K	5%	1/16W	R2285	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2208	1-218-990-81	SHORT CHIP	0			R2288	1-218-990-81	SHORT CHIP	0		
R2211	1-218-990-81	SHORT CHIP	0			R2291	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2212	1-218-990-81	SHORT CHIP	0			R2293	1-218-990-81	SHORT CHIP	0		
R2213	1-218-990-81	SHORT CHIP	0			R2295	1-218-990-81	SHORT CHIP	0		
R2216	1-218-990-81	SHORT CHIP	0			R2297	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2217	1-218-990-81	SHORT CHIP	0			R2298	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R2218	1-218-990-81	SHORT CHIP	0			R2299	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R2220	1-218-949-11	RES-CHIP	470	5%	1/16W	R2300	1-218-990-81	SHORT CHIP	0		
R2222	1-216-830-11	METAL CHIP	5.6K	5%	1/10W	R2301	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R2223	1-218-943-11	RES-CHIP	150	5%	1/16W	R3000	1-216-295-91	SHORT CHIP	0		
R2224	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R3001	1-216-864-11	SHORT CHIP	0		
R2225	1-218-966-11	RES-CHIP	12K	5%	1/16W	R3002	1-216-815-11	METAL CHIP	330	5%	1/10W
R2226	1-218-949-11	RES-CHIP	470	5%	1/16W	R3003	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2227	1-218-990-81	SHORT CHIP	0			R3004	1-216-815-11	METAL CHIP	330	5%	1/10W
R2228	1-218-941-81	RES-CHIP	100	5%	1/16W	R3005	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2229	1-218-990-81	SHORT CHIP	0			R3006	1-216-022-00	RES-CHIP	75	5%	1/10W
R2230	1-218-941-81	RES-CHIP	100	5%	1/16W	R3008	1-216-022-00	RES-CHIP	75	5%	1/10W
R2231	1-218-977-11	RES-CHIP	100K	5%	1/16W	R3009	1-216-022-00	RES-CHIP	75	5%	1/10W
R2232	1-218-945-11	RES-CHIP	220	5%	1/16W	R3010	1-216-022-00	RES-CHIP	75	5%	1/10W
R2233	1-218-956-11	RES-CHIP	1.8K	5%	1/16W	R3011	1-216-022-00	RES-CHIP	75	5%	1/10W
R2234	1-218-941-81	RES-CHIP	100	5%	1/16W	R3012	1-218-285-11	METAL CHIP	75	5%	1/10W
R2235	1-218-990-81	SHORT CHIP	0			R3013	1-216-811-11	METAL CHIP	150	5%	1/10W
						R3014	1-216-815-11	METAL CHIP	330	5%	1/10W
						R3015	1-216-815-11	METAL CHIP	330	5%	1/10W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R3016	1-216-811-11	METAL CHIP	150	5%	1/10W	R3071	1-216-815-11	METAL CHIP	330	5%	1/10W
R3017	1-216-821-11	METAL CHIP	1K	5%	1/10W	R3072	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3018	1-216-821-11	METAL CHIP	1K	5%	1/10W	R3073	1-216-809-11	METAL CHIP	100	5%	1/10W
R3019	1-216-813-11	METAL CHIP	220	5%	1/10W	R3074	1-216-809-11	METAL CHIP	100	5%	1/10W
R3020	1-216-864-11	SHORT CHIP	0			R3075	1-216-809-11	METAL CHIP	100	5%	1/10W
R3021	1-216-813-11	METAL CHIP	220	5%	1/10W	R3076	1-216-853-11	METAL CHIP	470K	5%	1/10W
R3022	1-216-864-11	SHORT CHIP	0			R3077	1-216-853-11	METAL CHIP	470K	5%	1/10W
R3023	1-216-025-11	RES-CHIP	100	5%	1/10W	R3078	1-216-864-11	SHORT CHIP	0		
R3024	1-216-033-00	RES-CHIP	220	5%	1/10W	R3079	1-216-864-11	SHORT CHIP	0		
R3025	1-216-025-11	RES-CHIP	100	5%	1/10W	R3080	1-216-864-11	SHORT CHIP	0		
R3026	1-216-025-11	RES-CHIP	100	5%	1/10W	R3081	1-216-864-11	SHORT CHIP	0		
R3027	1-216-025-11	RES-CHIP	100	5%	1/10W	R3082	1-216-864-11	SHORT CHIP	0		
R3028	1-216-022-00	RES-CHIP	75	5%	1/10W	R3083	1-216-864-11	SHORT CHIP	0		
R3029	1-216-025-11	RES-CHIP	100	5%	1/10W	R3084	1-216-025-11	RES-CHIP	100	5%	1/10W
R3030	1-216-864-11	SHORT CHIP	0			R3085	1-216-025-11	RES-CHIP	100	5%	1/10W
R3031	1-216-864-11	SHORT CHIP	0			R3086	1-216-033-00	RES-CHIP	220	5%	1/10W
R3032	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3087	1-216-025-11	RES-CHIP	100	5%	1/10W
R3033	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3088	1-216-025-11	RES-CHIP	100	5%	1/10W
R3034	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3089	1-216-025-11	RES-CHIP	100	5%	1/10W
R3035	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3090	1-216-022-00	RES-CHIP	75	5%	1/10W
R3036	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3091	1-216-025-11	RES-CHIP	100	5%	1/10W
R3037	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3092	1-216-029-00	RES-CHIP	150	5%	1/10W
R3038	1-216-809-11	METAL CHIP	100	5%	1/10W	R3093	1-216-029-00	RES-CHIP	150	5%	1/10W
R3039	1-216-864-11	SHORT CHIP	0			R3094	1-216-029-00	RES-CHIP	150	5%	1/10W
R3040	1-216-811-11	METAL CHIP	150	5%	1/10W	R3095	1-216-853-11	METAL CHIP	470K	5%	1/10W
R3041	1-216-817-11	METAL CHIP	470	5%	1/10W	R3096	1-216-853-11	METAL CHIP	470K	5%	1/10W
R3042	1-216-811-11	METAL CHIP	150	5%	1/10W	R3097	1-216-853-11	METAL CHIP	470K	5%	1/10W
R3043	1-216-840-11	METAL CHIP	39K	5%	1/10W	R3098	1-216-853-11	METAL CHIP	470K	5%	1/10W
R3044	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3099	1-216-029-00	RES-CHIP	150	5%	1/10W
R3045	1-216-049-11	RES-CHIP	1K	5%	1/10W	R3100	1-216-029-00	RES-CHIP	150	5%	1/10W
R3046	1-216-049-11	RES-CHIP	1K	5%	1/10W	R3101	1-216-029-00	RES-CHIP	150	5%	1/10W
R3047	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3102	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3048	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3103	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3049	1-216-864-11	SHORT CHIP	0			R3104	1-216-811-11	METAL CHIP	150	5%	1/10W
R3050	1-216-864-11	SHORT CHIP	0			R3105	1-216-817-11	METAL CHIP	470	5%	1/10W
R3051	1-216-864-11	SHORT CHIP	0			R3106	1-216-811-11	METAL CHIP	150	5%	1/10W
R3052	1-216-864-11	SHORT CHIP	0			R3107	1-216-840-11	METAL CHIP	39K	5%	1/10W
R3053	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3108	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3054	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3206	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3059	1-216-049-11	RES-CHIP	1K	5%	1/10W	R3207	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3060	1-216-049-11	RES-CHIP	1K	5%	1/10W	R3208	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3061	1-216-813-11	METAL CHIP	220	5%	1/10W	R3209	1-218-973-11	RES-CHIP	47K	5%	1/16W
R3062	1-216-295-91	SHORT CHIP	0			R3212	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3063	1-216-022-00	RES-CHIP	75	5%	1/10W	R3213	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3065	1-216-022-00	RES-CHIP	75	5%	1/10W	R3214	1-218-973-11	RES-CHIP	47K	5%	1/16W
R3066	1-216-022-00	RES-CHIP	75	5%	1/10W	R3217	1-218-973-11	RES-CHIP	47K	5%	1/16W
R3067	1-216-022-00	RES-CHIP	75	5%	1/10W	R3218	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3068	1-216-022-00	RES-CHIP	75	5%	1/10W	R3219	1-218-973-11	RES-CHIP	47K	5%	1/16W
R3069	1-216-815-11	METAL CHIP	330	5%	1/10W	R3222	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3070	1-216-049-11	RES-CHIP	1K	5%	1/10W	R3223	1-218-965-11	RES-CHIP	10K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R3224	1-218-977-11	RES-CHIP	100K	5%	1/16W	R3605	1-218-990-81	SHORT CHIP	0		
R3225	1-216-809-11	METAL CHIP	100	5%	1/10W	R3606	1-218-990-81	SHORT CHIP	0		
R3226	1-216-809-11	METAL CHIP	100	5%	1/10W	R3607	1-218-990-81	SHORT CHIP	0		
R3227	1-216-813-11	METAL CHIP	220	5%	1/10W	R3608	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3228	1-216-813-11	METAL CHIP	220	5%	1/10W	R3609	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3234	1-216-864-11	SHORT CHIP	0			R3610	1-218-941-81	RES-CHIP	100	5%	1/16W
R3235	1-216-864-11	SHORT CHIP	0			R3611	1-218-941-81	RES-CHIP	100	5%	1/16W
R3236	1-216-864-11	SHORT CHIP	0			R3612	1-218-941-81	RES-CHIP	100	5%	1/16W
R3238	1-216-817-11	METAL CHIP	470	5%	1/10W	R3613	1-218-941-81	RES-CHIP	100	5%	1/16W
R3239	1-216-817-11	METAL CHIP	470	5%	1/10W	R3614	1-218-941-81	RES-CHIP	100	5%	1/16W
R3240	1-216-821-11	METAL CHIP	1K	5%	1/10W	R3615	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3241	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3616	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3242	1-216-864-11	SHORT CHIP	0			R3617	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3243	1-216-817-11	METAL CHIP	470	5%	1/10W	R3618	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3246	1-218-969-11	RES-CHIP	22K	5%	1/16W	R3619	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3247	1-218-969-11	RES-CHIP	22K	5%	1/16W	R3620	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3248	1-216-841-11	METAL CHIP	47K	5%	1/10W	R3621	1-216-864-11	SHORT CHIP	0		
R3249	1-216-809-11	METAL CHIP	100	5%	1/10W	R3622	1-216-864-11	SHORT CHIP	0		
R3250	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3623	1-216-864-11	SHORT CHIP	0		
R3251	1-216-864-11	SHORT CHIP	0			R4000	1-218-990-81	SHORT CHIP	0		
R3253	1-216-864-11	SHORT CHIP	0			R4002	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3254	1-216-837-11	METAL CHIP	22K	5%	1/10W	R4004	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3255	1-218-990-81	SHORT CHIP	0			R4005	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R3401	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4006	1-218-990-81	SHORT CHIP	0		
R3404	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4007	1-218-990-81	SHORT CHIP	0		
R3405	1-218-941-81	RES-CHIP	100	5%	1/16W	R4008	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3408	1-218-977-11	RES-CHIP	100K	5%	1/16W	R4009	1-218-941-81	RES-CHIP	100	5%	1/16W
R3409	1-218-977-11	RES-CHIP	100K	5%	1/16W	R4010	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R3410	1-218-945-11	RES-CHIP	220	5%	1/16W	R4012	1-218-990-81	SHORT CHIP	0		
R3411	1-218-945-11	RES-CHIP	220	5%	1/16W	R4013	1-218-941-81	RES-CHIP	100	5%	1/16W
R3412	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R4022	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3413	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R4024	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3414	1-218-972-11	RES-CHIP	39K	5%	1/16W	R4026	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3415	1-218-972-11	RES-CHIP	39K	5%	1/16W	R4027	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3416	1-218-968-11	RES-CHIP	18K	5%	1/16W	R4028	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3417	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4029	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3418	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4030	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3419	1-218-968-11	RES-CHIP	18K	5%	1/16W	R4031	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R3420	1-218-967-11	RES-CHIP	15K	5%	1/16W	R4032	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3421	1-218-967-11	RES-CHIP	15K	5%	1/16W	R4033	1-218-973-11	RES-CHIP	47K	5%	1/16W
R3422	1-218-968-11	RES-CHIP	18K	5%	1/16W	R4034	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3423	1-218-968-11	RES-CHIP	18K	5%	1/16W	R4035	1-218-973-11	RES-CHIP	47K	5%	1/16W
R3426	1-218-941-81	RES-CHIP	100	5%	1/16W	R4036	1-218-990-81	SHORT CHIP	0		
R3427	1-218-941-81	RES-CHIP	100	5%	1/16W	R4037	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3428	1-218-990-81	SHORT CHIP	0			R4040	1-218-990-81	SHORT CHIP	0		
R3600	1-218-941-81	RES-CHIP	100	5%	1/16W	R4041	1-218-990-81	SHORT CHIP	0		
R3601	1-218-941-81	RES-CHIP	100	5%	1/16W	R4042	1-218-990-81	SHORT CHIP	0		
R3602	1-218-941-81	RES-CHIP	100	5%	1/16W	R4043	1-218-990-81	SHORT CHIP	0		
R3603	1-218-941-81	RES-CHIP	100	5%	1/16W	R4044	1-218-990-81	SHORT CHIP	0		
R3604	1-218-941-81	RES-CHIP	100	5%	1/16W	R4045	1-208-931-11	METAL CHIP	68K	0.5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R4046	1-220-397-11	METAL CHIP	4.7M	5%	1/10W	R4127	1-218-941-81	RES-CHIP	100	5%	1/16W
R4049	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4129	1-218-941-81	RES-CHIP	100	5%	1/16W
R4050	1-208-675-11	METAL CHIP	470	0.5%	1/16W	R4130	1-208-931-11	METAL CHIP	68K	0.5%	1/16W
R4051	1-218-990-81	SHORT CHIP	0			R4131	1-218-941-81	RES-CHIP	100	5%	1/16W
R4053	1-218-990-81	SHORT CHIP	0			R4132	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R4054	1-218-990-81	SHORT CHIP	0			R4133	1-218-941-81	RES-CHIP	100	5%	1/16W
R4055	1-218-990-81	SHORT CHIP	0			R4135	1-218-941-81	RES-CHIP	100	5%	1/16W
R4056	1-218-990-81	SHORT CHIP	0			R4136	1-216-864-11	SHORT CHIP	0		
R4057	1-218-990-81	SHORT CHIP	0			R4137	1-218-941-81	RES-CHIP	100	5%	1/16W
R4058	1-218-990-81	SHORT CHIP	0			R4138	1-218-941-81	RES-CHIP	100	5%	1/16W
R4059	1-218-990-81	SHORT CHIP	0			R4139	1-218-941-81	RES-CHIP	100	5%	1/16W
R4060	1-218-990-81	SHORT CHIP	0			R4140	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R4062	1-218-990-81	SHORT CHIP	0			R4141	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R4064	1-218-990-81	SHORT CHIP	0			R4142	1-218-941-81	RES-CHIP	100	5%	1/16W
R4067	1-208-943-11	METAL CHIP	220K	0.5%	1/16W	R4143	1-218-941-81	RES-CHIP	100	5%	1/16W
R4069	1-218-990-81	SHORT CHIP	0			R4144	1-218-970-11	RES-CHIP	27K	5%	1/16W
R4070	1-218-990-81	SHORT CHIP	0			R4145	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R4078	1-218-847-11	METAL CHIP	1K	0.5%	1/10W	R4146	1-218-941-81	RES-CHIP	100	5%	1/16W
R4079	1-218-941-81	RES-CHIP	100	5%	1/16W	R4148	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4080	1-218-941-81	RES-CHIP	100	5%	1/16W	R4149	1-218-937-11	RES-CHIP	47	5%	1/16W
R4081	1-218-941-81	RES-CHIP	100	5%	1/16W	R4152	1-218-990-81	SHORT CHIP	0		
R4085	1-218-941-81	RES-CHIP	100	5%	1/16W	R4158	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4086	1-218-941-81	RES-CHIP	100	5%	1/16W	R4159	1-218-990-81	SHORT CHIP	0		
R4087	1-218-941-81	RES-CHIP	100	5%	1/16W	R4160	1-218-941-81	RES-CHIP	100	5%	1/16W
R4088	1-208-933-11	METAL CHIP	82K	0.5%	1/16W	R4161	1-216-864-11	SHORT CHIP	0		
R4089	1-218-990-81	SHORT CHIP	0			R4165	1-218-941-81	RES-CHIP	100	5%	1/16W
R4090	1-218-949-11	RES-CHIP	470	5%	1/16W	R4166	1-218-941-81	RES-CHIP	100	5%	1/16W
R4091	1-218-941-81	RES-CHIP	100	5%	1/16W	R4167	1-216-864-11	SHORT CHIP	0		
R4094	1-218-941-81	RES-CHIP	100	5%	1/16W	R4168	1-218-941-81	RES-CHIP	100	5%	1/16W
R4097	1-218-990-81	SHORT CHIP	0			R4170	1-218-941-81	RES-CHIP	100	5%	1/16W
R4098	1-218-990-81	SHORT CHIP	0			R4178	1-218-990-81	SHORT CHIP	0		
R4099	1-218-941-81	RES-CHIP	100	5%	1/16W	R4181	1-218-941-81	RES-CHIP	100	5%	1/16W
R4100	1-218-990-81	SHORT CHIP	0			R4188	1-218-949-11	RES-CHIP	470	5%	1/16W
R4101	1-218-990-81	SHORT CHIP	0			R4189	1-218-949-11	RES-CHIP	470	5%	1/16W
R4102	1-218-941-81	RES-CHIP	100	5%	1/16W	R4195	1-218-941-81	RES-CHIP	100	5%	1/16W
R4103	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4196	1-218-941-81	RES-CHIP	100	5%	1/16W
R4107	1-218-990-81	SHORT CHIP	0			R4206	1-218-941-81	RES-CHIP	100	5%	1/16W
R4108	1-218-990-81	SHORT CHIP	0			R4207	1-218-941-81	RES-CHIP	100	5%	1/16W
R4110	1-218-953-11	RES-CHIP	1K	5%	1/16W	R4208	1-218-941-81	RES-CHIP	100	5%	1/16W
R4112	1-218-990-81	SHORT CHIP	0			R4209	1-218-941-81	RES-CHIP	100	5%	1/16W
R4113	1-218-941-81	RES-CHIP	100	5%	1/16W	R4210	1-218-941-81	RES-CHIP	100	5%	1/16W
R4114	1-218-941-81	RES-CHIP	100	5%	1/16W	R4211	1-218-941-81	RES-CHIP	100	5%	1/16W
R4115	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	R4212	1-218-941-81	RES-CHIP	100	5%	1/16W
R4117	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4213	1-218-941-81	RES-CHIP	100	5%	1/16W
R4119	1-218-978-11	RES-CHIP	120K	5%	1/16W	R4214	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4121	1-218-990-81	SHORT CHIP	0			R4216	1-218-990-81	SHORT CHIP	0		
R4122	1-218-990-81	SHORT CHIP	0			R4217	1-218-990-81	SHORT CHIP	0		
R4124	1-218-941-81	RES-CHIP	100	5%	1/16W	R4218	1-208-939-11	METAL CHIP	150K	0.5%	1/16W
R4125	1-218-941-81	RES-CHIP	100	5%	1/16W	R4220	1-216-821-11	METAL CHIP	1K	5%	1/10W
R4126	1-218-941-81	RES-CHIP	100	5%	1/16W	R4221	1-218-949-11	RES-CHIP	470	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R4222	1-216-832-11	METAL CHIP	8.2K	5%	1/10W	R4526	1-218-827-11	METAL CHIP	150	0.5%	1/10W
R4223	1-218-990-81	SHORT CHIP	0			R4527	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R4224	1-218-969-11	RES-CHIP	22K	5%	1/16W	R4530	1-216-864-11	SHORT CHIP	0		
R4225	1-218-981-91	RES-CHIP	220K	5%	1/16W	R4531	1-216-864-11	SHORT CHIP	0		
R4229	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W	R4532	1-216-864-11	SHORT CHIP	0		
R4230	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R4533	1-216-864-11	SHORT CHIP	0		
R4232	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4534	1-216-864-11	SHORT CHIP	0		
R4233	1-218-971-11	RES-CHIP	33K	5%	1/16W	R4535	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4237	1-218-990-81	SHORT CHIP	0			R4537	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R4238	1-218-971-11	RES-CHIP	33K	5%	1/16W	R4540	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R4240	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4542	1-218-941-81	RES-CHIP	100	5%	1/16W
R4241	1-218-941-81	RES-CHIP	100	5%	1/16W	R4544	1-216-821-11	METAL CHIP	1K	5%	1/10W
R4242	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4546	1-218-941-81	RES-CHIP	100	5%	1/16W
R4243	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4548	1-218-941-81	RES-CHIP	100	5%	1/16W
R4252	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R4549	1-218-941-81	RES-CHIP	100	5%	1/16W
R4253	1-218-990-81	SHORT CHIP	0			R4551	1-218-941-81	RES-CHIP	100	5%	1/16W
R4254	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R4552	1-218-941-81	RES-CHIP	100	5%	1/16W
R4256	1-218-990-81	SHORT CHIP	0			R4553	1-218-941-81	RES-CHIP	100	5%	1/16W
R4257	1-218-990-81	SHORT CHIP	0			R4555	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4274	1-218-990-81	SHORT CHIP	0			R4557	1-218-941-81	RES-CHIP	100	5%	1/16W
R4275	1-218-990-81	SHORT CHIP	0			R4569	1-216-864-11	SHORT CHIP	0		
R4276	1-218-990-81	SHORT CHIP	0			R4570	1-218-941-81	RES-CHIP	100	5%	1/16W
R4277	1-218-941-81	RES-CHIP	100	5%	1/16W	R4571	1-218-941-81	RES-CHIP	100	5%	1/16W
R4278	1-218-990-81	SHORT CHIP	0			R5500	1-218-979-11	RES-CHIP	150K	5%	1/16W
R4279	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5502	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4280	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5503	1-218-970-11	RES-CHIP	27K	5%	1/16W
R4283	1-218-941-81	RES-CHIP	100	5%	1/16W	R5504	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4284	1-218-941-81	RES-CHIP	100	5%	1/16W	R5505	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4311	1-218-990-81	SHORT CHIP	0			R5506	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4500	1-216-805-11	METAL CHIP	47	5%	1/10W	R5507	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4501	1-216-864-11	SHORT CHIP	0			R5508	1-218-978-11	RES-CHIP	120K	5%	1/16W
R4502	1-216-864-11	SHORT CHIP	0			R5509	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4503	1-216-864-11	SHORT CHIP	0			R5510	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4504	1-216-805-11	METAL CHIP	47	5%	1/10W	R5511	1-218-941-81	RES-CHIP	100	5%	1/16W
R4506	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5512	1-218-941-81	RES-CHIP	100	5%	1/16W
R4507	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5513	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4508	1-216-821-11	METAL CHIP	1K	5%	1/10W	R5514	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R4509	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5515	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R4510	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5516	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4511	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5518	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4512	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5520	1-218-978-11	RES-CHIP	120K	5%	1/16W
R4513	1-216-805-11	METAL CHIP	47	5%	1/10W	R5521	1-218-941-81	RES-CHIP	100	5%	1/16W
R4514	1-216-805-11	METAL CHIP	47	5%	1/10W	R5522	1-218-941-81	RES-CHIP	100	5%	1/16W
R4515	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R5523	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4516	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R5524	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R4518	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R5525	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R4519	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R5526	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4522	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R5527	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4523	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R5530	1-218-941-81	RES-CHIP	100	5%	1/16W
R4524	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R5531	1-218-961-11	RES-CHIP	4.7K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R5532	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R6417	1-208-933-11	METAL CHIP	82K	0.5%	1/16W
R5533	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6418	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R5537	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6420	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5539	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R6421	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R5540	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R6422	1-218-990-81	SHORT CHIP	0		
R5541	1-218-941-81	RES-CHIP	100	5%	1/16W	R6423	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R5544	1-218-990-81	SHORT CHIP	0			R6424	1-208-933-11	METAL CHIP	82K	0.5%	1/16W
R5545	1-218-990-81	SHORT CHIP	0			R6425	1-208-918-11	METAL CHIP	20K	0.5%	1/16W
R5546	1-218-990-81	SHORT CHIP	0			R6426	1-218-990-81	SHORT CHIP	0		
R5547	1-218-971-11	RES-CHIP	33K	5%	1/16W	R6427	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5548	1-218-990-81	SHORT CHIP	0			R6429	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R5549	1-218-941-81	RES-CHIP	100	5%	1/16W	R6430	1-218-990-81	SHORT CHIP	0		
R5550	1-218-990-81	SHORT CHIP	0			R6431	1-218-990-81	SHORT CHIP	0		
R5551	1-218-990-81	SHORT CHIP	0			R6432	1-218-990-81	SHORT CHIP	0		
R5552	1-218-941-81	RES-CHIP	100	5%	1/16W	R6433	1-216-295-91	SHORT CHIP	0		
R5553	1-218-990-81	SHORT CHIP	0			R6434	1-218-990-81	SHORT CHIP	0		
R5554	1-218-941-81	RES-CHIP	100	5%	1/16W	R6436	1-218-990-81	SHORT CHIP	0		
R5555	1-218-941-81	RES-CHIP	100	5%	1/16W	R6437	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R5556	1-218-941-81	RES-CHIP	100	5%	1/16W	R6439	1-218-990-81	SHORT CHIP	0		
R5564	1-218-941-81	RES-CHIP	100	5%	1/16W	R6440	1-218-990-81	SHORT CHIP	0		
R5565	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R6441	1-218-990-81	SHORT CHIP	0		
R5570	1-218-990-81	SHORT CHIP	0			R6442	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R5575	1-218-937-11	RES-CHIP	47	5%	1/16W	R6443	1-216-864-11	SHORT CHIP	0		
R5576	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6446	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R5577	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6447	1-218-990-81	SHORT CHIP	0		
R5578	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6448	1-208-939-11	METAL CHIP	150K	0.5%	1/16W
R5579	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6449	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R5580	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6450	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R5581	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6451	1-216-295-91	SHORT CHIP	0		
R5582	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6452	1-216-864-11	SHORT CHIP	0		
R5583	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6453	1-218-860-11	METAL CHIP	3.6K	0.5%	1/10W
R5584	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6454	1-216-864-11	SHORT CHIP	0		
R5585	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6455	1-218-853-11	METAL CHIP	1.8K	0.5%	1/10W
R5586	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6456	1-216-864-11	SHORT CHIP	0		
R5587	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6457	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R5588	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6458	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5589	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6461	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5590	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6462	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5591	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6463	1-216-864-11	SHORT CHIP	0		
R6400	1-218-973-11	RES-CHIP	47K	5%	1/16W	R6464	1-218-990-81	SHORT CHIP	0		
R6401	1-218-953-11	RES-CHIP	1K	5%	1/16W	R6466	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R6403	1-218-969-11	RES-CHIP	22K	5%	1/16W	R6467	1-218-990-81	SHORT CHIP	0		
R6404	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6468	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6405	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6469	1-216-864-11	SHORT CHIP	0		
R6409	1-218-990-81	SHORT CHIP	0			R6470	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6410	1-216-864-11	SHORT CHIP	0			R6471	1-218-990-81	SHORT CHIP	0		
R6413	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R6472	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6414	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6474	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R6415	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R6475	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R6416	1-208-933-11	METAL CHIP	82K	0.5%	1/16W	R6476	1-218-985-11	RES-CHIP	470K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R6477	1-218-892-11	METAL CHIP	75K	0.5%	1/10W	R7124	1-218-937-11	RES-CHIP	47	5%	1/16W
R6478	1-208-933-11	METAL CHIP	82K	0.5%	1/16W	R7125	1-218-937-11	RES-CHIP	47	5%	1/16W
R6479	1-218-990-81	SHORT CHIP	0			R7126	1-218-937-11	RES-CHIP	47	5%	1/16W
R6480	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7127	1-218-937-11	RES-CHIP	47	5%	1/16W
R6481	1-218-941-81	RES-CHIP	100	5%	1/16W	R7128	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6482	1-218-979-11	RES-CHIP	150K	5%	1/16W	R7129	1-218-937-11	RES-CHIP	47	5%	1/16W
R6483	1-218-971-11	RES-CHIP	33K	5%	1/16W	R7130	1-218-937-11	RES-CHIP	47	5%	1/16W
R6484	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7131	1-218-937-11	RES-CHIP	47	5%	1/16W
R6486	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7132	1-218-937-11	RES-CHIP	47	5%	1/16W
R6488	1-216-809-11	METAL CHIP	100	5%	1/10W	R7133	1-218-990-81	SHORT CHIP	0		
R6489	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7134	1-218-937-11	RES-CHIP	47	5%	1/16W
R6491	1-218-990-81	SHORT CHIP	0			R7136	1-220-174-11	RES-CHIP	200	5%	1/16W
R6493	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7137	1-220-174-11	RES-CHIP	200	5%	1/16W
R6494	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R7138	1-220-174-11	RES-CHIP	200	5%	1/16W
R6498	1-216-809-11	METAL CHIP	100	5%	1/10W	R7140	1-218-937-11	RES-CHIP	47	5%	1/16W
R6500	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7141	1-220-174-11	RES-CHIP	200	5%	1/16W
R6501	1-208-931-11	METAL CHIP	68K	0.5%	1/16W	R7142	1-220-174-11	RES-CHIP	200	5%	1/16W
R6502	1-218-983-11	RES-CHIP	330K	5%	1/16W	R7143	1-220-174-11	RES-CHIP	200	5%	1/16W
R6503	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7144	1-208-671-11	METAL CHIP	330	0.5%	1/16W
R6504	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7145	1-208-883-81	METAL CHIP	680	0.5%	1/16W
R6505	1-218-941-81	RES-CHIP	100	5%	1/16W	R7147	1-218-990-81	SHORT CHIP	0		
R6506	1-218-983-11	RES-CHIP	330K	5%	1/16W	R7148	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R6507	1-218-983-11	RES-CHIP	330K	5%	1/16W	R7200	1-218-949-11	RES-CHIP	470	5%	1/16W
R6508	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R7202	1-218-953-11	RES-CHIP	1K	5%	1/16W
R6511	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7203	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6512	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R7204	1-218-953-11	RES-CHIP	1K	5%	1/16W
R6513	1-220-174-11	RES-CHIP	200	5%	1/16W	R7206	1-218-949-11	RES-CHIP	470	5%	1/16W
R6514	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R7207	1-218-949-11	RES-CHIP	470	5%	1/16W
R6515	1-218-941-11	RES-CHIP	100	5%	1/16W	R7208	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R6516	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R7217	1-218-939-11	RES-CHIP	68	5%	1/16W
R6517	1-216-295-91	SHORT CHIP	0			R7218	1-218-941-11	RES-CHIP	100	5%	1/16W
R6518	1-216-864-11	SHORT CHIP	0			R7219	1-218-941-11	RES-CHIP	100	5%	1/16W
R7100	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7221	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7101	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7223	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7104	1-218-941-81	RES-CHIP	100	5%	1/16W	R7224	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7106	1-218-941-81	RES-CHIP	100	5%	1/16W	R7226	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7107	1-218-937-11	RES-CHIP	47	5%	1/16W	R7227	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7108	1-218-937-11	RES-CHIP	47	5%	1/16W	R7228	1-218-939-11	RES-CHIP	68	5%	1/16W
R7109	1-218-937-11	RES-CHIP	47	5%	1/16W	R7229	1-218-941-81	RES-CHIP	100	5%	1/16W
R7110	1-218-937-11	RES-CHIP	47	5%	1/16W	R7230	1-218-941-81	RES-CHIP	100	5%	1/16W
R7111	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R7231	1-218-941-81	RES-CHIP	100	5%	1/16W
R7112	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R7232	1-218-941-81	RES-CHIP	100	5%	1/16W
R7115	1-218-937-11	RES-CHIP	47	5%	1/16W	R7233	1-218-937-11	RES-CHIP	47	5%	1/16W
R7116	1-218-937-11	RES-CHIP	47	5%	1/16W	R7234	1-218-945-11	RES-CHIP	220	5%	1/16W
R7118	1-218-937-11	RES-CHIP	47	5%	1/16W	R7235	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7119	1-218-937-11	RES-CHIP	47	5%	1/16W	R7237	1-218-941-81	RES-CHIP	100	5%	1/16W
R7120	1-218-937-11	RES-CHIP	47	5%	1/16W	R7238	1-218-941-81	RES-CHIP	100	5%	1/16W
R7121	1-218-937-11	RES-CHIP	47	5%	1/16W	R7241	1-218-941-81	RES-CHIP	100	5%	1/16W
R7122	1-218-937-11	RES-CHIP	47	5%	1/16W	R7242	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7123	1-218-937-11	RES-CHIP	47	5%	1/16W	R7243	1-218-965-11	RES-CHIP	10K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK				
R7244	1-218-859-11	METAL CHIP	3.3K	0.5%	1/10W	RB7204	1-234-375-21	RES, NETWORK 1K	(1005X4)				
R7246	1-216-813-11	METAL CHIP	220	5%	1/10W	RB7205	1-234-702-11	RES, NETWORK 68	(1005X4)				
R7300	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB7206	1-234-702-11	RES, NETWORK 68	(1005X4)				
R7302	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB7207	1-234-372-11	RES, NETWORK 100	(1005X4)				
R7303	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB7208	1-234-372-11	RES, NETWORK 100	(1005X4)				
R7304	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB7209	1-234-372-11	RES, NETWORK 100	(1005X4)				
R7305	1-218-941-81	RES-CHIP	100	5%	1/16W	RB7210	1-234-372-11	RES, NETWORK 100	(1005X4)				
R7306	1-218-945-11	RES-CHIP	220	5%	1/16W	RB7211	1-234-372-11	RES, NETWORK 100	(1005X4)				
R7308	1-218-941-81	RES-CHIP	100	5%	1/16W	RB7212	1-234-702-11	RES, NETWORK 68	(1005X4)				
R7309	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB7213	1-234-702-11	RES, NETWORK 68	(1005X4)				
R7310	1-218-937-11	RES-CHIP	47	5%	1/16W	RB7500	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)				
R7311	1-218-937-11	RES-CHIP	47	5%	1/16W	RB7501	1-234-372-11	RES, NETWORK 100	(1005X4)				
R7312	1-218-937-11	RES-CHIP	47	5%	1/16W	< FILTER >							
R7313	1-218-937-11	RES-CHIP	47	5%	1/16W	SW2200	1-579-273-11	FILTER, SURFACE WAVE					
R7314	1-218-937-11	RES-CHIP	47	5%	1/16W	SW2201	1-813-564-21	FILTER, SURFACE WAVE					
R7315	1-218-937-11	RES-CHIP	47	5%	1/16W	< TUNER >							
R7316	1-218-937-11	RES-CHIP	47	5%	1/16W	TU2201	8-597-585-10	TUNER, FSS BTP-HC401					
R7317	1-218-937-11	RES-CHIP	47	5%	1/16W	< VARISTOR >							
R7318	1-218-937-11	RES-CHIP	47	5%	1/16W	VD3000	1-803-974-21	VARISTOR, CHIP	(1608)				
R7319	1-218-937-11	RES-CHIP	47	5%	1/16W	VD3001	1-803-974-21	VARISTOR, CHIP	(1608)				
R7320	1-218-941-81	RES-CHIP	100	5%	1/16W	VD3202	1-804-988-21	VARISTOR, CHIP	(1608)				
R7321	1-218-941-81	RES-CHIP	100	5%	1/16W	VD3203	1-804-988-21	VARISTOR, CHIP	(1608)				
R7322	1-218-941-81	RES-CHIP	100	5%	1/16W	VD3204	1-804-988-21	VARISTOR, CHIP	(1608)				
R7323	1-218-965-11	RES-CHIP	10K	5%	1/16W	< CRYSTAL >							
R7324	1-218-965-11	RES-CHIP	10K	5%	1/16W	X2000	1-813-547-11	QUARTZ CRYSTAL UNIT					
R7325	1-218-965-11	RES-CHIP	10K	5%	1/16W	X2200	1-579-477-21	VIBRATOR, CRYSTAL					
R7326	1-218-965-11	RES-CHIP	10K	5%	1/16W	X4000	1-813-531-11	OSCILLATOR, CRYSTAL UNIT					
R7327	1-218-965-11	RES-CHIP	10K	5%	1/16W	X5500	1-813-806-21	OSCILLATOR, CRYSTAL					
R7328	1-218-965-11	RES-CHIP	10K	5%	1/16W	X7200	1-813-055-11	QUARTZ CRYSTAL UNIT					
R7329	1-218-965-11	RES-CHIP	10K	5%	1/16W	X7201	1-813-784-21	VIBRATOR, CRYSTAL					
R7330	1-218-965-11	RES-CHIP	10K	5%	1/16W	B1 Board Variant Parts List (KDL-26P30x0 only)							
R7331	1-218-953-11	RES-CHIP	1K	5%	1/16W								
R7332	1-218-953-11	RES-CHIP	1K	5%	1/16W								
R7333	1-218-937-11	RES-CHIP	47	5%	1/16W								
R7508	1-218-965-11	RES-CHIP	10K	5%	1/16W								
R7509	1-218-965-11	RES-CHIP	10K	5%	1/16W	< CAPACITOR >							
R7512	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	C4087	1-107-767-21	ELECT CHIP 220UF	20%	16V			
R7513	1-218-965-11	RES-CHIP	10K	5%	1/16W	C4560	NOT FITTED	< IC >					
R7515	1-218-965-11	RES-CHIP	10K	5%	1/16W	IC4560						NOT FITTED	
< RESISTOR CHIP >													
RB2000	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)										
RB5500	1-239-409-11	NETWORK RESISTOR (CHIP)	47										
RB5501	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)										
RB5503	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)			< COIL >							
RB5505	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)										
RB7100	1-234-372-11	RES, NETWORK 100	(1005X4)										
RB7101	1-234-378-21	RES, NETWORK 10K	(1005X4)										
RB7200	1-234-878-21	RES, CHIP NETWORK 1KX8	(3816)										
RB7202	1-234-878-21	RES, CHIP NETWORK 1KX8	(3816)			L4560	NOT FITTED						

B1 Board Variant Parts List (KDL-26P30x0 only)

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
< RESISTOR >				R7212	NOT FITTED		
R4560	NOT FITTED			R7214	1-218-990-81	SHORT CHIP 0	
R4561	NOT FITTED			R7215	NOT FITTED		
R4564	NOT FITTED			R7216	NOT FITTED		
R4566	NOT FITTED			B1 Board Variant Parts List (KDL-37P30x0 only)			
R4568	NOT FITTED			< CAPACITOR >			
R6495	1-208-931-11	METAL CHIP 68K 0.5% 1/16W		C4087	1-126-396-11	ELECT CHIP 47UF 20% 16V	
R6496	1-208-721-11	METAL CHIP 39K 0.5% 1/16W		C4560	NOT FITTED		
R6519	1-216-864-11	SHORT CHIP 0		< IC >			
R6520	NOT FITTED			IC4560	NOT FITTED		
R6521	1-216-864-11	SHORT CHIP 0		< COIL >			
R6522	1-216-864-11	SHORT CHIP 0		L4560	NOT FITTED		
R6523	NOT FITTED			< RESISTOR >			
R6524	NOT FITTED			R4560	NOT FITTED		
R7210	NOT FITTED			R4561	NOT FITTED		
R7211	1-218-990-81	SHORT CHIP 0		R4564	NOT FITTED		
R7212	NOT FITTED			R4566	NOT FITTED		
R7214	NOT FITTED			R4568	NOT FITTED		
R7215	1-218-990-81	SHORT CHIP 0		R6495	1-218-979-11	RES CHIP 150K 5% 1/16W	
R7216	NOT FITTED			R6496	1-218-979-11	RES CHIP 150K 5% 1/16W	
B1 Board Variant Parts List (KDL-32P30x0 only)				R6519	NOT FITTED		
< CAPACITOR >				R6520	1-216-864-11	SHORT CHIP 0	
C4087	1-126-396-11	ELECT CHIP 47UF 20% 16V		R6521	NOT FITTED		
C4560	NOT FITTED			R6522	NOT FITTED		
< IC >				R6523	1-216-864-11	SHORT CHIP 0	
IC4560	NOT FITTED			R6524	1-216-864-11	SHORT CHIP 0	
< COIL >				R7210	1-218-990-81	SHORT CHIP 0	
L4560	NOT FITTED			R7211	1-218-990-81	SHORT CHIP 0	
< RESISTOR >				R7212	NOT FITTED		
R4560	NOT FITTED			R7214	1-218-990-81	SHORT CHIP 0	
R4561	NOT FITTED			R7215	1-218-990-81	SHORT CHIP 0	
R4564	NOT FITTED			R7216	NOT FITTED		
R4566	NOT FITTED			B1 Board Variant Parts List (KDL-40P30x0 only)			
R4568	NOT FITTED			< CAPACITOR >			
R6495	1-208-931-11	METAL CHIP 68K 0.5% 1/16W		C4087	1-126-396-11	ELECT CHIP 47UF 20% 16V	
R6496	1-208-721-11	METAL CHIP 39K 0.5% 1/16W		C4560	1-164-156-11	CERAMIC CHIP 0.1UF 25V	
R6519	1-216-864-11	SHORT CHIP 0		< IC >			
R6520	NOT FITTED			IC4560	6-710-443-01	IC LM75AD	
R6521	1-216-864-11	SHORT CHIP 0		< COIL >			
R6522	1-216-864-11	SHORT CHIP 0		L4560	1-414-754-11	INDUCTOR 10UH	
R6523	NOT FITTED						
R6524	NOT FITTED						
R7210	1-218-990-81	SHORT CHIP 0					
R7211	NOT FITTED						

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GS3

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
< RESISTOR >				C6110	1-119-892-51	CERAMIC 470PF	10.00% 250V
				C6111	1-112-226-21	ELECT 470UF	20% 16V
R4560	1-218-937-11	RES CHIP 47 5% 1/16W		C6112	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R4561	1-218-937-11	RES CHIP 47 5% 1/16W		C6113	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
R4564	1-218-990-81	SHORT CHIP 0		C6200	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
R4566	1-218-990-81	SHORT CHIP 0					
R4568	1-218-990-81	SHORT CHIP 0		C6201	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
				C6202	1-165-176-11	CERAMIC CHIP 0.047UF	10.00% 16V
R6495	1-208-931-11	METAL CHIP 68K 0.5% 1/16W		C6203	1-107-906-11	ELECT 10UF	20% 50V
R6496	1-208-721-11	METAL CHIP 39K 0.5% 1/16W		C6204	1-107-905-11	ELECT 4.7UF	20% 50V
R6519	1-216-864-11	SHORT CHIP 0		C6205	1-107-910-11	ELECT 100UF	20% 50V
R6520	NOT FITTED						
R6521	1-216-864-11	SHORT CHIP 0		C6206	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
				C6208	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V
R6522	1-216-864-11	SHORT CHIP 0		C6209	1-115-340-11	CERAMIC CHIP 0.22UF	10.00% 25V
R6523	NOT FITTED			C6210	1-107-888-11	ELECT 47UF	20% 25V
R6524	NOT FITTED			C6212	1-100-613-81	CERAMIC 470PF	5% 1KV
R7210	NOT FITTED						
R7211	NOT FITTED			C6213	1-100-310-11	FILM 18000PF	3% 800V
				C6215	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
R7212	1-218-990-81	SHORT CHIP 0		C6314	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V
R7214	NOT FITTED			C6315	△ 1-161-964-91	CERAMIC 0.0047UF	250V
R7215	NOT FITTED			C6316	△ 1-161-964-91	CERAMIC 0.0047UF	250V
R7216	1-218-990-81	SHORT CHIP 0					
* A-1276-473-A GS3 COMPLETE (37 inches only)				C6323	1-112-744-61	MYLAR 1UF	10% 450V
	4-382-854-01	SCREW (M3X8), P, SW (+)		C6325	1-117-227-11	MYLAR 1UF	10.00% 450V
	4-382-854-11	SCREW (M3X10), P, SW (+)		C6326	1-162-969-11	CERAMIC CHIP 0.0068UF	10.00% 25V
				C6327	1-117-227-11	MYLAR 1UF	10.00% 450V
				C6328	1-100-613-81	CERAMIC 470PF	5% 1KV
A0007	4-036-948-91	HEAT SINK (G)		C6329	1-100-613-81	CERAMIC 470PF	5% 1KV
< CAPACITOR >				C6331	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V
C6003	1-107-910-11	ELECT 100UF 20% 50V		C6332	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C6007	1-107-906-11	ELECT 10UF 20% 50V		C6333	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6008	1-164-505-11	CERAMIC CHIP 2.2UF 16V		C6338	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
C6009	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		C6340	1-107-906-11	ELECT 10UF 20% 50V	
C6010	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		C6341	1-135-361-11	ELECT (BLOCK) 180UF 20% 450V	
				C6342	1-135-361-11	ELECT (BLOCK) 180UF 20% 450V	
C6011	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		C6400	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V	
C6012	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		C6401	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V	
C6013	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		C6403	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V	
C6014	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		C6405	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V	
C6016	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		C6406	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V	
				C6407	1-162-959-11	CERAMIC CHIP 330PF 5.00% 50V	
C6017	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		C6416	1-104-329-11	CERAMIC CHIP 0.1UF 10.00% 50V	
C6018	1-165-908-11	CERAMIC CHIP 1UF 10% 10V					
C6019	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		C6417	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V	
C6100	1-112-744-61	MYLAR 1UF 10% 450V		C6418	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V	
C6101	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		C6419	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V	
				C6421	1-131-992-91	CERAMIC CHIP 100000PF 35V	
C6102	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		C6422	1-128-959-31	ELECT 1000UF 20% 35V	
C6104	1-107-903-11	ELECT 2.2UF 20% 50V					
C6105	1-100-139-31	FILM 0.001UF 5% 630V		C6423	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V	
C6107	1-107-904-11	ELECT 3.3UF 20% 50V		C6424	1-128-959-31	ELECT 1000UF 20% 35V	
C6108	1-107-910-11	ELECT 100UF 20% 50V		C6425	1-136-171-00	FILM 0.33UF 5.00% 50V	
				C6426	1-136-171-00	FILM 0.33UF 5.00% 50V	
C6109	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		C6427	1-104-329-11	CERAMIC CHIP 0.1UF 10.00% 50V	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GS3

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C6428	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V	D6002	Δ 8-719-081-97	DIODE MMDL914T1	
C6429	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D6003	Δ 8-719-404-50	DIODE MA111-TX	
C6430	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D6004	8-719-404-50	DIODE MA111-TX	
C6431	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D6005	8-719-976-99	DIODE DTZ5.1B	
C6432	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D6006	8-719-081-97	DIODE MMDL914T1	
C6433	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D6007	8-719-018-01	DIODE MA8220-TX	
C6434	1-107-888-11	ELECT 47UF	20% 25V	D6008	6-501-297-01	DIODE 1F6G	
C6439	1-107-895-11	ELECT 330UF	20% 35V	D6010	8-719-404-50	DIODE MA111-TX	
C6440	1-162-959-11	CERAMIC CHIP 330PF	5.00% 50V	D6013	8-719-404-50	DIODE MA111-TX	
C6441	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D6015	8-719-404-50	DIODE MA111-TX	
C6442	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	D6017	8-719-404-50	DIODE MA111-TX	
C6443	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V	D6019	8-719-081-97	DIODE MMDL914T1	
C6500	Δ 1-119-892-51	CERAMIC 470PF	10.00% 250V	D6020	8-719-083-70	DIODE UDZSNPTE-1727B	
C6501	1-113-924-11	CERAMIC 0.0047UF	20.00% 250V	D6024	8-719-404-50	DIODE MA111-TX	
C6502	Δ 1-119-892-51	CERAMIC 470PF	10.00% 250V	D6100	6-501-043-01	DIODE UMZ16NT106	
C6504	Δ 1-165-529-11	MYLAR 0.22UF	10 275V	D6101	6-500-567-31	DIODE 10ERB20-TB3	
C6506	Δ 1-165-531-11	MYLAR 1UF	10 275V	D6102	6-501-297-01	DIODE 1F6G	
C6507	Δ 1-119-892-51	CERAMIC 470PF	10.00% 250V	D6103	6-500-567-31	DIODE 10ERB20-TB3	
C6509	Δ 1-119-892-51	CERAMIC 470PF	10.00% 250V	D6104	6-500-567-31	DIODE 10ERB20-TB3	
C6510	1-113-924-11	CERAMIC 0.0047UF	20.00% 250V	D6105	8-719-510-02	DIODE DINS4	
C6600	1-128-959-31	ELECT 1000UF	20% 35V	D6106	8-719-073-35	DIODE RB551V-30TE-17	
C6601	1-128-960-31	ELECT 1500UF	20% 35V	D6200	8-719-081-97	DIODE MMDL914T1	
C6602	1-128-960-21	ELECT 1500UF	20% 35V	D6202	8-719-041-97	DIODE MA113-(TX)	
C6603	1-128-951-21	ELECT 2200UF	20% 16V	D6204	8-719-979-64	DIODE UF4005/23	
C6604	1-128-960-31	ELECT 1500UF	20% 35V	D6206	6-501-043-01	DIODE UMZ16NT106	
C6605	1-164-156-11	CERAMIC CHIP 0.1UF	25V	D6207	6-501-043-01	DIODE UMZ16NT106	
C6606	1-128-960-21	ELECT 1500UF	20% 35V	D6215	6-500-253-01	DIODE RB053L-30TE25	
C6607	1-112-229-21	ELECT 1500UF	20% 16V	D6230	6-500-253-01	DIODE RB053L-30TE25	
C6608	1-128-960-21	ELECT 1500UF	20% 35V	D6300	8-719-054-89	DIODE D15XB60	
C6611	1-112-240-21	ELECT 820UF	20% 25V	D6309	6-501-043-01	DIODE UMZ16NT106	
C6612	1-128-528-11	ELECT 470UF	20% 25V	D6314	8-719-054-59	DIODE FSF05A60	
C6613	1-162-964-31	CERAMIC CHIP 0.001UF	5.00% 50V	D6315	6-500-137-01	DIODE BAT54HT1	
C6614	1-162-964-31	CERAMIC CHIP 0.001UF	5.00% 50V	D6316	6-501-043-01	DIODE UMZ16NT106	
C6615	1-162-964-31	CERAMIC CHIP 0.001UF	5.00% 50V	D6317	6-500-108-01	DIODE EP05FA20	
C6616	1-162-964-31	CERAMIC CHIP 0.001UF	5.00% 50V	D6318	6-500-108-01	DIODE EP05FA20	
< CONNECTOR >				D6319	8-719-081-97	DIODE MMDL914T1	
CN6100	*1-785-705-11	PIN, CONNECTOR (PC BOARD) 9P		D6320	8-719-081-97	DIODE MMDL914T1	
CN6400	*1-779-944-11	PIN, CONNECTOR (PC BOARD) 4P		D6400	8-719-081-67	DIODE M1FM3	
CN6401	*1-695-915-11	TAB (CONTACT)		D6401	8-719-081-67	DIODE M1FM3	
CN6402	*1-695-915-11	TAB (CONTACT)		D6600	6-501-545-01	DIODE SG10SC6-F5	
CN6501	Δ *1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P		D6601	6-501-917-01	DI SG10SC9F5-5009F23	
CN6601	*1-564-507-11	PLUG, CONNECTOR 4P		D6602	6-501-917-01	DI SG10SC9F5-5009F23	
CN6602	*1-785-706-11	PIN, CONNECTOR (PC BOARD) 10P		D6603	6-501-917-01	DI SG10SC9F5-5009F23	
CN6603	*1-785-707-11	PIN, CONNECTOR (PC BOARD) 11P		D6604	6-501-917-01	DI SG10SC9F5-5009F23	
CN6604	*1-785-702-11	PIN, CONNECTOR (PC BOARD) 5P		D6606	6-501-917-01	DI SG10SC9F5-5009F23	
< DIODE >				D6607	8-719-022-97	DIODE D2S4MF	
D6000	Δ 8-719-081-97	DIODE MMDL914T1		D6608	8-719-084-56	DIODE PTZ-TE25-15B	
D6001	Δ 8-719-081-97	DIODE MMDL914T1		ET6401	1-537-770-21	TERMINAL BOARD, GROUND	
				ET6500	1-537-770-21	TERMINAL BOARD, GROUND	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GS3

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
ET6601	1-537-770-21	TERMINAL BOARD, GROUND		PH6100	6-600-187-01	PHOTO COUPLER PC123Y22JOOF	
				PH6200	6-600-187-01	PHOTO COUPLER PC123Y22JOOF	
		< FUSE >				< PROTECTOR MODULE >	
F6500	Δ 1-576-233-51	FUSE	6.3A 250V	PS6600	Δ 1-533-596-21	IC LINK	4A 90V
FH6502	Δ 1-533-725-21	FUSE HOLDER	6.3A 250V	PS6601	Δ 1-533-596-21	IC LINK	4A 90V
		< FERRITE BEAD >		PS6603	Δ 1-533-596-21	IC LINK	4A 90V
						< TRANSISTOR >	
FB6201	1-410-396-41	FERRITE	0.45UH	Q6001	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
FB6202	1-410-396-41	FERRITE	0.45UH	Q6002	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
FB6300	1-414-760-21	FERRITE	0UH	Q6003	6-551-678-01	TRANSISTOR 2SA1364-T111-1DE	
FB6302	1-414-760-21	FERRITE	0UH	Q6004	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
FB6304	1-410-396-41	FERRITE	0.45UH	Q6005	6-551-714-01	TRANSISTOR INK0001AC1-T112A-1	
FB6305	1-410-396-41	FERRITE	0.45UH				
FB6400	1-469-324-21	FERRITE	0UH	Q6006	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
FB6401	1-469-869-21	FERRITE	0UH	Q6008	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
FB6402	1-469-324-21	FERRITE	0UH	Q6009	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
FB6403	1-469-324-21	FERRITE	0UH	Q6010	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
FB6404	1-469-324-21	FERRITE	0UH	Q6011	6-551-714-01	TRANSISTOR INK0001AC1-T112A-1	
		< IC >		Q6200	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
IC6000	6-709-368-01	IC MM1431ATT (CN)		Q6201	6-551-297-01	TRANSISTOR 2SK3568 (LBS1SONY.Q	
IC6002	6-709-368-01	IC MM1431ATT (CN)		Q6202	6-551-297-01	TRANSISTOR 2SK3568 (LBS1SONY.Q	
IC6100	6-708-801-01	IC MIP2H2		Q6302	6-551-403-01	TRANSISTOR 2SK3797 (LBS1SONY.	
IC6101	6-709-442-01	IC MM1530ATT		Q6308	6-551-403-01	TRANSISTOR 2SK3797 (LBS1SONY.	
IC6200	6-705-810-01	IC MCZ3001DB		Q6309	8-729-807-17	TRANSISTOR 2SD1621-S	
IC6201	6-709-368-01	IC MM1431ATT (CN)		Q6310	8-729-804-41	TRANSISTOR 2SB1122-S	
IC6302	6-709-192-01	IC FA5501AN-D1-TE1				< RESISTOR >	
IC6400	6-711-308-01	IC TDA8932BT-N2		JR6000	1-216-295-91	SHORT CHIP	0
IC6600	8-759-640-19	IC PQ1CG2032FZ		JR6001	1-216-295-91	SHORT CHIP	0
		< COIL >		JR6100	1-216-296-11	SHORT CHIP	0
				JR6300	1-216-295-91	SHORT CHIP	0
L6101	1-414-183-41	INDUCTOR	10UH				
L6300	1-457-218-11	INDUCTOR	100UH	R6000	Δ 1-218-760-11	METAL CHIP	220K 0.5% 1/10W
L6301	1-457-141-11	INDUCTOR	175UH	R6001	Δ 1-218-760-11	METAL CHIP	220K 0.5% 1/10W
L6400	1-456-755-11	INDUCTOR	47UH	R6002	Δ 1-208-830-11	METAL CHIP	100K 0.5% 1/10W
L6401	1-456-755-11	INDUCTOR	47UH	R6003	Δ 1-208-846-11	METAL CHIP	470K 0.5% 1/10W
L6502	Δ 1-456-856-11	LINE FILTER COIL		R6004	Δ 1-218-760-11	METAL CHIP	220K 0.5% 1/10W
L6503	Δ 1-456-856-11	LINE FILTER COIL					
L6600	1-414-487-41	INDUCTOR	1UH	R6005	Δ 1-218-760-11	METAL CHIP	220K 0.5% 1/10W
L6601	1-414-487-41	INDUCTOR	1UH	R6006	Δ 1-218-911-11	METAL CHIP	470K 0.5% 1/10W
L6602	1-456-803-11	INDUCTOR	100UH	R6007	Δ 1-218-887-11	METAL CHIP	47K 0.5% 1/10W
L6603	1-457-239-11	INDUCTOR	4.7UH	R6008	1-218-823-11	METAL CHIP	100 0.5% 1/10W
L6604	1-457-239-11	INDUCTOR	4.7UH	R6009	1-208-814-91	METAL CHIP	22K 0.5% 1/10W
L6605	1-412-525-31	INDUCTOR	10UH				
		< PHOTOCOUPLER >		R6010	1-208-814-91	METAL CHIP	22K 0.5% 1/10W
PH6000	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		R6011	1-216-295-91	SHORT CHIP	0
PH6001	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		R6012	1-216-793-11	METAL CHIP	4.7 5% 1/10W
PH6002	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		R6014	1-218-847-11	METAL CHIP	1K 0.5% 1/10W
				R6015	1-216-843-11	METAL CHIP	68K 5% 1/10W
				R6020	1-218-903-11	METAL CHIP	220K 0.5% 1/10W
				R6021	1-216-833-11	METAL CHIP	10K 5% 1/10W

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GS3

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R6022	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6134	1-216-295-91	SHORT CHIP	0		
R6023	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6200	1-216-845-11	METAL CHIP	100K	5%	1/10W
R6024	1-218-903-11	METAL CHIP	220K	0.5%	1/10W	R6201	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6025	1-218-885-11	METAL CHIP	39K	0.5%	1/10W	R6202	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6026	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W	R6203	Δ 1-202-933-61	FUSIBLE	0.1	10%	1/2W
R6027	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6204	1-218-887-11	METAL CHIP	47K	0.5%	1/10W
R6028	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W	R6205	1-218-873-11	METAL CHIP	12K	0.5%	1/10W
R6029	1-216-864-11	SHORT CHIP	0			R6207	1-218-823-11	METAL CHIP	100	0.5%	1/10W
R6030	1-218-887-11	METAL CHIP	47K	0.5%	1/10W	R6208	1-208-854-11	METAL CHIP	1M	0.5%	1/10W
R6031	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6209	1-208-854-11	METAL CHIP	1M	0.5%	1/10W
R6033	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R6210	1-208-854-11	METAL CHIP	1M	0.5%	1/10W
R6034	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6211	1-208-854-11	METAL CHIP	1M	0.5%	1/10W
R6035	1-218-903-11	METAL CHIP	220K	0.5%	1/10W	R6212	1-218-761-11	METAL CHIP	240K	0.5%	1/10W
R6037	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6213	1-218-881-11	METAL CHIP	27K	0.5%	1/10W
R6038	1-218-887-11	METAL CHIP	47K	0.5%	1/10W	R6215	1-249-385-11	CARBON	2.2	5%	1/4W
R6039	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6216	1-216-857-11	METAL CHIP	1M	5%	1/10W
R6041	1-216-837-11	METAL CHIP	22K	5%	1/10W	R6218	1-211-985-11	METAL CHIP	47	0.5%	1/10W
R6042	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6219	1-216-009-91	RES-CHIP	22	5%	1/10W
R6043	1-218-889-11	METAL CHIP	56K	0.5%	1/10W	R6220	1-216-009-91	RES-CHIP	22	5%	1/10W
R6044	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6221	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6045	1-216-864-11	SHORT CHIP	0			R6222	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6046	1-216-849-11	METAL CHIP	220K	5%	1/10W	R6228	1-245-494-21	METAL	2.2M	2%	1/4W
R6047	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R6229	1-245-494-21	METAL	2.2M	2%	1/4W
R6048	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6230	1-216-361-00	METAL OXIDE	0.22	5%	2W
R6049	1-216-837-11	METAL CHIP	22K	5%	1/10W	R6231	1-216-361-00	METAL OXIDE	0.22	5%	2W
R6050	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R6232	1-218-847-11	METAL CHIP	1K	0.5%	1/10W
R6051	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6233	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6052	1-216-809-11	METAL CHIP	100	5%	1/10W	R6234	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6053	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6235	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R6054	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6236	1-218-843-11	METAL CHIP	680	0.5%	1/10W
R6055	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6237	1-218-869-11	METAL CHIP	8.2K	0.5%	1/10W
R6056	1-216-837-11	METAL CHIP	22K	5%	1/10W	R6239	1-218-847-11	METAL CHIP	1K	0.5%	1/10W
R6057	1-216-837-11	METAL CHIP	22K	5%	1/10W	R6307	1-216-857-11	METAL CHIP	1M	5%	1/10W
R6058	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6308	Δ 1-240-251-92	METAL	6.8	5%	10W
R6059	1-216-809-11	METAL CHIP	100	5%	1/10W	R6328	1-218-913-91	METAL CHIP	560K	0.5%	1/10W
R6100	Δ 1-212-958-00	FUSIBLE	10	5%	1/2W	R6329	1-216-864-11	SHORT CHIP	0		
R6103	1-216-864-11	SHORT CHIP	0			R6337	1-218-879-11	METAL CHIP	22K	0.5%	1/10W
R6104	1-249-389-11	CARBON	4.7	5%	1/4W	R6338	1-215-882-21	METAL OXIDE	22	5%	2W
R6105	1-218-865-11	METAL CHIP	5.6K	0.5%	1/10W	R6339	1-216-864-11	SHORT CHIP	0		
R6108	1-243-725-21	METAL OXIDE	100K	5%	1W	R6340	1-217-157-00	METAL	0.33	10%	5W
R6110	1-216-864-11	SHORT CHIP	0			R6341	1-217-157-00	METAL	0.33	10%	5W
R6111	1-249-385-11	CARBON	2.2	5%	1/4W	R6342	1-211-981-11	METAL CHIP	33	0.5%	1/10W
R6112	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6343	1-218-823-11	METAL CHIP	100	0.5%	1/10W
R6116	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R6344	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6120	1-216-805-11	METAL CHIP	47	5%	1/10W	R6345	1-249-389-11	CARBON	4.7	5%	1/4W
R6125	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	R6346	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6126	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	R6348	1-249-405-11	CARBON	100	5%	1/4W
R6130	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R6349	1-249-389-11	CARBON	4.7	5%	1/4W
R6131	1-216-864-11	SHORT CHIP	0			R6350	1-216-813-11	METAL CHIP	220	5%	1/10W
R6133	1-216-295-91	SHORT CHIP	0			R6351	1-216-813-11	METAL CHIP	220	5%	1/10W

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GS3

GS2

REF.NO.	PART.NO	DESCRIPTION	REMARK
R6352	1-208-814-91	METAL CHIP	22K 0.5% 1/10W
R6354	1-216-813-11	METAL CHIP	220 5% 1/10W
R6355	1-216-813-11	METAL CHIP	220 5% 1/10W
R6356	1-208-814-91	METAL CHIP	22K 0.5% 1/10W
R6357	1-218-907-11	METAL CHIP	330K 0.5% 1/10W
R6358	1-218-879-11	METAL CHIP	22K 0.5% 1/10W
R6359	1-218-895-11	METAL CHIP	100K 0.5% 1/10W
R6360	1-216-809-11	METAL CHIP	100 5% 1/10W
R6361	1-208-848-11	METAL CHIP	560K 0.5% 1/10W
R6362	1-208-848-11	METAL CHIP	560K 0.5% 1/10W
R6363	1-208-848-11	METAL CHIP	560K 0.5% 1/10W
R6364	1-208-846-11	METAL CHIP	470K 0.5% 1/10W
R6365	1-208-844-11	METAL CHIP	390K 0.5% 1/10W
R6366	1-218-875-11	METAL CHIP	15K 0.5% 1/10W
R6367	1-218-851-11	METAL CHIP	1.5K 0.5% 1/10W
R6368	1-249-393-11	CARBON	10 5% 1/4W
R6400	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
R6401	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
R6402	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
R6403	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
R6404	1-220-238-11	METAL CHIP	10 5% 1/4W
R6405	1-216-841-11	METAL CHIP	47K 5% 1/10W
R6406	1-216-841-11	METAL CHIP	47K 5% 1/10W
R6407	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6408	1-216-864-11	SHORT CHIP	0
R6409	1-216-864-11	SHORT CHIP	0
R6410	1-216-857-11	METAL CHIP	1M 5% 1/10W
R6411	1-216-857-11	METAL CHIP	1M 5% 1/10W
R6412	1-216-864-11	SHORT CHIP	0
R6413	1-220-238-11	METAL CHIP	10 5% 1/4W
R6414	1-245-973-11	METAL CHIP	22 5% 1/3W
R6415	1-216-864-11	SHORT CHIP	0
R6420	1-216-821-11	METAL CHIP	1K 5% 1/10W
R6421	1-216-821-11	METAL CHIP	1K 5% 1/10W
R6422	1-245-973-11	METAL CHIP	22 5% 1/3W
R6423	1-220-238-11	METAL CHIP	10 5% 1/4W
R6424	1-216-837-11	METAL CHIP	22K 5% 1/10W
R6425	1-216-864-11	SHORT CHIP	0
R6426	1-218-859-11	METAL CHIP	3.3K 0.5% 1/10W
R6427	1-218-859-11	METAL CHIP	3.3K 0.5% 1/10W
R6600	1-216-864-11	SHORT CHIP	0
R6601	1-218-849-11	METAL CHIP	1.2K 0.5% 1/10W
R6602	1-218-881-11	METAL CHIP	27K 0.5% 1/10W
R6603	1-218-871-11	METAL CHIP	10K 0.5% 1/10W
R6606	1-216-864-11	SHORT CHIP	0
R6607	1-216-864-11	SHORT CHIP	0

< RELAY >

RY6000 Δ 1-755-516-11 RELAY (AC POWER)

REF.NO.	PART.NO	DESCRIPTION	REMARK
< TRANSFORMER >			
T6100	Δ 1-443-984-11	CONVERTER TRANSFORMER (SBT)	
T6200	Δ 1-445-310-11	CONVERTER TRANSFORMER (PIT)	
T6201	Δ 1-445-308-11	CONVERTER TRANSFORMER (PIT)	
< VARISTOR >			
VD6500	Δ 1-804-995-11	VARISTOR	
VD6501	Δ 1-804-995-11	VARISTOR	
* A-1276-472-A GS2 COMPLETE (26/32 inches only)			
2-409-877-21		WASHER (3X10), RS TITE SPRING	
< CAPACITOR >			
C6000	Δ 1-113-924-11	CERAMIC	0.0047UF 20.00% 250V
C6001	Δ 1-161-964-91	CERAMIC	0.0047UF 250V
C6002	Δ 1-119-892-51	CERAMIC	470PF 10.00% 250V
C6003	Δ 1-165-529-11	MYLAR	0.22UF 10 275V
C6004	Δ 1-165-530-11	MYLAR	0.47UF 10 275V
C6005	Δ 1-119-892-51	CERAMIC	470PF 10.00% 250V
C6006	Δ 1-161-964-91	CERAMIC	0.0047UF 250V
C6007	1-119-892-51	CERAMIC	470PF 10.00% 250V
C6008	1-117-752-11	ELECT (BLOCK)	330UF 20% 450V
C6009	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V
C6010	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C6011	1-107-888-11	ELECT	47UF 20% 25V
C6012	1-119-892-51	CERAMIC	470PF 10.00% 250V
C6013	1-100-831-91	CERAMIC CHIP	0.001UF 2% 50V
C6014	1-107-905-11	ELECT	4.7UF 20% 50V
C6015	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V
C6016	1-107-906-11	ELECT	10UF 20% 50V
C6018	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V
C6019	1-107-888-11	ELECT	47UF 20% 25V
C6020	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V
C6021	1-165-908-11	CERAMIC CHIP	1UF 10% 10V
C6022	1-107-824-11	CERAMIC	220PF 5.00% 1KV
C6023	1-107-824-11	CERAMIC	220PF 5.00% 1KV
C6024	1-165-610-11	FILM	33000PF 3% 800V
C6025	1-107-902-11	ELECT	1UF 20% 50V
C6027	1-107-902-11	ELECT	1UF 20% 50V
C6029	1-114-231-21	ELECT	3300UF 20% 35V
C6030	1-128-951-21	ELECT	2200UF 20% 16V
C6031	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V
C6033	1-165-744-11	ELECT	1200UF 20% 35V
C6034	1-165-744-11	ELECT	1200UF 20% 35V
C6039	1-128-950-21	ELECT	1000UF 20% 16V
C6042	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V
C6043	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V
C6202	1-107-903-11	ELECT	2.2UF 20% 50V

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GS2

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C6205	1-107-904-11	ELECT	3.3UF 20% 50V	CN6203	*1-785-707-11	PIN, CONNECTOR (PC BOARD) 11P	
C6206	1-100-139-31	FILM	0.001UF 5% 630V	CN6400	*1-779-944-11	PIN, CONNECTOR (PC BOARD) 4P	
C6208	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V	CN6401	*1-695-915-11	TAB (CONTACT)	
C6209	1-119-892-51	CERAMIC	470PF 10.00% 250V	CN6402	*1-695-915-11	TAB (CONTACT)	
C6211	1-112-226-21	ELECT	470UF 20% 16V	< DIODE >			
C6212	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V	D6000	8-719-510-53	DIODE D4SB60L	
C6214	1-112-744-61	MYLAR	1UF 10% 450V	D6001	6-500-108-01	DIODE EP05FA20	
C6300	1-162-964-31	CERAMIC CHIP	0.001UF 5.00% 50V	D6002	6-500-108-01	DIODE EP05FA20	
C6301	1-162-964-31	CERAMIC CHIP	0.001UF 5.00% 50V	D6003	8-719-081-97	DIODE MMDL914T1	
C6302	1-162-964-31	CERAMIC CHIP	0.001UF 5.00% 50V	D6004	8-719-082-03	DIODE MM3Z15VT1	
C6303	1-162-964-31	CERAMIC CHIP	0.001UF 5.00% 50V	D6005	8-719-081-97	DIODE MMDL914T1	
C6317	1-162-927-11	CERAMIC CHIP	100PF 5.00% 50V	D6006	8-719-082-03	DIODE MM3Z15VT1	
C6318	1-107-910-11	ELECT	100UF 20% 50V	D6007	8-719-082-03	DIODE MM3Z15VT1	
C6319	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V	D6008	8-719-979-64	DIODE UF4005/23	
C6400	1-125-891-11	CERAMIC CHIP	0.47UF 10.00% 10V	D6009	8-719-082-03	DIODE MM3Z15VT1	
C6401	1-125-891-11	CERAMIC CHIP	0.47UF 10.00% 10V	D6010	8-719-082-03	DIODE MM3Z15VT1	
C6402	1-125-891-11	CERAMIC CHIP	0.47UF 10.00% 10V	D6011	6-501-917-01	DI SG10SC9F5-5009F23	
C6403	1-125-891-11	CERAMIC CHIP	0.47UF 10.00% 10V	D6012	6-501-917-01	DI SG10SC9F5-5009F23	
C6405	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V	D6014	6-501-917-01	DI SG10SC9F5-5009F23	
C6406	1-125-891-11	CERAMIC CHIP	0.47UF 10.00% 10V	D6018	6-501-917-01	DI SG10SC9F5-5009F23	
C6407	1-162-959-11	CERAMIC CHIP	330PF 5.00% 50V	D6019	8-719-083-70	DIODE UDZSNPTE-1727B	
C6410	1-164-245-11	CERAMIC CHIP	0.015UF 10.00% 25V	D6024	6-501-614-01	DIODE PZU5.6B2	
C6412	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V	D6025	8-719-404-50	DIODE MA111-TX	
C6416	1-104-329-11	CERAMIC CHIP	0.1UF 10.00% 50V	D6202	6-500-567-31	DIODE 10ERB20-TB3	
C6417	1-164-315-11	CERAMIC CHIP	470PF 5.00% 50V	D6203	6-501-297-01	DIODE 1F6G	
C6418	1-164-315-11	CERAMIC CHIP	470PF 5.00% 50V	D6204	8-719-510-02	DIODE D1NS4	
C6419	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V	D6205	6-501-043-01	DIODE UMZ16NT106	
C6421	1-131-992-91	CERAMIC CHIP	100000PF 35V	D6206	6-500-567-31	DIODE 10ERB20-TB3	
C6422	1-128-959-31	ELECT	1000UF 20% 35V	D6207	6-500-567-31	DIODE 10ERB20-TB3	
C6423	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V	D6211	8-719-073-35	DIODE RB551V-30TE-17	
C6424	1-128-959-31	ELECT	1000UF 20% 35V	D6212	8-719-404-50	DIODE MA111-TX	
C6425	1-136-171-00	FILM	0.33UF 5.00% 50V	D6215	6-502-161-01	DI RB055L-40TE25	
C6426	1-136-171-00	FILM	0.33UF 5.00% 50V	D6216	6-502-161-01	DI RB055L-40TE25	
C6427	1-104-329-11	CERAMIC CHIP	0.1UF 10.00% 50V	D6400	8-719-081-67	DIODE M1FM3	
C6428	1-164-245-11	CERAMIC CHIP	0.015UF 10.00% 25V	D6401	8-719-081-67	DIODE M1FM3	
C6429	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V	ET6000	1-537-770-21	TERMINAL BOARD, GROUND	
C6430	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V	ET6001	1-537-770-21	TERMINAL BOARD, GROUND	
C6431	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V	ET6002	1-537-770-21	TERMINAL BOARD, GROUND	
C6432	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V	ET6003	1-537-770-21	TERMINAL BOARD, GROUND	
C6433	1-100-566-91	CERAMIC CHIP	0.1UF 10.00% 25V	< FUSE >			
C6434	1-107-888-11	ELECT	47UF 20% 25V	F6000 Δ	1-576-231-51	FUSE	4A 250V
C6439	1-107-895-11	ELECT	330UF 20% 35V	FH6000 Δ	1-533-725-21	FUSE HOLDER	6.3A 250V
C6440	1-162-959-11	CERAMIC CHIP	330PF 5.00% 50V	< FERRITE BEAD >			
< CONNECTOR >				FB6400	1-469-324-21	FERRITE	0UH
CN6000 Δ	*1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P		FB6401	1-469-869-21	FERRITE	0UH
CN6002	*1-785-706-11	PIN, CONNECTOR (PC BOARD) 10P		FB6402	1-469-324-21	FERRITE	0UH
CN6200	*1-785-705-11	PIN, CONNECTOR (PC BOARD) 9P		FB6403	1-469-324-21	FERRITE	0UH
CN6201	*1-564-507-11	PLUG, CONNECTOR 4P					
CN6202	*1-785-702-11	PIN, CONNECTOR (PC BOARD) 5P					

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GS2

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
FB6404	1-469-324-21	FERRITE	0UH	R6006 Δ	1-218-760-11	METAL CHIP 220K 0.5% 1/10W	
< IC >				R6007 Δ	1-208-830-11	METAL CHIP 100K 0.5% 1/10W	
IC6000	6-705-810-01	IC MCZ3001DB		R6008	1-218-760-11	METAL CHIP 220K 0.5% 1/10W	
IC6001	6-709-368-01	IC MM1431ATT (CN)		R6009 Δ	1-202-933-61	FUSIBLE 0.1 10% 1/2W	
IC6002	6-709-368-01	IC MM1431ATT (CN)		R6010	1-208-852-11	METAL CHIP 820K 0.5% 1/10W	
IC6200	6-708-801-01	IC MIP2H2		R6011	1-208-852-11	METAL CHIP 820K 0.5% 1/10W	
IC6201	6-709-442-01	IC MM1530ATT		R6012	1-216-837-11	METAL CHIP 22K 5% 1/10W	
IC6400	6-711-308-01	IC TDA8932BT-N2		R6013	1-208-852-11	METAL CHIP 820K 0.5% 1/10W	
< COIL >				R6014	1-218-911-11	METAL CHIP 470K 0.5% 1/10W	
L6001	1-457-547-11	INDUCTOR 60MH		R6015	1-218-887-11	METAL CHIP 47K 0.5% 1/10W	
L6005	1-457-239-11	INDUCTOR 4.7UH		R6016	1-216-833-11	METAL CHIP 10K 5% 1/10W	
L6204	1-414-183-41	INDUCTOR 10UH		R6017	1-208-803-11	METAL CHIP 7.5K 0.5% 1/10W	
L6209 Δ	1-457-440-11	LINE FILTER COIL		R6018	1-218-881-11	METAL CHIP 27K 0.5% 1/10W	
L6210 Δ	1-457-440-11	LINE FILTER COIL		R6020	1-218-823-11	METAL CHIP 100 0.5% 1/10W	
L6400	1-456-755-11	INDUCTOR 47UH		R6022	1-218-875-11	METAL CHIP 15K 0.5% 1/10W	
L6401	1-456-755-11	INDUCTOR 47UH		R6024	1-216-845-11	METAL CHIP 100K 5% 1/10W	
< PHOTOCOUPLER >				R6025	1-216-833-11	METAL CHIP 10K 5% 1/10W	
PH6000	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		R6026	1-216-833-11	METAL CHIP 10K 5% 1/10W	
PH6001	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		R6027	1-216-837-11	METAL CHIP 22K 5% 1/10W	
PH6002	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		R6028	1-218-823-11	METAL CHIP 100 0.5% 1/10W	
PH6200	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		R6029	1-216-837-11	METAL CHIP 22K 5% 1/10W	
< PROTECTOR MODULE >				R6030	1-249-393-11	CARBON 10 5% 1/4W	
PS6000 Δ	1-533-596-21	IC LINK 4A 90V		R6031	1-249-393-11	CARBON 10 5% 1/4W	
PS6001 Δ	1-533-596-21	IC LINK 4A 90V		R6032	1-218-871-11	METAL CHIP 10K 0.5% 1/10W	
PS6002 Δ	1-533-596-21	IC LINK 4A 90V		R6035	1-216-833-11	METAL CHIP 10K 5% 1/10W	
PS6003 Δ	1-533-596-21	IC LINK 4A 90V		R6036	1-216-833-11	METAL CHIP 10K 5% 1/10W	
< TRANSISTOR >				R6037	1-216-821-11	METAL CHIP 1K 5% 1/10W	
Q6000	8-729-010-29	TRANSISTOR MSD601-RST1		R6038	1-216-864-11	SHORT CHIP 0	
Q6001	8-729-010-08	TRANSISTOR MSB710-R		R6039	1-216-864-11	SHORT CHIP 0	
Q6002	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R6040	1-245-494-21	METAL 2.2M 2% 1/4W	
Q6003	6-551-297-01	TRANSISTOR 2SK3568 (LBS1SONY.Q		R6041	1-245-494-21	METAL 2.2M 2% 1/4W	
Q6004	6-551-297-01	TRANSISTOR 2SK3568 (LBS1SONY.Q		R6042	1-216-817-11	METAL CHIP 470 5% 1/10W	
Q6005	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R6043	1-245-315-71	METAL OXIDE 0.1 5% 2W	
Q6006	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R6044	1-216-864-11	SHORT CHIP 0	
Q6007	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R6045	1-245-315-71	METAL OXIDE 0.1 5% 2W	
Q6008	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R6046	1-216-833-11	METAL CHIP 10K 5% 1/10W	
Q6009	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R6047	1-216-833-11	METAL CHIP 10K 5% 1/10W	
< RESISTOR >				R6048	1-216-837-11	METAL CHIP 22K 5% 1/10W	
JR6300	1-216-864-11	SHORT CHIP 0		R6049	1-216-837-11	METAL CHIP 22K 5% 1/10W	
R6001	1-249-411-11	CARBON 330 5% 1/4W		R6050	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6003 Δ	1-218-760-11	METAL CHIP 220K 0.5% 1/10W		R6052	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R6004 Δ	1-218-760-11	METAL CHIP 220K 0.5% 1/10W		R6053	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R6005 Δ	1-218-760-11	METAL CHIP 220K 0.5% 1/10W		R6054	1-216-833-11	METAL CHIP 10K 5% 1/10W	
				R6055	1-216-864-11	SHORT CHIP 0	
				R6057	1-216-822-11	METAL CHIP 1.2K 5% 1/10W	
				R6058	1-216-833-11	METAL CHIP 10K 5% 1/10W	
				R6061	1-216-837-11	METAL CHIP 22K 5% 1/10W	
				R6062	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W	
				R6063	1-218-868-11	METAL CHIP 7.5K 0.5% 1/10W	
				R6064	1-218-847-11	METAL CHIP 1K 0.5% 1/10W	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

Note : The components identified by mark Δ contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

GS2

B1

REF.NO.	PART.NO	DESCRIPTION	REMARK		
R6066	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R6069	1-208-842-11	METAL CHIP	330K	0.5%	1/10W
R6070	1-208-842-11	METAL CHIP	330K	0.5%	1/10W
R6071	1-218-760-11	METAL CHIP	220K	0.5%	1/10W
R6072	1-208-810-11	METAL CHIP	15K	0.5%	1/10W
R6073	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6074	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R6075	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R6076	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6080	1-218-760-11	METAL CHIP	220K	0.5%	1/10W
R6090	1-216-864-11	SHORT CHIP	0		
R6200	1-249-389-11	CARBON	4.7	5%	1/4W
R6202	1-216-864-11	SHORT CHIP	0		
R6203	1-216-864-11	SHORT CHIP	0		
R6204	1-249-385-11	CARBON	2.2	5%	1/4W
R6205	1-243-725-21	METAL OXIDE	100K	5%	1W
R6206	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6209	1-216-805-11	METAL CHIP	47	5%	1/10W
R6210	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6211	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R6212	1-216-295-91	SHORT CHIP	0		
R6213	1-216-295-91	SHORT CHIP	0		
R6220	1-218-865-11	METAL CHIP	5.6K	0.5%	1/10W
R6221	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R6222	1-218-879-11	METAL CHIP	22K	0.5%	1/10W
R6223	1-216-849-11	METAL CHIP	220K	5%	1/10W
R6237	1-216-864-11	SHORT CHIP	0		
R6239	1-216-864-11	SHORT CHIP	0		
R6240	1-216-295-91	SHORT CHIP	0		
R6400	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R6401	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R6402	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R6403	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R6404	1-220-238-11	METAL CHIP	10	5%	1/4W
R6405	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6406	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6407	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6410	1-216-857-11	METAL CHIP	1M	5%	1/10W
R6411	1-216-857-11	METAL CHIP	1M	5%	1/10W
R6413	1-220-238-11	METAL CHIP	10	5%	1/4W
R6414	1-245-973-11	METAL CHIP	22	5%	1/3W
R6420	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6421	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6422	1-245-973-11	METAL CHIP	22	5%	1/3W
R6423	1-220-238-11	METAL CHIP	10	5%	1/4W
R6424	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6425	1-218-859-11	METAL CHIP	3.3K	0.5%	1/10W
R6426	1-218-859-11	METAL CHIP	3.3K	0.5%	1/10W

REF.NO.	PART.NO	DESCRIPTION	REMARK		
< TRANSFORMER >					
T6000	△ 1-445-026-11	CONVERTER TRANSFORMER (PIT)			
T6001	△ 1-445-311-11	CONVERTER TRANSFORMER (PIT)			
T6200	△ 1-443-984-11	CONVERTER TRANSFORMER (SBT)			
< VARISTOR >					
VD6000	△ 1-804-995-11	VARISTOR			
* A-1486-565-A B1 COMPLETE (KDL-26P30xH only)					
* A-1486-566-A B1 COMPLETE (KDL-32P30xH only)					
* A-1486-567-A B1 COMPLETE (KDL-37P30xH only)					
* A-1486-568-A B1 COMPLETE (KDL-40P30xH only)					
B1 Board Common Parts					
< CAPACITOR >					
C2000	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	
C2001	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	
C2002	1-164-858-11	CERAMIC CHIP 22PF	5.00%	50V	
C2003	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2004	1-164-858-11	CERAMIC CHIP 22PF	5.00%	50V	
C2005	1-164-872-11	CERAMIC CHIP 82PF	5.00%	50V	
C2006	1-164-872-11	CERAMIC CHIP 82PF	5.00%	50V	
C2007	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2008	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	
C2009	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	
C2010	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2011	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2012	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2014	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	
C2015	1-124-779-00	ELECT CHIP 10UF	20.00%	16V	
C2016	1-124-779-00	ELECT CHIP 10UF	20.00%	16V	
C2017	1-124-779-00	ELECT CHIP 10UF	20.00%	16V	
C2018	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2019	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2020	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2021	1-164-858-11	CERAMIC CHIP 22PF	5.00%	50V	
C2022	1-164-858-11	CERAMIC CHIP 22PF	5.00%	50V	
C2023	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2024	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2025	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2026	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2027	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2028	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2029	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2030	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2031	1-124-779-00	ELECT CHIP 10UF	20.00%	16V	
C2032	1-124-779-00	ELECT CHIP 10UF	20.00%	16V	
C2033	1-124-779-00	ELECT CHIP 10UF	20.00%	16V	
C2035	1-109-982-11	CERAMIC CHIP 1UF	10.00%	10V	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C2036	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V	C3004	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C2201	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C3005	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C2202	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V	C3006	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C2203	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V	C3007	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
C2204	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3008	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2206	1-126-404-11	ELECT CHIP 4.7UF	20.00% 50V	C3009	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
C2207	1-100-588-21	ELECT CHIP 1000UF	20% 6.3V	C3010	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2208	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3011	1-164-505-11	CERAMIC CHIP 2.2UF	16V
C2210	1-165-621-91	CERAMIC CHIP 0.1UF	50V	C3012	1-164-505-11	CERAMIC CHIP 2.2UF	16V
C2212	1-100-309-21	ELECT CHIP 22UF	20% 25V	C3013	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2213	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3014	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2214	1-100-740-81	CERAMIC CHIP 390PF	5% 50V	C3019	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2215	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3020	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2216	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3021	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2217	1-127-715-11	CERAMIC CHIP 0.22UF	10% 16V	C3022	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2218	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C3023	1-126-395-11	ELECT CHIP 22UF	20.00% 16V
C2219	1-114-214-81	CERAMIC CHIP 470PF	5% 50V	C3024	1-126-395-11	ELECT CHIP 22UF	20.00% 16V
C2220	1-131-664-91	CERAMIC CHIP 0.15UF	10% 10V	C3027	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C2222	1-112-779-11	CERAMIC CHIP 0.047UF	10% 25V	C3028	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C2225	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3029	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2227	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3030	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2228	1-164-872-11	CERAMIC CHIP 82PF	5.00% 50V	C3031	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2229	1-164-876-11	CERAMIC CHIP 120PF	5.00% 50V	C3032	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2230	1-112-001-81	CERAMIC CHIP 270PF	5% 50V	C3033	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2231	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C3034	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2232	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3035	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2235	1-100-904-11	CERAMIC CHIP 330PF	10% 50V	C3036	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2236	1-165-900-11	ELECT CHIP 100UF	20% 16V	C3039	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2237	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	C3046	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2238	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3047	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2239	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3048	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
C2241	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C3049	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2242	1-117-720-11	CERAMIC CHIP 4.7UF	10V	C3050	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
C2243	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3051	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2244	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3052	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2245	1-165-882-91	CERAMIC CHIP 2.2UF	50V	C3053	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2246	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3054	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2247	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3055	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2248	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3056	1-126-395-11	ELECT CHIP 22UF	20.00% 16V
C2249	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3057	1-126-395-11	ELECT CHIP 22UF	20.00% 16V
C2250	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3062	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C2253	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C3063	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C2254	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C3200	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C2255	1-100-567-81	CERAMIC CHIP 0.01UF	10% 25V	C3202	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C2256	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	C3205	1-125-889-11	CERAMIC CHIP 2.2UF	10% 10V
C2257	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3206	1-125-889-11	CERAMIC CHIP 2.2UF	10% 10V
C2258	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	C3209	1-125-889-11	CERAMIC CHIP 2.2UF	10% 10V
C2259	1-100-588-21	ELECT CHIP 1000UF	20% 6.3V	C3210	1-125-889-11	CERAMIC CHIP 2.2UF	10% 10V
C3000	1-162-959-11	CERAMIC CHIP 330PF	5.00% 50V	C3213	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C3001	1-162-959-11	CERAMIC CHIP 330PF	5.00% 50V	C3214	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C3215	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4024	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3216	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4025	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3217	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4026	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3218	1-125-889-11	CERAMIC CHIP 2.2UF	10% 10V	C4027	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3219	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4028	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3222	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	C4029	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3223	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	C4030	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3224	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4031	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3225	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4032	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3226	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C4033	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3227	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V	C4034	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3234	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V	C4035	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3235	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V	C4036	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3236	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V	C4037	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3238	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C4038	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3239	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C4039	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3240	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C4040	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3242	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C4041	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3243	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C4042	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3244	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C4043	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3245	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4044	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3400	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4045	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3401	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C4046	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3402	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C4047	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3407	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C4048	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3408	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C4050	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V
C3411	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4051	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3414	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4052	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3415	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4053	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3417	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C4054	1-127-715-11	CERAMIC CHIP 0.22UF	10% 16V
C3419	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4055	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3420	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4056	1-126-394-11	ELECT CHIP 10UF	20.00% 16V
C3421	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C4057	1-127-715-11	CERAMIC CHIP 0.22UF	10% 16V
C3422	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C4058	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3423	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C4059	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3424	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4061	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3600	1-165-900-11	ELECT CHIP 100UF	20% 16V	C4064	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C3601	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C4065	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C4001	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C4066	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4002	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C4067	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4004	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C4068	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C4005	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C4069	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C4006	1-127-573-11	CERAMIC CHIP 1UF	10% 16V	C4070	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4008	1-163-037-11	CERAMIC CHIP 0.022UF	10.00% 50V	C4071	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C4011	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4072	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C4014	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4073	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4016	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V	C4074	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4017	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4076	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4018	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V	C4077	1-162-928-11	CERAMIC CHIP 120PF	5.00% 50V
C4020	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4078	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C4080	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5513	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4081	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5514	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4082	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V	C5515	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4083	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5517	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4084	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C5518	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4085	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5519	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4086	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	C5521	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4088	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5523	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4089	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5525	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4092	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5526	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4093	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C5527	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4094	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5529	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4095	1-112-001-81	CERAMIC CHIP 270PF	5% 50V	C5530	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4096	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5531	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4097	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C5532	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4098	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5533	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4099	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5534	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4101	1-162-917-11	CERAMIC CHIP 15PF	5.00% 50V	C5535	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4102	1-162-917-11	CERAMIC CHIP 15PF	5.00% 50V	C5536	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4103	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5537	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4105	1-127-715-11	CERAMIC CHIP 0.22UF	10% 16V	C5538	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4106	1-115-340-11	CERAMIC CHIP 0.22UF	10.00% 25V	C5539	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4107	1-112-068-11	CERAMIC CHIP 220PF	10% 50V	C5540	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4111	1-126-390-11	ELECT CHIP 22UF	20.00% 6.3V	C5541	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4113	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5542	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4114	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5543	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4122	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C5544	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4123	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5545	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4135	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5546	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4137	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5547	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4138	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5548	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4309	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5551	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4310	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6400	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4500	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6401	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4501	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6402	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4511	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6403	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4516	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6404	1-112-791-11	ELECT CHIP 100UF	20% 16V
C5500	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6405	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C5501	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6406	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C5502	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6407	1-164-868-11	CERAMIC CHIP 56PF	5.00% 50V
C5503	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6408	1-112-791-11	ELECT CHIP 100UF	20% 16V
C5504	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6409	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C5505	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6410	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C5506	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6411	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C5507	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6412	1-164-864-11	CERAMIC CHIP 39PF	5.00% 50V
C5508	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6413	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C5509	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6414	1-164-677-11	CERAMIC CHIP 0.033UF	10.00% 16V
C5510	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6415	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C5511	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6416	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5512	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6417	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C6418	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C6484	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6420	1-115-412-11	CERAMIC CHIP 680PF	5.00% 25V	C6485	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6421	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V	C6486	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C6422	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C6487	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6423	1-127-715-11	CERAMIC CHIP 0.22UF	10% 16V	C6488	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6424	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6489	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6425	1-127-715-11	CERAMIC CHIP 0.22UF	10% 16V	C6490	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6426	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C6491	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6427	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C6492	1-128-994-21	ELECT CHIP 47UF	20% 10V
C6428	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C6493	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6429	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6494	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6430	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V	C6495	1-128-994-21	ELECT CHIP 47UF	20% 10V
C6431	1-114-415-21	ELECT CHIP 100UF	20% 6.3V	C6496	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6432	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6497	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6433	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C6498	1-162-959-11	CERAMIC CHIP 330PF	5.00% 50V
C6434	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C6499	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V
C6435	1-114-415-21	ELECT CHIP 100UF	20% 6.3V	C6500	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6437	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6501	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6438	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	C6502	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6439	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6503	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6440	1-164-868-11	CERAMIC CHIP 56PF	5.00% 50V	C6504	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6441	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V	C6505	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6442	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C6506	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6444	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C6507	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6445	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C6508	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C6446	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6509	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6447	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C6510	1-128-994-21	ELECT CHIP 47UF	20% 10V
C6448	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C6511	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C6449	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6512	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6450	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6513	1-128-994-21	ELECT CHIP 47UF	20% 10V
C6451	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C6514	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6452	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C6515	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C6453	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6516	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6454	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6520	1-127-760-11	CERAMIC CHIP 4.7UF	10% 6.3V
C6455	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6521	1-100-740-81	CERAMIC CHIP 390PF	5% 50V
C6456	1-114-130-11	CERAMIC CHIP 1UF	6.3V	C6522	1-100-740-81	CERAMIC CHIP 390PF	5% 50V
C6457	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6523	1-100-740-81	CERAMIC CHIP 390PF	5% 50V
C6458	1-114-130-11	CERAMIC CHIP 1UF	6.3V	C6524	1-100-740-81	CERAMIC CHIP 390PF	5% 50V
C6459	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6525	1-100-740-81	CERAMIC CHIP 390PF	5% 50V
C6460	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6526	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
C6463	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7101	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C6465	1-114-130-11	CERAMIC CHIP 1UF	6.3V	C7102	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6466	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7104	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6468	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C7105	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6469	1-114-130-11	CERAMIC CHIP 1UF	6.3V	C7106	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6471	1-127-573-11	CERAMIC CHIP 1UF	10% 16V	C7107	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6472	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C7108	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6481	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7109	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6482	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C7110	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6483	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C7111	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C7112	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7227	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7113	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7228	1-164-860-11	CERAMIC CHIP 27PF	5.00% 50V
C7114	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7229	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V
C7115	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7231	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7116	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7232	1-164-840-11	CERAMIC CHIP 1PF	0.25PF 50V
C7118	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C7233	1-164-840-11	CERAMIC CHIP 1PF	0.25PF 50V
C7122	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7234	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7123	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7235	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V
C7124	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7236	1-104-905-11	DOUBLE LAYER 0.22F	5.5V
C7125	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7300	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7126	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7301	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7127	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7302	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7128	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7303	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C7132	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C7304	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7135	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C7305	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C7136	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7306	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7137	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7307	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7138	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C7308	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7139	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7309	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7140	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7310	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7141	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7311	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7142	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C7313	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7143	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7314	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C7144	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7315	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7145	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	< CONNECTOR >			
C7200	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN3000	*1-417-602-11	SOCKET 21PIN	
C7201	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	CN3002	*1-417-602-11	SOCKET 21PIN	
C7202	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN4000	*1-818-656-21	HEADER ASSEMBLY 30P	
C7203	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN4001	*1-819-441-11	PWB HEADER, 13P	
C7204	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN4004	1-779-936-51	CONNECTOR, FFC/FPC 18P	
C7205	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	CN4005	*1-820-180-11	HEADER ASSEMBLY (PRINT PWB) 3P	
C7208	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN4500	*1-817-804-11	CONNECTOR, D SUB 15P	
C7209	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	CN5500	*1-821-188-11	HDMI CONNECTOR	
C7210	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN5501	*1-821-188-11	HDMI CONNECTOR	
C7211	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	CN6400	*1-819-443-11	HEADER ASSEMBLY FOR PWB 15P	
C7212	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN6401	*1-819-335-11	HEADER ASSEMBLY FOR PWB, 9P	
C7213	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	CN6402	*1-819-333-11	HEADER ASSEMBLY FOR PWB 5P	
C7214	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	CN6403	*1-819-475-11	HEADER ASSEMBLY FOR PWB 7P	
C7215	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	CN7300	*1-793-769-22	CONNECTOR, CARD (PCMCIA CARD)	
C7216	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	CN7501	1-820-209-11	MEMORY STICK CONNECTOR	
C7217	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	< DIODE >			
C7218	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D2201	6-501-633-01	DIODE PZU33B	
C7219	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D2202	6-501-614-01	DIODE PZU5.6B2	
C7220	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D2206	8-719-066-14	DIODE HSC277-TRF-E	
C7221	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3000	6-501-622-01	DIODE PZU12B2	
C7222	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3001	6-501-622-01	DIODE PZU12B2	
C7223	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3002	6-501-622-01	DIODE PZU12B2	
C7224	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	D3003	6-501-622-01	DIODE PZU12B2	
C7225	1-117-681-11	ELECT CHIP 100UF	20.00% 16V				
C7226	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V				

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
D3004	6-501-619-01	DIODE PZU9.1B2		D4002	8-719-404-50	DIODE MA111-TX	
D3005	6-501-623-01	DIODE PZU13B2		D4003	8-719-404-50	DIODE MA111-TX	
D3006	6-501-619-01	DIODE PZU9.1B2		D4008	8-719-404-50	DIODE MA111-TX	
D3007	6-501-619-01	DIODE PZU9.1B2		D4009	8-719-404-50	DIODE MA111-TX	
D3008	6-501-619-01	DIODE PZU9.1B2		D4010	6-500-335-01	DIODE MC2838-T112-1	
D3009	6-501-614-01	DIODE PZU5.6B2		D4012	6-500-335-01	DIODE MC2838-T112-1	
D3010	6-501-619-01	DIODE PZU9.1B2		D4013	6-501-614-01	DIODE PZU5.6B2	
D3011	6-501-620-01	DIODE PZU10B2		D4014	6-501-614-01	DIODE PZU5.6B2	
D3012	6-501-620-01	DIODE PZU10B2		D4015	6-501-614-01	DIODE PZU5.6B2	
D3013	6-501-619-01	DIODE PZU9.1B2		D4018	6-501-614-01	DIODE PZU5.6B2	
D3014	6-501-619-01	DIODE PZU9.1B2		D4020	6-501-614-01	DIODE PZU5.6B2	
D3015	6-501-619-01	DIODE PZU9.1B2		D4021	6-501-614-01	DIODE PZU5.6B2	
D3016	6-501-619-01	DIODE PZU9.1B2		D4500	6-501-614-01	DIODE PZU5.6B2	
D3017	6-501-619-01	DIODE PZU9.1B2		D4501	6-501-614-01	DIODE PZU5.6B2	
D3018	6-501-619-01	DIODE PZU9.1B2		D4502	6-501-614-01	DIODE PZU5.6B2	
D3019	6-501-619-01	DIODE PZU9.1B2		D4503	6-500-335-01	DIODE MC2838-T112-1	
D3020	6-501-619-01	DIODE PZU9.1B2		D4504	6-501-614-01	DIODE PZU5.6B2	
D3021	6-501-619-01	DIODE PZU9.1B2		D4505	6-501-614-01	DIODE PZU5.6B2	
D3022	6-501-619-01	DIODE PZU9.1B2		D4506	6-501-614-01	DIODE PZU5.6B2	
D3023	6-501-619-01	DIODE PZU9.1B2		D4507	6-501-614-01	DIODE PZU5.6B2	
D3024	6-501-619-01	DIODE PZU9.1B2		D4508	6-501-614-01	DIODE PZU5.6B2	
D3025	6-501-619-01	DIODE PZU9.1B2		D4509	6-501-614-01	DIODE PZU5.6B2	
D3026	6-501-619-01	DIODE PZU9.1B2		D4510	6-501-614-01	DIODE PZU5.6B2	
D3027	6-501-619-01	DIODE PZU9.1B2		D4511	6-501-614-01	DIODE PZU5.6B2	
D3028	6-501-619-01	DIODE PZU9.1B2		D4512	6-501-614-01	DIODE PZU5.6B2	
D3029	6-501-614-01	DIODE PZU5.6B2		D4513	6-501-614-01	DIODE PZU5.6B2	
D3030	6-501-623-01	DIODE PZU13B2		D5500	8-719-058-24	DIODE RB501V-40TE-17	
D3031	6-501-619-01	DIODE PZU9.1B2		D5502	8-719-404-50	DIODE MA111-TX	
D3032	6-501-623-01	DIODE PZU13B2		D5503	8-719-404-50	DIODE MA111-TX	
D3033	6-501-614-01	DIODE PZU5.6B2		D5505	8-719-404-50	DIODE MA111-TX	
D3034	6-501-614-01	DIODE PZU5.6B2		D5506	8-719-404-50	DIODE MA111-TX	
D3035	6-501-614-01	DIODE PZU5.6B2		D6402	6-501-657-01	DIODE MA24D5000BS0	
D3036	6-501-614-01	DIODE PZU5.6B2		D6403	6-501-657-01	DIODE MA24D5000BS0	
D3037	6-501-614-01	DIODE PZU5.6B2		D6404	6-500-334-01	DIODE MC2836-T112-1	
D3038	6-501-614-01	DIODE PZU5.6B2		D6406	6-501-528-01	DIODE 1SMA5915BT3G	
D3039	6-501-619-01	DIODE PZU9.1B2		D6407	6-501-528-01	DIODE 1SMA5915BT3G	
D3040	6-501-619-01	DIODE PZU9.1B2		D6410	6-501-336-01	DIODE RSX201L-30TE25	
D3041	6-501-619-01	DIODE PZU9.1B2		D6411	6-501-336-01	DIODE RSX201L-30TE25	
D3042	6-501-619-01	DIODE PZU9.1B2		D6415	6-501-623-01	DIODE PZU13B2	
D3202	6-501-619-01	DIODE PZU9.1B2		D6416	6-501-336-01	DIODE RSX201L-30TE25	
D3203	6-501-619-01	DIODE PZU9.1B2		D6417	8-719-404-50	DIODE MA111-TX	
D3206	8-719-404-50	DIODE MA111-TX		D6418	6-500-334-01	DIODE MC2836-T112-1	
D3208	6-500-335-01	DIODE MC2838-T112-1		D6419	6-501-336-01	DIODE RSX201L-30TE25	
D3209	8-719-404-50	DIODE MA111-TX		D6420	8-719-404-50	DIODE MA111-TX	
D3210	8-719-404-50	DIODE MA111-TX		D6421	6-501-623-01	DIODE PZU13B2	
D3211	8-719-404-50	DIODE MA111-TX		D6422	6-501-614-01	DIODE PZU5.6B2	
D3212	8-719-404-50	DIODE MA111-TX		D6423	6-501-614-01	DIODE PZU5.6B2	
D3213	6-501-619-01	DIODE PZU9.1B2		D6424	6-501-614-01	DIODE PZU5.6B2	
D3214	8-719-404-50	DIODE MA111-TX		D6425	6-501-614-01	DIODE PZU5.6B2	
D4000	8-719-404-50	DIODE MA111-TX		D6426	6-501-614-01	DIODE PZU5.6B2	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

B1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
D6427	6-501-614-01	DIODE PZU5.6B2		FB4020	1-414-760-21	FERRITE	0UH
D6428	6-501-614-01	DIODE PZU5.6B2		FB4021	1-400-807-21	FERRITE	0UH
D6430	6-501-336-01	DIODE RSX201L-30TE25		FB4022	1-400-807-21	FERRITE	0UH
D7200	8-719-041-97	DIODE MA113-(TX)		FB4503	1-400-141-22	FERRITE	0UH
				FB5500	1-414-234-22	FERRITE	0UH
ET2200	1-780-336-11	EARTH TERMINAL					
ET2201	1-780-336-11	EARTH TERMINAL		FB5501	1-414-234-22	FERRITE	0UH
ET6400	1-780-336-11	EARTH TERMINAL		FB6400	1-400-915-21	FERRITE	0UH
ET6401	1-780-336-11	EARTH TERMINAL		FB6401	1-400-089-21	FERRITE	0UH
ET6403	1-780-336-11	EARTH TERMINAL		FB6403	1-469-324-21	FERRITE	0UH
				FB6404	1-414-445-11	FERRITE	0UH
< FUSE >							
F4500	Δ 1-576-646-11	FUSE	0.5A 50V	FB6405	1-414-445-11	FERRITE	0UH
				FB6406	1-414-445-11	FERRITE	0UH
< FERRITE BEAD >				FB6407	1-414-445-11	FERRITE	0UH
FB2000	1-400-834-11	FERRITE	0UH	FB6408	1-414-445-11	FERRITE	0UH
FB2001	1-400-834-11	FERRITE	0UH	FB6409	1-414-445-11	FERRITE	0UH
FB2002	1-400-834-11	FERRITE	0UH				
FB2003	1-400-834-11	FERRITE	0UH	FB6410	1-400-110-21	FERRITE	0UH
FB2004	1-400-834-11	FERRITE	0UH	FB6411	1-400-110-21	FERRITE	0UH
				FB7100	1-469-869-21	FERRITE	0UH
FB2005	1-400-834-11	FERRITE	0UH	FB7101	1-469-869-21	FERRITE	0UH
FB2006	1-400-834-11	FERRITE	0UH	FB7102	1-469-869-21	FERRITE	0UH
FB2007	1-400-834-11	FERRITE	0UH				
FB2008	1-400-834-11	FERRITE	0UH	FB7103	1-469-869-21	FERRITE	0UH
FB2009	1-400-834-11	FERRITE	0UH	FB7104	1-400-244-11	FERRITE	0UH
				FB7105	1-400-244-11	FERRITE	0UH
FB2010	1-400-834-11	FERRITE	0UH	FB7106	1-400-244-11	FERRITE	0UH
FB2011	1-400-244-11	FERRITE	0UH	FB7107	1-400-244-11	FERRITE	0UH
FB2012	1-400-244-11	FERRITE	0UH				
FB2200	1-469-185-11	FERRITE	0UH	FB7108	1-400-834-11	FERRITE	0UH
FB2201	1-469-185-11	FERRITE	0UH	FB7109	1-400-834-11	FERRITE	0UH
				FB7110	1-400-834-11	FERRITE	0UH
FB2202	1-469-869-21	FERRITE	0UH	FB7111	1-400-834-11	FERRITE	0UH
FB3001	1-414-760-21	FERRITE	0UH	FB7112	1-400-834-11	FERRITE	0UH
FB3401	1-400-834-11	FERRITE	0UH				
FB3402	1-400-244-11	FERRITE	0UH	FB7113	1-400-834-11	FERRITE	0UH
FB4000	1-400-833-21	FERRITE	0UH	FB7114	1-400-834-11	FERRITE	0UH
				FB7115	1-400-834-11	FERRITE	0UH
FB4001	1-400-833-21	FERRITE	0UH	FB7116	1-400-834-11	FERRITE	0UH
FB4002	1-400-833-21	FERRITE	0UH	FB7117	1-400-834-11	FERRITE	0UH
FB4003	1-400-833-21	FERRITE	0UH				
FB4004	1-400-833-21	FERRITE	0UH	FB7118	1-469-869-21	FERRITE	0UH
FB4005	1-400-833-21	FERRITE	0UH	FB7200	1-400-244-11	FERRITE	0UH
				FB7201	1-400-244-11	FERRITE	0UH
FB4006	1-400-833-21	FERRITE	0UH	FB7202	1-400-244-11	FERRITE	0UH
FB4007	1-400-833-21	FERRITE	0UH	FB7300	1-400-834-11	FERRITE	0UH
FB4008	1-400-833-21	FERRITE	0UH				
FB4010	1-414-760-21	FERRITE	0UH	FB7301	1-400-834-11	FERRITE	0UH
FB4011	1-414-760-21	FERRITE	0UH	FB7302	1-400-834-11	FERRITE	0UH
				FB7303	1-400-834-11	FERRITE	0UH
FB4012	1-414-760-21	FERRITE	0UH	FB7304	1-400-834-11	FERRITE	0UH
FB4013	1-414-760-21	FERRITE	0UH	FB7305	1-400-834-11	FERRITE	0UH
FB4014	1-414-760-21	FERRITE	0UH				
FB4015	1-414-760-21	FERRITE	0UH	FB7306	1-400-834-11	FERRITE	0UH
FB4016	1-414-760-21	FERRITE	0UH	FB7307	1-400-834-11	FERRITE	0UH
				FB7308	1-400-834-11	FERRITE	0UH
				FB7309	1-469-869-21	FERRITE	0UH

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
	< IC >			IC7309	6-707-853-01	IC TC74LCX541FT(EKJ)	
IC2000	8-753-264-52	IC CXD1968R-T6		IC7310	6-710-593-01	IC MIC2025-1YM	
IC2002	6-709-932-01	IC MM3141CNRE		< SOCKET >			
IC2200	6-704-747-01	IC TDA9886TS/V4,118		J3000	1-780-368-11	S TERMINAL BLOCK (RIGHT ANGLE)	
IC2202	6-709-257-01	IC 74LVC4066PW		J3001	1-819-327-31	PHONO JACK 2P	
IC2203	8-759-082-60	IC TC7S66FU		J3002	1-819-327-31	PHONO JACK 2P	
IC2204	6-709-607-01	IC LA5795T-TLM-E		J3003	1-820-021-11	JACK	
IC3200	8-759-359-49	IC NJM3414AV(TE2)		J3004	1-821-055-12	PHONO JACK 5P	
IC3201	6-709-927-01	IC RT8H225C-TP-2		J3201	1-815-325-11	JACK	
IC3400	6-710-905-01	IC AK4388ET-E2		< COIL >			
IC3402	8-759-278-58	IC NJM4558V-TE2		L2000	1-469-842-21	INDUCTOR	0.47UH
IC3600	8-759-385-76	IC MC14052 BDR2		L2001	1-412-058-11	INDUCTOR	10UH
IC4000	8-759-082-60	IC TC7S66FU		L2002	1-412-058-11	INDUCTOR	10UH
IC4001	6-701-173-01	IC MC74LVXT4053DTR2		L2003	1-412-058-11	INDUCTOR	10UH
IC4002	8-759-701-01	IC NJM2904M		L2004	1-412-058-11	INDUCTOR	10UH
IC4003	6-710-023-01	IC CAT24C32WI-GT3		L2005	1-412-058-11	INDUCTOR	10UH
IC4004	6-703-175-01	IC PST3629UL		L2006	1-412-058-11	INDUCTOR	10UH
IC4005	6-807-754-01	IC CXD9922R		L2200	1-412-006-31	INDUCTOR	10UH
IC4006	8-759-701-01	IC NJM2904M		L2201	1-414-580-21	INDUCTOR	100NH
IC4008	6-706-482-01	IC TC7SH00FU(T5RSOYJF)		L2202	1-414-580-21	INDUCTOR	100NH
IC4009	6-705-580-01	IC PST3616UL		L2203	1-412-987-31	INDUCTOR	4.7UH
IC4500	6-701-162-01	IC MC74LVX259DTR2		L2204	1-414-580-21	INDUCTOR	100NH
IC4501	6-710-018-01	IC CAT24C02WI-GT3		L2205	1-412-006-31	INDUCTOR	10UH
IC4502	6-701-166-01	IC MC74LVX4051DTR2		L2206	1-412-987-31	INDUCTOR	4.7UH
IC4503	6-701-162-01	IC MC74LVX259DTR2		L2207	1-414-521-11	INDUCTOR	10UH
IC5500	6-710-018-01	IC CAT24C02WI-GT3		L2208	1-410-993-42	INDUCTOR	1UH
IC5501	6-709-806-01	IC IP4776CZ38		L2209	1-412-006-31	INDUCTOR	10UH
IC5502	6-710-018-01	IC CAT24C02WI-GT3		L2210	1-410-993-42	INDUCTOR	1UH
IC5503	6-709-806-01	IC IP4776CZ38		L3200	1-412-058-11	INDUCTOR	10UH
IC6400	6-706-046-01	IC TK11185CSCL-G		L3600	1-412-058-11	INDUCTOR	10UH
IC6401	6-710-922-01	IC BD9853AFV-E2		L4000	1-456-984-11	INDUCTOR	0UH
IC6402	6-710-922-01	IC BD9853AFV-E2		L4001	1-456-984-11	INDUCTOR	0UH
IC6403	6-705-403-01	IC PQ070XZ01ZPH		L4002	1-456-984-11	INDUCTOR	0UH
IC6404	6-711-746-01	IC LD1117ASTR		L4003	1-412-990-41	INDUCTOR	8.2UH
IC6405	6-705-403-01	IC PQ070XZ01ZPH		L4004	1-456-984-11	INDUCTOR	0UH
IC7100	6-709-214-01	IC UPD61123F1-100-KA3-A		L4005	1-456-984-11	INDUCTOR	0UH
IC7200	6-711-534-01	IC NAND128W3A2BN6F		L4006	1-412-052-21	INDUCTOR	1UH
IC7201	6-705-306-01	IC HYB25DC256160CE-6		L4007	1-400-180-21	FERRITE	0UH
IC7202	6-708-916-01	IC ICS7150MLFT		L5500	1-414-394-11	INDUCTOR	2.2UH
IC7203	6-700-108-01	IC RV5C387A-E2-FB		L5501	1-414-394-11	INDUCTOR	2.2UH
IC7300	6-706-482-01	IC TC7SH00FU(T5RSOYJF)		L5502	1-414-394-11	INDUCTOR	2.2UH
IC7301	6-707-850-01	IC TC74LCX245FT(EKJ)		L5503	1-414-394-11	INDUCTOR	2.2UH
IC7302	6-706-482-01	IC TC7SH00FU(T5RSOYJF)		L5504	1-414-394-11	INDUCTOR	2.2UH
IC7303	6-707-846-01	IC TC74LCX14FT(EKJ)		L5505	1-414-394-11	INDUCTOR	2.2UH
IC7304	6-707-853-01	IC TC74LCX541FT(EKJ)		L5506	1-414-394-11	INDUCTOR	2.2UH
IC7305	6-707-853-01	IC TC74LCX541FT(EKJ)		L5507	1-414-394-11	INDUCTOR	2.2UH
IC7306	6-707-853-01	IC TC74LCX541FT(EKJ)		L5508	1-414-394-11	INDUCTOR	2.2UH
IC7307	6-707-853-01	IC TC74LCX541FT(EKJ)					
IC7308	6-707-853-01	IC TC74LCX541FT(EKJ)					

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

B1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
L6400	1-457-549-11	INDUCTOR	4.9UH	Q3208	8-729-421-19	TRANSISTOR UN2213	
L6401	1-457-439-11	INDUCTOR	4.7UH	Q3600	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
L6402	1-414-398-11	INDUCTOR	10UH	Q3601	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
L6403	1-457-439-11	INDUCTOR	4.7UH	Q4001	8-729-028-73	TRANSISTOR DTA114EUA-T106	
L6404	1-457-439-11	INDUCTOR	4.7UH	Q4002	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L6405	1-457-549-11	INDUCTOR	4.9UH	Q4003	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L6406	1-457-455-11	INDUCTOR	10UH	Q4004	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L6407	1-457-455-11	INDUCTOR	10UH	Q4005	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
L6408	1-457-455-11	INDUCTOR	10UH	Q4006	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
L6409	1-457-455-11	INDUCTOR	10UH	Q4007	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L6410	1-412-052-21	INDUCTOR	1UH	Q4009	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
L6411	1-412-052-21	INDUCTOR	1UH	Q4010	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L6412	1-412-052-21	INDUCTOR	1UH	Q4013	8-729-050-10	TRANSISTOR PMBF170-215	
L6413	1-414-394-11	INDUCTOR	2.2UH	Q4014	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
L6414	1-412-052-21	INDUCTOR	1UH	Q4015	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
L6415	1-412-052-21	INDUCTOR	1UH	Q5500	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L6416	1-412-052-21	INDUCTOR	1UH	Q5501	8-729-421-22	TRANSISTOR UN2211	
L6417	1-412-052-21	INDUCTOR	1UH	Q5502	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L6418	1-412-052-21	INDUCTOR	1UH	Q5503	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L6419	1-412-052-21	INDUCTOR	1UH	Q5504	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L6420	1-412-052-21	INDUCTOR	1UH	Q5505	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L6421	1-412-052-21	INDUCTOR	1UH	Q5506	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L6422	1-412-052-21	INDUCTOR	1UH	Q5507	8-729-028-96	TRANSISTOR DTC114EUA-T106	
L6423	1-414-394-11	INDUCTOR	2.2UH	Q5508	8-729-028-96	TRANSISTOR DTC114EUA-T106	
L6424	1-414-394-11	INDUCTOR	2.2UH	Q6400	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
L7100	1-414-398-11	INDUCTOR	10UH	Q6401	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L7200	1-412-008-31	INDUCTOR	15UH	Q6402	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
< PROTECTOR MODULE >				Q6403	8-729-027-43	TRANSISTOR DTC114EKA-T146	
PS6400 Δ	1-576-736-41	IC LINK	3.15A 24V	Q6404	8-729-027-43	TRANSISTOR DTC114EKA-T146	
PS6401 Δ	1-576-736-41	IC LINK	3.15A 24V	Q6405	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
PS6402 Δ	1-576-736-41	IC LINK	3.15A 24V	Q6406	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
< TRANSISTOR >				Q6407	6-550-828-01	TRANSISTOR RSQ035P03TR	
Q2200	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		Q6408	6-550-828-01	TRANSISTOR RSQ035P03TR	
Q2201	6-551-392-01	TRANSISTOR RT6N140C-TP-1		Q6409	6-550-355-01	TRANSISTOR RTQ045N03TR	
Q2203	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		Q6410	6-550-355-01	TRANSISTOR RTQ045N03TR	
Q2204	8-729-038-28	TRANSISTOR RT1N441C-TP-1		Q6411	6-550-828-01	TRANSISTOR RSQ035P03TR	
Q2205	8-729-010-05	TRANSISTOR MSB709-RT1		Q6412	6-551-334-01	TRANSISTOR RTL035N03TR	
Q2206	8-729-027-43	TRANSISTOR DTC114EKA-T146		Q6414	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
Q2209	8-729-038-28	TRANSISTOR RT1N441C-TP-1		Q6415	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q3001	8-729-120-28	TRANSISTOR 2SC1623-L5L6		Q6416	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
Q3003	8-729-120-28	TRANSISTOR 2SC1623-L5L6		Q6417	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
Q3200	6-551-677-01	TRANSISTOR RTAN140M-T111-1		Q6418	6-550-369-01	TRANSISTOR TPC8109 (TE12L)	
Q3201	6-551-677-01	TRANSISTOR RTAN140M-T111-1		Q6419	6-550-585-01	TRANSISTOR 2PC4081R-115	
Q3202	6-550-586-01	TRANSISTOR 2PA1576R-115		Q6420	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q3205	8-729-422-29	TRANSISTOR 2SD601A-S		Q6421	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q3206	8-729-422-29	TRANSISTOR 2SD601A-S		Q6422	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
Q3207	8-729-038-28	TRANSISTOR RT1N441C-TP-1		Q6423	6-550-369-01	TRANSISTOR TPC8109 (TE12L)	
				Q6424	6-550-585-01	TRANSISTOR 2PC4081R-115	
				Q6425	6-550-585-01	TRANSISTOR 2PC4081R-115	
				Q7201	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
Q7202	8-729-028-28	TRANSISTOR 2SK2036(TE85L)				R2233	1-218-956-11	RES-CHIP	1.8K	5%	1/16W
Q7203	8-729-028-96	TRANSISTOR DTC114EUA-T106				R2234	1-218-941-81	RES-CHIP	100	5%	1/16W
Q7204	8-729-028-86	TRANSISTOR DTA143EUA-T106				R2235	1-218-990-81	SHORT CHIP	0		
< RESISTOR >						R2236	1-218-951-11	RES-CHIP	680	5%	1/16W
						R2238	1-218-990-81	SHORT CHIP	0		
R2000	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2239	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R2001	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2240	1-218-954-11	RES-CHIP	1.2K	5%	1/16W
R2003	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2242	1-218-939-11	RES-CHIP	68	5%	1/16W
R2004	1-218-941-81	RES-CHIP	100	5%	1/16W	R2243	1-218-939-11	RES-CHIP	68	5%	1/16W
R2005	1-218-941-81	RES-CHIP	100	5%	1/16W	R2244	1-218-946-11	RES-CHIP	270	5%	1/16W
R2006	1-218-953-11	RES-CHIP	1K	5%	1/16W	R2245	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2008	1-218-941-81	RES-CHIP	100	5%	1/16W	R2247	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2010	1-218-989-11	RES-CHIP	1M	5%	1/16W	R2248	1-218-990-81	SHORT CHIP	0		
R2011	1-218-941-81	RES-CHIP	100	5%	1/16W	R2249	1-218-944-11	RES-CHIP	180	5%	1/16W
R2013	1-218-937-11	RES-CHIP	47	5%	1/16W	R2250	1-218-933-11	RES-CHIP	22	5%	1/16W
R2014	1-218-941-81	RES-CHIP	100	5%	1/16W	R2251	1-218-953-11	RES-CHIP	1K	5%	1/16W
R2015	1-218-941-81	RES-CHIP	100	5%	1/16W	R2252	1-218-990-81	SHORT CHIP	0		
R2016	1-216-864-11	SHORT CHIP	0			R2259	1-218-990-81	SHORT CHIP	0		
R2017	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2260	1-218-990-81	SHORT CHIP	0		
R2018	1-218-941-81	RES-CHIP	100	5%	1/16W	R2264	1-218-990-81	SHORT CHIP	0		
R2019	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2267	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2021	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2270	1-218-953-11	RES-CHIP	1K	5%	1/16W
R2022	1-218-941-81	RES-CHIP	100	5%	1/16W	R2274	1-216-864-11	SHORT CHIP	0		
R2023	1-218-941-81	RES-CHIP	100	5%	1/16W	R2275	1-216-864-11	SHORT CHIP	0		
R2024	1-218-941-81	RES-CHIP	100	5%	1/16W	R2276	1-216-864-11	SHORT CHIP	0		
R2026	1-216-864-11	SHORT CHIP	0			R2279	1-218-990-81	SHORT CHIP	0		
R2027	1-216-864-11	SHORT CHIP	0			R2280	1-218-990-81	SHORT CHIP	0		
R2029	1-216-864-11	SHORT CHIP	0			R2283	1-218-990-81	SHORT CHIP	0		
R2030	1-218-989-11	RES-CHIP	1M	5%	1/16W	R2285	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2201	1-218-967-11	RES-CHIP	15K	5%	1/16W	R2288	1-218-990-81	SHORT CHIP	0		
R2202	1-218-953-11	RES-CHIP	1K	5%	1/16W	R2291	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2208	1-218-990-81	SHORT CHIP	0			R2293	1-218-990-81	SHORT CHIP	0		
R2211	1-218-990-81	SHORT CHIP	0			R2295	1-218-990-81	SHORT CHIP	0		
R2212	1-218-990-81	SHORT CHIP	0			R2297	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2213	1-218-990-81	SHORT CHIP	0			R2298	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R2216	1-218-990-81	SHORT CHIP	0			R2299	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R2217	1-218-990-81	SHORT CHIP	0			R2300	1-218-990-81	SHORT CHIP	0		
R2218	1-218-990-81	SHORT CHIP	0			R2301	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R2220	1-218-949-11	RES-CHIP	470	5%	1/16W	R3000	1-216-295-91	SHORT CHIP	0		
R2222	1-216-830-11	METAL CHIP	5.6K	5%	1/10W	R3001	1-216-864-11	SHORT CHIP	0		
R2223	1-218-943-11	RES-CHIP	150	5%	1/16W	R3002	1-216-815-11	METAL CHIP	330	5%	1/10W
R2224	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R3003	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2225	1-218-966-11	RES-CHIP	12K	5%	1/16W	R3004	1-216-815-11	METAL CHIP	330	5%	1/10W
R2226	1-218-949-11	RES-CHIP	470	5%	1/16W	R3005	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2227	1-218-990-81	SHORT CHIP	0			R3006	1-216-022-00	RES-CHIP	75	5%	1/10W
R2228	1-218-941-81	RES-CHIP	100	5%	1/16W	R3008	1-216-022-00	RES-CHIP	75	5%	1/10W
R2229	1-218-990-81	SHORT CHIP	0			R3009	1-216-022-00	RES-CHIP	75	5%	1/10W
R2230	1-218-941-81	RES-CHIP	100	5%	1/16W	R3010	1-216-022-00	RES-CHIP	75	5%	1/10W
R2231	1-218-977-11	RES-CHIP	100K	5%	1/16W	R3011	1-216-022-00	RES-CHIP	75	5%	1/10W
R2232	1-218-945-11	RES-CHIP	220	5%	1/16W	R3012	1-218-285-11	METAL CHIP	75	5%	1/10W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R3013	1-216-811-11	METAL CHIP	150	5%	1/10W	R3068	1-216-022-00	RES-CHIP	75	5%	1/10W
R3014	1-216-815-11	METAL CHIP	330	5%	1/10W	R3069	1-216-815-11	METAL CHIP	330	5%	1/10W
R3015	1-216-815-11	METAL CHIP	330	5%	1/10W	R3070	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3016	1-216-811-11	METAL CHIP	150	5%	1/10W	R3071	1-216-815-11	METAL CHIP	330	5%	1/10W
R3017	1-216-821-11	METAL CHIP	1K	5%	1/10W	R3072	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3018	1-216-821-11	METAL CHIP	1K	5%	1/10W	R3073	1-216-809-11	METAL CHIP	100	5%	1/10W
R3019	1-216-813-11	METAL CHIP	220	5%	1/10W	R3074	1-216-809-11	METAL CHIP	100	5%	1/10W
R3020	1-216-864-11	SHORT CHIP	0			R3075	1-216-809-11	METAL CHIP	100	5%	1/10W
R3021	1-216-813-11	METAL CHIP	220	5%	1/10W	R3076	1-216-853-11	METAL CHIP	470K	5%	1/10W
R3022	1-216-864-11	SHORT CHIP	0			R3077	1-216-853-11	METAL CHIP	470K	5%	1/10W
R3023	1-216-025-11	RES-CHIP	100	5%	1/10W	R3078	1-216-864-11	SHORT CHIP	0		
R3024	1-216-033-00	RES-CHIP	220	5%	1/10W	R3079	1-216-864-11	SHORT CHIP	0		
R3025	1-216-025-11	RES-CHIP	100	5%	1/10W	R3080	1-216-864-11	SHORT CHIP	0		
R3026	1-216-025-11	RES-CHIP	100	5%	1/10W	R3081	1-216-864-11	SHORT CHIP	0		
R3027	1-216-025-11	RES-CHIP	100	5%	1/10W	R3082	1-216-864-11	SHORT CHIP	0		
R3028	1-216-022-00	RES-CHIP	75	5%	1/10W	R3083	1-216-864-11	SHORT CHIP	0		
R3029	1-216-025-11	RES-CHIP	100	5%	1/10W	R3084	1-216-025-11	RES-CHIP	100	5%	1/10W
R3030	1-216-864-11	SHORT CHIP	0			R3085	1-216-025-11	RES-CHIP	100	5%	1/10W
R3031	1-216-864-11	SHORT CHIP	0			R3086	1-216-033-00	RES-CHIP	220	5%	1/10W
R3032	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3087	1-216-025-11	RES-CHIP	100	5%	1/10W
R3033	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3088	1-216-025-11	RES-CHIP	100	5%	1/10W
R3034	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3089	1-216-025-11	RES-CHIP	100	5%	1/10W
R3035	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3090	1-216-022-00	RES-CHIP	75	5%	1/10W
R3036	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3091	1-216-025-11	RES-CHIP	100	5%	1/10W
R3037	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3092	1-216-029-00	RES-CHIP	150	5%	1/10W
R3038	1-216-809-11	METAL CHIP	100	5%	1/10W	R3093	1-216-029-00	RES-CHIP	150	5%	1/10W
R3039	1-216-864-11	SHORT CHIP	0			R3094	1-216-029-00	RES-CHIP	150	5%	1/10W
R3040	1-216-811-11	METAL CHIP	150	5%	1/10W	R3095	1-216-853-11	METAL CHIP	470K	5%	1/10W
R3041	1-216-817-11	METAL CHIP	470	5%	1/10W	R3096	1-216-853-11	METAL CHIP	470K	5%	1/10W
R3042	1-216-811-11	METAL CHIP	150	5%	1/10W	R3097	1-216-853-11	METAL CHIP	470K	5%	1/10W
R3043	1-216-840-11	METAL CHIP	39K	5%	1/10W	R3098	1-216-853-11	METAL CHIP	470K	5%	1/10W
R3044	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3099	1-216-029-00	RES-CHIP	150	5%	1/10W
R3045	1-216-049-11	RES-CHIP	1K	5%	1/10W	R3100	1-216-029-00	RES-CHIP	150	5%	1/10W
R3046	1-216-049-11	RES-CHIP	1K	5%	1/10W	R3101	1-216-029-00	RES-CHIP	150	5%	1/10W
R3047	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3102	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3048	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3103	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3049	1-216-864-11	SHORT CHIP	0			R3104	1-216-811-11	METAL CHIP	150	5%	1/10W
R3050	1-216-864-11	SHORT CHIP	0			R3105	1-216-817-11	METAL CHIP	470	5%	1/10W
R3051	1-216-864-11	SHORT CHIP	0			R3106	1-216-811-11	METAL CHIP	150	5%	1/10W
R3052	1-216-864-11	SHORT CHIP	0			R3107	1-216-840-11	METAL CHIP	39K	5%	1/10W
R3053	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3108	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3054	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3206	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3059	1-216-049-11	RES-CHIP	1K	5%	1/10W	R3207	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3060	1-216-049-11	RES-CHIP	1K	5%	1/10W	R3208	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3061	1-216-813-11	METAL CHIP	220	5%	1/10W	R3209	1-218-973-11	RES-CHIP	47K	5%	1/16W
R3062	1-216-295-91	SHORT CHIP	0			R3212	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3063	1-216-022-00	RES-CHIP	75	5%	1/10W	R3213	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3065	1-216-022-00	RES-CHIP	75	5%	1/10W	R3214	1-218-973-11	RES-CHIP	47K	5%	1/16W
R3066	1-216-022-00	RES-CHIP	75	5%	1/10W	R3217	1-218-973-11	RES-CHIP	47K	5%	1/16W
R3067	1-216-022-00	RES-CHIP	75	5%	1/10W	R3218	1-218-965-11	RES-CHIP	10K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R3219	1-218-973-11	RES-CHIP	47K	5%	1/16W	R3602	1-218-941-81	RES-CHIP	100	5%	1/16W
R3222	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3603	1-218-941-81	RES-CHIP	100	5%	1/16W
R3223	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3604	1-218-941-81	RES-CHIP	100	5%	1/16W
R3224	1-218-977-11	RES-CHIP	100K	5%	1/16W	R3605	1-218-990-81	SHORT CHIP	0		
R3225	1-216-809-11	METAL CHIP	100	5%	1/10W	R3606	1-218-990-81	SHORT CHIP	0		
R3226	1-216-809-11	METAL CHIP	100	5%	1/10W	R3607	1-218-990-81	SHORT CHIP	0		
R3227	1-216-813-11	METAL CHIP	220	5%	1/10W	R3608	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3228	1-216-813-11	METAL CHIP	220	5%	1/10W	R3609	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3234	1-216-864-11	SHORT CHIP	0			R3610	1-218-941-81	RES-CHIP	100	5%	1/16W
R3235	1-216-864-11	SHORT CHIP	0			R3611	1-218-941-81	RES-CHIP	100	5%	1/16W
R3236	1-216-864-11	SHORT CHIP	0			R3612	1-218-941-81	RES-CHIP	100	5%	1/16W
R3238	1-216-817-11	METAL CHIP	470	5%	1/10W	R3613	1-218-941-81	RES-CHIP	100	5%	1/16W
R3239	1-216-817-11	METAL CHIP	470	5%	1/10W	R3614	1-218-941-81	RES-CHIP	100	5%	1/16W
R3240	1-216-821-11	METAL CHIP	1K	5%	1/10W	R3615	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3241	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3616	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3242	1-216-864-11	SHORT CHIP	0			R3617	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3243	1-216-817-11	METAL CHIP	470	5%	1/10W	R3618	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3246	1-218-969-11	RES-CHIP	22K	5%	1/16W	R3619	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3247	1-218-969-11	RES-CHIP	22K	5%	1/16W	R3620	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3248	1-216-841-11	METAL CHIP	47K	5%	1/10W	R3621	1-216-864-11	SHORT CHIP	0		
R3249	1-216-809-11	METAL CHIP	100	5%	1/10W	R3622	1-216-864-11	SHORT CHIP	0		
R3250	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3623	1-216-864-11	SHORT CHIP	0		
R3251	1-216-864-11	SHORT CHIP	0			R4000	1-218-990-81	SHORT CHIP	0		
R3253	1-216-864-11	SHORT CHIP	0			R4002	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3254	1-216-837-11	METAL CHIP	22K	5%	1/10W	R4004	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3255	1-218-990-81	SHORT CHIP	0			R4005	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R3401	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4006	1-218-990-81	SHORT CHIP	0		
R3404	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4007	1-218-990-81	SHORT CHIP	0		
R3405	1-218-941-81	RES-CHIP	100	5%	1/16W	R4008	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3408	1-218-977-11	RES-CHIP	100K	5%	1/16W	R4009	1-218-941-81	RES-CHIP	100	5%	1/16W
R3409	1-218-977-11	RES-CHIP	100K	5%	1/16W	R4010	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R3410	1-218-945-11	RES-CHIP	220	5%	1/16W	R4012	1-218-990-81	SHORT CHIP	0		
R3411	1-218-945-11	RES-CHIP	220	5%	1/16W	R4013	1-218-941-81	RES-CHIP	100	5%	1/16W
R3412	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R4022	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3413	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R4024	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3414	1-218-972-11	RES-CHIP	39K	5%	1/16W	R4026	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3415	1-218-972-11	RES-CHIP	39K	5%	1/16W	R4027	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3416	1-218-968-11	RES-CHIP	18K	5%	1/16W	R4028	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3417	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4029	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3418	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4030	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3419	1-218-968-11	RES-CHIP	18K	5%	1/16W	R4031	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R3420	1-218-967-11	RES-CHIP	15K	5%	1/16W	R4032	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3421	1-218-967-11	RES-CHIP	15K	5%	1/16W	R4033	1-218-973-11	RES-CHIP	47K	5%	1/16W
R3422	1-218-968-11	RES-CHIP	18K	5%	1/16W	R4034	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3423	1-218-968-11	RES-CHIP	18K	5%	1/16W	R4035	1-218-973-11	RES-CHIP	47K	5%	1/16W
R3426	1-218-941-81	RES-CHIP	100	5%	1/16W	R4036	1-218-990-81	SHORT CHIP	0		
R3427	1-218-941-81	RES-CHIP	100	5%	1/16W	R4037	1-218-981-91	RES-CHIP	220K	5%	1/16W
R3428	1-218-990-81	SHORT CHIP	0			R4040	1-218-990-81	SHORT CHIP	0		
R3600	1-218-941-81	RES-CHIP	100	5%	1/16W	R4041	1-218-990-81	SHORT CHIP	0		
R3601	1-218-941-81	RES-CHIP	100	5%	1/16W	R4042	1-218-990-81	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R4043	1-218-990-81	SHORT CHIP	0			R4123	1-218-990-81	SHORT CHIP	0		
R4044	1-218-990-81	SHORT CHIP	0			R4124	1-218-941-81	RES-CHIP	100	5%	1/16W
R4045	1-208-931-11	METAL CHIP	68K	0.5%	1/16W	R4125	1-218-941-81	RES-CHIP	100	5%	1/16W
R4046	1-220-397-11	METAL CHIP	4.7M	5%	1/10W	R4126	1-218-941-81	RES-CHIP	100	5%	1/16W
R4049	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4127	1-218-941-81	RES-CHIP	100	5%	1/16W
R4050	1-208-675-11	METAL CHIP	470	0.5%	1/16W	R4129	1-218-941-81	RES-CHIP	100	5%	1/16W
R4051	1-218-990-81	SHORT CHIP	0			R4130	1-208-931-11	METAL CHIP	68K	0.5%	1/16W
R4053	1-218-990-81	SHORT CHIP	0			R4131	1-218-941-81	RES-CHIP	100	5%	1/16W
R4054	1-218-990-81	SHORT CHIP	0			R4132	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R4055	1-218-990-81	SHORT CHIP	0			R4133	1-218-941-81	RES-CHIP	100	5%	1/16W
R4056	1-218-990-81	SHORT CHIP	0			R4135	1-218-941-81	RES-CHIP	100	5%	1/16W
R4057	1-218-990-81	SHORT CHIP	0			R4136	1-216-864-11	SHORT CHIP	0		
R4058	1-218-990-81	SHORT CHIP	0			R4137	1-218-941-81	RES-CHIP	100	5%	1/16W
R4059	1-218-990-81	SHORT CHIP	0			R4138	1-218-941-81	RES-CHIP	100	5%	1/16W
R4060	1-218-990-81	SHORT CHIP	0			R4139	1-218-941-81	RES-CHIP	100	5%	1/16W
R4062	1-218-990-81	SHORT CHIP	0			R4140	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R4064	1-218-990-81	SHORT CHIP	0			R4141	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R4067	1-208-943-11	METAL CHIP	220K	0.5%	1/16W	R4142	1-218-941-81	RES-CHIP	100	5%	1/16W
R4069	1-218-990-81	SHORT CHIP	0			R4143	1-218-941-81	RES-CHIP	100	5%	1/16W
R4070	1-218-990-81	SHORT CHIP	0			R4144	1-218-970-11	RES-CHIP	27K	5%	1/16W
R4078	1-218-847-11	METAL CHIP	1K	0.5%	1/10W	R4145	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R4079	1-218-941-81	RES-CHIP	100	5%	1/16W	R4146	1-218-941-81	RES-CHIP	100	5%	1/16W
R4080	1-218-941-81	RES-CHIP	100	5%	1/16W	R4148	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4081	1-218-941-81	RES-CHIP	100	5%	1/16W	R4149	1-218-937-11	RES-CHIP	47	5%	1/16W
R4085	1-218-941-81	RES-CHIP	100	5%	1/16W	R4152	1-218-990-81	SHORT CHIP	0		
R4086	1-218-941-81	RES-CHIP	100	5%	1/16W	R4158	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4087	1-218-941-81	RES-CHIP	100	5%	1/16W	R4159	1-218-990-81	SHORT CHIP	0		
R4088	1-208-933-11	METAL CHIP	82K	0.5%	1/16W	R4160	1-218-941-81	RES-CHIP	100	5%	1/16W
R4089	1-218-990-81	SHORT CHIP	0			R4161	1-216-864-11	SHORT CHIP	0		
R4090	1-218-949-11	RES-CHIP	470	5%	1/16W	R4165	1-218-941-81	RES-CHIP	100	5%	1/16W
R4091	1-218-941-81	RES-CHIP	100	5%	1/16W	R4166	1-218-941-81	RES-CHIP	100	5%	1/16W
R4094	1-218-941-81	RES-CHIP	100	5%	1/16W	R4167	1-216-864-11	SHORT CHIP	0		
R4097	1-218-990-81	SHORT CHIP	0			R4168	1-218-941-81	RES-CHIP	100	5%	1/16W
R4098	1-218-990-81	SHORT CHIP	0			R4170	1-218-941-81	RES-CHIP	100	5%	1/16W
R4099	1-218-941-81	RES-CHIP	100	5%	1/16W	R4178	1-218-990-81	SHORT CHIP	0		
R4100	1-218-990-81	SHORT CHIP	0			R4181	1-218-941-81	RES-CHIP	100	5%	1/16W
R4101	1-218-990-81	SHORT CHIP	0			R4188	1-218-949-11	RES-CHIP	470	5%	1/16W
R4102	1-218-941-81	RES-CHIP	100	5%	1/16W	R4189	1-218-949-11	RES-CHIP	470	5%	1/16W
R4103	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4195	1-218-941-81	RES-CHIP	100	5%	1/16W
R4107	1-218-990-81	SHORT CHIP	0			R4196	1-218-941-81	RES-CHIP	100	5%	1/16W
R4108	1-218-990-81	SHORT CHIP	0			R4206	1-218-941-81	RES-CHIP	100	5%	1/16W
R4110	1-218-953-11	RES-CHIP	1K	5%	1/16W	R4207	1-218-941-81	RES-CHIP	100	5%	1/16W
R4112	1-218-990-81	SHORT CHIP	0			R4208	1-218-941-81	RES-CHIP	100	5%	1/16W
R4113	1-218-941-81	RES-CHIP	100	5%	1/16W	R4209	1-218-941-81	RES-CHIP	100	5%	1/16W
R4114	1-218-941-81	RES-CHIP	100	5%	1/16W	R4210	1-218-941-81	RES-CHIP	100	5%	1/16W
R4115	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	R4211	1-218-941-81	RES-CHIP	100	5%	1/16W
R4117	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4212	1-218-941-81	RES-CHIP	100	5%	1/16W
R4119	1-218-978-11	RES-CHIP	120K	5%	1/16W	R4213	1-218-941-81	RES-CHIP	100	5%	1/16W
R4121	1-218-990-81	SHORT CHIP	0			R4214	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4122	1-218-990-81	SHORT CHIP	0			R4216	1-218-990-81	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R4217	1-218-990-81	SHORT CHIP	0			R4519	1-218-827-11	METAL CHIP	150	0.5%	1/10W
R4218	1-208-939-11	METAL CHIP	150K	0.5%	1/16W	R4522	1-218-827-11	METAL CHIP	150	0.5%	1/10W
R4220	1-216-821-11	METAL CHIP	1K	5%	1/10W	R4523	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R4221	1-218-949-11	RES-CHIP	470	5%	1/16W	R4524	1-218-827-11	METAL CHIP	150	0.5%	1/10W
R4222	1-216-832-11	METAL CHIP	8.2K	5%	1/10W	R4526	1-218-827-11	METAL CHIP	150	0.5%	1/10W
R4224	1-218-969-11	RES-CHIP	22K	5%	1/16W	R4527	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R4225	1-218-981-91	RES-CHIP	220K	5%	1/16W	R4530	1-216-864-11	SHORT CHIP	0		
R4229	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W	R4531	1-216-864-11	SHORT CHIP	0		
R4230	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R4532	1-216-864-11	SHORT CHIP	0		
R4232	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4533	1-216-864-11	SHORT CHIP	0		
R4233	1-218-971-11	RES-CHIP	33K	5%	1/16W	R4534	1-216-864-11	SHORT CHIP	0		
R4237	1-218-990-81	SHORT CHIP	0			R4535	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4238	1-218-971-11	RES-CHIP	33K	5%	1/16W	R4537	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R4240	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4540	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R4241	1-218-941-81	RES-CHIP	100	5%	1/16W	R4542	1-218-941-81	RES-CHIP	100	5%	1/16W
R4242	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4544	1-216-821-11	METAL CHIP	1K	5%	1/10W
R4243	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4546	1-218-941-81	RES-CHIP	100	5%	1/16W
R4252	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R4548	1-218-941-81	RES-CHIP	100	5%	1/16W
R4253	1-218-990-81	SHORT CHIP	0			R4549	1-218-941-81	RES-CHIP	100	5%	1/16W
R4254	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R4551	1-218-941-81	RES-CHIP	100	5%	1/16W
R4256	1-218-990-81	SHORT CHIP	0			R4552	1-218-941-81	RES-CHIP	100	5%	1/16W
R4257	1-218-990-81	SHORT CHIP	0			R4553	1-218-941-81	RES-CHIP	100	5%	1/16W
R4265	1-218-990-81	SHORT CHIP	0			R4555	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4274	1-218-990-81	SHORT CHIP	0			R4557	1-218-941-81	RES-CHIP	100	5%	1/16W
R4275	1-218-990-81	SHORT CHIP	0			R4569	1-216-864-11	SHORT CHIP	0		
R4276	1-218-990-81	SHORT CHIP	0			R4570	1-218-941-81	RES-CHIP	100	5%	1/16W
R4277	1-218-941-81	RES-CHIP	100	5%	1/16W	R4571	1-218-941-81	RES-CHIP	100	5%	1/16W
R4278	1-218-990-81	SHORT CHIP	0			R5500	1-218-979-11	RES-CHIP	150K	5%	1/16W
R4279	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5502	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4280	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5503	1-218-970-11	RES-CHIP	27K	5%	1/16W
R4283	1-218-941-81	RES-CHIP	100	5%	1/16W	R5504	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4284	1-218-941-81	RES-CHIP	100	5%	1/16W	R5505	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4311	1-218-990-81	SHORT CHIP	0			R5506	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4500	1-216-805-11	METAL CHIP	47	5%	1/10W	R5507	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4501	1-216-864-11	SHORT CHIP	0			R5508	1-218-978-11	RES-CHIP	120K	5%	1/16W
R4502	1-216-864-11	SHORT CHIP	0			R5509	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4503	1-216-864-11	SHORT CHIP	0			R5510	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4504	1-216-805-11	METAL CHIP	47	5%	1/10W	R5511	1-218-941-81	RES-CHIP	100	5%	1/16W
R4506	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5512	1-218-941-81	RES-CHIP	100	5%	1/16W
R4507	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5513	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4508	1-216-821-11	METAL CHIP	1K	5%	1/10W	R5514	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R4509	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5515	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R4510	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5516	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4511	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5518	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4512	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5520	1-218-978-11	RES-CHIP	120K	5%	1/16W
R4513	1-216-805-11	METAL CHIP	47	5%	1/10W	R5521	1-218-941-81	RES-CHIP	100	5%	1/16W
R4514	1-216-805-11	METAL CHIP	47	5%	1/10W	R5522	1-218-941-81	RES-CHIP	100	5%	1/16W
R4515	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R5523	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4516	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R5524	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R4518	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R5525	1-208-711-11	METAL CHIP	15K	0.5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R5526	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R6413	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R5527	1-218-977-11	RES-CHIP	100K	5%	1/16W	R6414	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5530	1-218-941-81	RES-CHIP	100	5%	1/16W	R6415	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R5531	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R6416	1-208-933-11	METAL CHIP	82K	0.5%	1/16W
R5532	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R6417	1-208-933-11	METAL CHIP	82K	0.5%	1/16W
R5533	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6418	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R5537	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6420	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5539	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R6421	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R5540	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R6422	1-218-990-81	SHORT CHIP	0		
R5541	1-218-941-81	RES-CHIP	100	5%	1/16W	R6423	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R5544	1-218-990-81	SHORT CHIP	0			R6424	1-208-933-11	METAL CHIP	82K	0.5%	1/16W
R5545	1-218-990-81	SHORT CHIP	0			R6425	1-208-918-11	METAL CHIP	20K	0.5%	1/16W
R5546	1-218-990-81	SHORT CHIP	0			R6426	1-218-990-81	SHORT CHIP	0		
R5547	1-218-971-11	RES-CHIP	33K	5%	1/16W	R6427	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5548	1-218-990-81	SHORT CHIP	0			R6429	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R5549	1-218-941-81	RES-CHIP	100	5%	1/16W	R6430	1-218-990-81	SHORT CHIP	0		
R5550	1-218-990-81	SHORT CHIP	0			R6431	1-218-990-81	SHORT CHIP	0		
R5551	1-218-990-81	SHORT CHIP	0			R6432	1-218-990-81	SHORT CHIP	0		
R5552	1-218-941-81	RES-CHIP	100	5%	1/16W	R6433	1-216-295-91	SHORT CHIP	0		
R5553	1-218-990-81	SHORT CHIP	0			R6434	1-218-990-81	SHORT CHIP	0		
R5554	1-218-941-81	RES-CHIP	100	5%	1/16W	R6436	1-218-990-81	SHORT CHIP	0		
R5555	1-218-941-81	RES-CHIP	100	5%	1/16W	R6437	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R5556	1-218-941-81	RES-CHIP	100	5%	1/16W	R6439	1-218-990-81	SHORT CHIP	0		
R5564	1-218-941-81	RES-CHIP	100	5%	1/16W	R6440	1-218-990-81	SHORT CHIP	0		
R5565	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R6441	1-218-990-81	SHORT CHIP	0		
R5570	1-218-990-81	SHORT CHIP	0			R6442	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R5575	1-218-937-11	RES-CHIP	47	5%	1/16W	R6443	1-216-864-11	SHORT CHIP	0		
R5576	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6446	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R5577	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6447	1-218-990-81	SHORT CHIP	0		
R5578	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6448	1-208-939-11	METAL CHIP	150K	0.5%	1/16W
R5579	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6449	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R5580	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6450	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R5581	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6451	1-216-295-91	SHORT CHIP	0		
R5582	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6452	1-216-864-11	SHORT CHIP	0		
R5583	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6453	1-218-860-11	METAL CHIP	3.6K	0.5%	1/10W
R5584	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6454	1-216-864-11	SHORT CHIP	0		
R5585	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6455	1-218-853-11	METAL CHIP	1.8K	0.5%	1/10W
R5586	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6456	1-216-864-11	SHORT CHIP	0		
R5587	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6457	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R5588	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6458	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5589	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6461	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5590	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6462	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5591	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R6463	1-216-864-11	SHORT CHIP	0		
R6400	1-218-973-11	RES-CHIP	47K	5%	1/16W	R6464	1-218-990-81	SHORT CHIP	0		
R6401	1-218-953-11	RES-CHIP	1K	5%	1/16W	R6466	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R6403	1-218-969-11	RES-CHIP	22K	5%	1/16W	R6467	1-218-990-81	SHORT CHIP	0		
R6404	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6468	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6405	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6469	1-216-864-11	SHORT CHIP	0		
R6409	1-218-990-81	SHORT CHIP	0			R6470	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6410	1-216-864-11	SHORT CHIP	0			R6471	1-218-990-81	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R6472	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7120	1-218-937-11	RES-CHIP	47	5%	1/16W
R6474	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R7121	1-218-937-11	RES-CHIP	47	5%	1/16W
R6475	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R7122	1-218-937-11	RES-CHIP	47	5%	1/16W
R6476	1-218-985-11	RES-CHIP	470K	5%	1/16W	R7123	1-218-937-11	RES-CHIP	47	5%	1/16W
R6477	1-218-892-11	METAL CHIP	75K	0.5%	1/10W	R7124	1-218-937-11	RES-CHIP	47	5%	1/16W
R6478	1-208-933-11	METAL CHIP	82K	0.5%	1/16W	R7125	1-218-937-11	RES-CHIP	47	5%	1/16W
R6479	1-218-990-81	SHORT CHIP	0			R7126	1-218-937-11	RES-CHIP	47	5%	1/16W
R6480	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7127	1-218-937-11	RES-CHIP	47	5%	1/16W
R6481	1-218-941-81	RES-CHIP	100	5%	1/16W	R7128	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6482	1-218-979-11	RES-CHIP	150K	5%	1/16W	R7129	1-218-937-11	RES-CHIP	47	5%	1/16W
R6483	1-218-971-11	RES-CHIP	33K	5%	1/16W	R7130	1-218-937-11	RES-CHIP	47	5%	1/16W
R6484	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7131	1-218-937-11	RES-CHIP	47	5%	1/16W
R6486	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7132	1-218-937-11	RES-CHIP	47	5%	1/16W
R6488	1-216-809-11	METAL CHIP	100	5%	1/10W	R7133	1-218-990-81	SHORT CHIP	0		
R6489	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7134	1-218-937-11	RES-CHIP	47	5%	1/16W
R6491	1-218-990-81	SHORT CHIP	0			R7136	1-220-174-11	RES-CHIP	200	5%	1/16W
R6493	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7137	1-220-174-11	RES-CHIP	200	5%	1/16W
R6494	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R7138	1-220-174-11	RES-CHIP	200	5%	1/16W
R6498	1-216-809-11	METAL CHIP	100	5%	1/10W	R7140	1-218-937-11	RES-CHIP	47	5%	1/16W
R6500	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7141	1-220-174-11	RES-CHIP	200	5%	1/16W
R6501	1-208-931-11	METAL CHIP	68K	0.5%	1/16W	R7142	1-220-174-11	RES-CHIP	200	5%	1/16W
R6502	1-218-983-11	RES-CHIP	330K	5%	1/16W	R7143	1-220-174-11	RES-CHIP	200	5%	1/16W
R6503	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7144	1-208-671-11	METAL CHIP	330	0.5%	1/16W
R6504	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7145	1-208-883-81	METAL CHIP	680	0.5%	1/16W
R6505	1-218-941-81	RES-CHIP	100	5%	1/16W	R7147	1-218-990-81	SHORT CHIP	0		
R6506	1-218-983-11	RES-CHIP	330K	5%	1/16W	R7148	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R6507	1-218-983-11	RES-CHIP	330K	5%	1/16W	R7200	1-218-949-11	RES-CHIP	470	5%	1/16W
R6508	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R7202	1-218-953-11	RES-CHIP	1K	5%	1/16W
R6511	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7203	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6512	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R7204	1-218-953-11	RES-CHIP	1K	5%	1/16W
R6513	1-220-174-11	RES-CHIP	200	5%	1/16W	R7206	1-218-949-11	RES-CHIP	470	5%	1/16W
R6514	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R7207	1-218-949-11	RES-CHIP	470	5%	1/16W
R6515	1-218-941-11	RES-CHIP	100	5%	1/16W	R7208	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R6516	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R7209	1-218-990-81	SHORT CHIP	0		
R6517	1-216-295-91	SHORT CHIP	0			R7213	1-218-990-81	SHORT CHIP	0		
R6518	1-216-864-11	SHORT CHIP	0			R7217	1-218-939-11	RES-CHIP	68	5%	1/16W
R7100	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7218	1-218-941-11	RES-CHIP	100	5%	1/16W
R7101	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7219	1-218-941-11	RES-CHIP	100	5%	1/16W
R7104	1-218-941-81	RES-CHIP	100	5%	1/16W	R7221	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7106	1-218-941-81	RES-CHIP	100	5%	1/16W	R7223	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7107	1-218-937-11	RES-CHIP	47	5%	1/16W	R7224	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7108	1-218-937-11	RES-CHIP	47	5%	1/16W	R7226	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7109	1-218-937-11	RES-CHIP	47	5%	1/16W	R7227	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7110	1-218-937-11	RES-CHIP	47	5%	1/16W	R7228	1-218-939-11	RES-CHIP	68	5%	1/16W
R7111	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R7229	1-218-941-81	RES-CHIP	100	5%	1/16W
R7112	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R7230	1-218-941-81	RES-CHIP	100	5%	1/16W
R7115	1-218-937-11	RES-CHIP	47	5%	1/16W	R7231	1-218-941-81	RES-CHIP	100	5%	1/16W
R7116	1-218-937-11	RES-CHIP	47	5%	1/16W	R7232	1-218-941-81	RES-CHIP	100	5%	1/16W
R7118	1-218-937-11	RES-CHIP	47	5%	1/16W	R7233	1-218-937-11	RES-CHIP	47	5%	1/16W
R7119	1-218-937-11	RES-CHIP	47	5%	1/16W	R7234	1-218-945-11	RES-CHIP	220	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R7235	1-218-953-11	RES-CHIP	1K	5%	1/16W	RB5501	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R7237	1-218-941-81	RES-CHIP	100	5%	1/16W	RB5503	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R7238	1-218-941-81	RES-CHIP	100	5%	1/16W	RB5505	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R7241	1-218-941-81	RES-CHIP	100	5%	1/16W	RB7100	1-234-372-11	RES, NETWORK 100	(1005X4)		
R7242	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB7101	1-234-378-21	RES, NETWORK 10K	(1005X4)		
R7243	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB7200	1-234-878-21	RES, CHIP NETWORK 1KX8	(3816)		
R7244	1-218-859-11	METAL CHIP	3.3K	0.5%	1/10W	RB7202	1-234-878-21	RES, CHIP NETWORK 1KX8	(3816)		
R7246	1-216-813-11	METAL CHIP	220	5%	1/10W	RB7204	1-234-375-21	RES, NETWORK 1K	(1005X4)		
R7300	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB7205	1-234-702-11	RES, NETWORK 68	(1005X4)		
R7302	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB7206	1-234-702-11	RES, NETWORK 68	(1005X4)		
R7303	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB7207	1-234-372-11	RES, NETWORK 100	(1005X4)		
R7304	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB7208	1-234-372-11	RES, NETWORK 100	(1005X4)		
R7305	1-218-941-81	RES-CHIP	100	5%	1/16W	RB7209	1-234-372-11	RES, NETWORK 100	(1005X4)		
R7306	1-218-945-11	RES-CHIP	220	5%	1/16W	RB7210	1-234-372-11	RES, NETWORK 100	(1005X4)		
R7308	1-218-941-81	RES-CHIP	100	5%	1/16W	RB7211	1-234-372-11	RES, NETWORK 100	(1005X4)		
R7309	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB7212	1-234-702-11	RES, NETWORK 68	(1005X4)		
R7310	1-218-937-11	RES-CHIP	47	5%	1/16W	RB7213	1-234-702-11	RES, NETWORK 68	(1005X4)		
R7311	1-218-937-11	RES-CHIP	47	5%	1/16W	RB7500	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)		
R7312	1-218-937-11	RES-CHIP	47	5%	1/16W	RB7501	1-234-372-11	RES, NETWORK 100	(1005X4)		
R7313	1-218-937-11	RES-CHIP	47	5%	1/16W						
R7314	1-218-937-11	RES-CHIP	47	5%	1/16W	< FILTER >					
R7315	1-218-937-11	RES-CHIP	47	5%	1/16W	SW2200	1-579-273-11	FILTER, SURFACE WAVE			
R7316	1-218-937-11	RES-CHIP	47	5%	1/16W	SW2201	1-813-564-21	FILTER, SURFACE WAVE			
R7317	1-218-937-11	RES-CHIP	47	5%	1/16W	< TUNER >					
R7318	1-218-937-11	RES-CHIP	47	5%	1/16W	TU2201	8-597-585-10	TUNER, FSS BTP-HC401			
R7319	1-218-937-11	RES-CHIP	47	5%	1/16W	< VARISTOR >					
R7320	1-218-941-81	RES-CHIP	100	5%	1/16W	VD3000	1-803-974-21	VARISTOR, CHIP	(1608)		
R7321	1-218-941-81	RES-CHIP	100	5%	1/16W	VD3001	1-803-974-21	VARISTOR, CHIP	(1608)		
R7322	1-218-941-81	RES-CHIP	100	5%	1/16W	VD3202	1-804-988-21	VARISTOR, CHIP	(1608)		
R7323	1-218-965-11	RES-CHIP	10K	5%	1/16W	VD3203	1-804-988-21	VARISTOR, CHIP	(1608)		
R7324	1-218-965-11	RES-CHIP	10K	5%	1/16W	VD3204	1-804-988-21	VARISTOR, CHIP	(1608)		
R7325	1-218-965-11	RES-CHIP	10K	5%	1/16W	< CRYSTAL >					
R7326	1-218-965-11	RES-CHIP	10K	5%	1/16W	X2000	1-813-547-11	QUARTZ CRYSTAL UNIT			
R7327	1-218-965-11	RES-CHIP	10K	5%	1/16W	X2200	1-579-477-21	VIBRATOR, CRYSTAL			
R7328	1-218-965-11	RES-CHIP	10K	5%	1/16W	X4000	1-813-531-11	OSCILLATOR, CRYSTAL UNIT			
R7329	1-218-965-11	RES-CHIP	10K	5%	1/16W	X5500	1-813-806-21	OSCILLATOR, CRYSTAL			
R7330	1-218-965-11	RES-CHIP	10K	5%	1/16W	X7200	1-813-055-11	QUARTZ CRYSTAL UNIT			
R7331	1-218-953-11	RES-CHIP	1K	5%	1/16W	X7201	1-813-784-21	VIBRATOR, CRYSTAL			
R7332	1-218-953-11	RES-CHIP	1K	5%	1/16W	B1 Board Variant Parts List (KDL-26P30xH only)					
R7333	1-218-937-11	RES-CHIP	47	5%	1/16W	< CAPACITOR >					
R7508	1-218-965-11	RES-CHIP	10K	5%	1/16W	C4087	1-100-767-21	ELECT CHIP 220UF	20%	16V	
R7509	1-218-965-11	RES-CHIP	10K	5%	1/16W	C4560	NOT FITTED				
R7512	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	< RESISTOR CHIP >					
R7513	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB2000	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R7515	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB5500	1-239-409-11	NETWORK RESISTOR (CHIP)	47		

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
< IC >				< TRANSISTOR >			
IC4560	NOT FITTED			Q2205	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
< COIL >				Q3000	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L4560	NOT FITTED			Q3002	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
< TRANSISTOR >				Q4000	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
Q2205	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		Q4008	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
Q3000	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		< RESISTOR >			
Q3002	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R4560	NOT FITTED		
Q4000	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R4561	NOT FITTED		
Q4008	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R4564	NOT FITTED		
Q4011	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R4566	NOT FITTED		
Q6413	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R4568	NOT FITTED		
Q7200	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R6495	1-208-931-11	METAL CHIP 68K 0.5% 1/16W	
< RESISTOR >				R6496	1-208-721-11	METAL CHIP 39K 0.5% 1/16W	
R4560	NOT FITTED			R6519	1-216-864-11	SHORT CHIP 0	
R4561	NOT FITTED			R6520	NOT FITTED		
R4564	NOT FITTED			R6521	1-216-864-11	SHORT CHIP 0	
R4566	NOT FITTED			R6522	1-216-864-11	SHORT CHIP 0	
R4568	NOT FITTED			R6523	NOT FITTED		
R6495	1-208-931-11	METAL CHIP 68K 0.5% 1/16W		R6524	NOT FITTED		
R6496	1-208-721-11	METAL CHIP 39K 0.5% 1/16W		R7210	NOT FITTED		
R6519	1-216-864-11	SHORT CHIP 0		R7211	1-218-990-81	SHORT CHIP 0	
R6520	NOT FITTED			R7212	1-218-990-81	SHORT CHIP 0	
R6521	1-216-864-11	SHORT CHIP 0		R7214	NOT FITTED		
R6522	1-216-864-11	SHORT CHIP 0		R7215	1-218-990-81	SHORT CHIP 0	
R6523	NOT FITTED			R7216	1-218-990-81	SHORT CHIP 0	
R6524	NOT FITTED			B1 Board Variant Parts List (KDL-37P30xH only)			
R7210	NOT FITTED			< CAPACITOR >			
R7211	1-218-990-81	SHORT CHIP 0		C4087	1-126-396-11	ELECT CHIP 47UF 20% 16V	
R7212	NOT FITTED			C4560	NOT FITTED		
R7214	NOT FITTED			< IC >			
R7215	1-218-990-81	SHORT CHIP 0		IC4560	NOT FITTED		
R7216	NOT FITTED			< COIL >			
B1 Board Variant Parts List (KDL-32P30xH only)				L4560	NOT FITTED		
< CAPACITOR >				< TRANSISTOR >			
C4087	1-126-396-11	ELECT CHIP 47UF 20% 16V		Q2205	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
C4560	NOT FITTED			Q3000	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
< IC >				Q3002	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
IC4560	NOT FITTED			Q4000	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
< COIL >				Q4008	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L4560	NOT FITTED			< TRANSISTOR >			
< IC >				Q2205	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
IC4560	NOT FITTED			Q3000	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
< COIL >				Q3002	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L4560	NOT FITTED			Q4000	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
< TRANSISTOR >				Q4008	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
Q4011	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R4561	1-218-937-11	RES-CHIP	47 5% 1/16W
Q6413	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R4564	1-218-990-81	SHORT CHIP	0
Q7200	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R4566	1-218-990-81	SHORT CHIP	0
< RESISTOR >				R4568	1-218-990-81	SHORT CHIP	0
R4560	NOT FITTED			R6495	1-208-931-11	METAL CHIP	68K 0.5% 1/16W
R4561	NOT FITTED			R6496	1-208-721-11	METAL CHIP	39K 0.5% 1/16W
R4564	NOT FITTED			R6519	1-216-864-11	SHORT CHIP	0
R4566	NOT FITTED			R6520	NOT FITTED		
R4568	NOT FITTED			R6521	1-216-864-11	SHORT CHIP	0
R6495	1-218-979-11	RES-CHIP	150K 5% 1/16W	R6522	1-216-864-11	SHORT CHIP	0
R6496	1-218-979-11	RES-CHIP	150K 5% 1/16W	R6523	NOT FITTED		
R6519	NOT FITTED			R6524	NOT FITTED		
R6520	1-216-864-11	SHORT CHIP	0	R7210	NOT FITTED		
R6521	NOT FITTED			R7211	NOT FITTED		
R6522	NOT FITTED			R7212	1-218-990-81	SHORT CHIP	0
R6523	1-216-864-11	SHORT CHIP	0	R7214	NOT FITTED		
R6524	1-216-864-11	SHORT CHIP	0	R7215	NOT FITTED		
R7210	1-218-990-81	SHORT CHIP	0	R7216	1-218-990-81	SHORT CHIP	0
R7211	NOT FITTED						
R7212	NOT FITTED						
R7214	1-218-990-81	SHORT CHIP	0				
R7215	NOT FITTED						
R7216	NOT FITTED						


B1 Board Variant Parts List (KDL-40P30xH only)


< CAPACITOR >			
C4087	1-126-396-11	ELECT CHIP 47UF	20% 16V
C4560	1-164-156-11	CERAMIC CHIP 0.1UF	25V
< IC >			
IC4560	6-710-443-01	IC LM75AD	
< COIL >			
L4560	1-414-754-11	INDUCTOR	10UH
< TRANSISTOR >			
Q2205	8-729-010-05	TRANSISTOR MSB709-RT1	
Q3000	8-729-010-05	TRANSISTOR MSB709-RT1	
Q3002	8-729-010-05	TRANSISTOR MSB709-RT1	
Q4000	8-729-010-05	TRANSISTOR MSB709-RT1	
Q4008	8-729-010-05	TRANSISTOR MSB709-RT1	
Q4011	8-729-010-05	TRANSISTOR MSB709-RT1	
Q6413	8-729-010-05	TRANSISTOR MSB709-RT1	
Q7200	8-729-010-05	TRANSISTOR MSB709-RT1	
< RESISTOR >			
R4560	1-218-937-11	RES-CHIP	47 5% 1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
ACCESSORIES AND CONNECTORS							
	*1-910-040-39	26/32 MAIN_V/AUDIO & STBY HARN (CN6202/ CN6203(GS2)-CN6400(B1) & CN6200(GS2)-CN6401(B1)) (32 inches)			*1-910-041-12	= "SPEAKER 40" (CN6400(GS4)-SPK) (40 inches)	
	*1-910-040-40	26/32 MAIN_V/AUDIO & STBY HARN (CN6603/ CN6604(GS3)-CN6400(B1) & CN6100(GS3)-CN6401(B1)) (37 inches)			*1-910-041-13	"32" MAIN V/AUDIO (CN6202/CN6203(GS2)- CN6400(B1) & CN6200(GS2)-CN6401(B1)) (26 inches)	
	*1-910-040-41	40 MAIN_V/AUDIO & STBY HARN (CN6603/ CN6604(GS4)-CN6400(B1) & CN6100(GS4)-CN6401(B1)) (40 inches)			*1-910-041-14	= "H3PS 32" (CN4001(B1)-CN301(H3PS)) (26 inches)	
	*1-910-040-42	INVERTER 26 (INVERTER-CN6403(B1)/ CN6002(GS2)) (26 inches)			*1-910-042-71	CONNECTOR ASSY 9P (CN6402(B1)-I/F) (26/32 inches (H model only))	
	*1-910-040-43	INVERTER 32 (INVERTER-CN6403(B1)/ CN6002(GS2)) (32 inches)			*1-910-042-72	CONNECTOR ASSY 5P (I/F-CLK) (26 inches (H model only))	
	*1-910-040-44	INVERTER 37 (INVERTER-CN6403(B1)/ CN6602(GS3)) (37 inches)			*1-910-042-73	CONNECTOR ASSY 5P (I/F-CLK) (32 inches (H model only))	
	*1-910-040-45	CONNECTOR ASSY 8P (CN6606(GS4)-CN6707(DS1)) (40 inches)			*1-910-042-74	CONNECTOR ASSY 5P (I/F-CLK) (37 inches (H model only))	
	*1-910-040-46	CONNECTOR ASSY 3P (CN6200(GS4)-CN6600(DS1)) (40 inches)			*1-910-042-75	CONNECTOR ASSY 9P (CN6402(B1)-I/F) (37 inches (H model only))	
	*1-910-040-47	CONNECTOR ASSY 2P (CN6700(DS1)-BALANCER HV) (40 inches)			*1-910-042-76	CONNECTOR ASSY 9P (CN6402(B1)-I/F) (40 inches (H model only))	
	*1-910-040-48	CONNECTOR ASSY 7P (CN6701(DS1)- BALANCER CONTROL) (40 inches)			*1-910-042-78	FFC CABLE 18P (CN4004(B1)-I/F) (26/32/37/40 inches (H model only))	
	*1-910-040-49	H3PS 26/32 (CN4001(B1)-CN301(H3PS)) (32 inches)			*3-270-349-11	INSTRUCTION MANUAL (KDL-26/32P30x0UK) ENGLISH	
	*1-910-040-50	H3PS 37/40 (CN4001(B1)-CN301(H3PS)) (37 inches)			*3-270-349-21	INSTRUCTION MANUAL (KDL-26/32P30x0AEP) GERMAN/FRENCH/ITALIAN/DUTCH	
	*1-910-040-51	H1PS 26 (CN4005(B1)-CN101(H1PS)) (26 inches)			*3-270-349-31	INSTRUCTION MANUAL (KDL-26/32P30x0AEP) SPANISH/PORTUGUESE/GREEK	
	*1-910-040-52	H1PS 32 (CN4005(B1)-CN101(H1PS)) (32 inches)			*3-270-349-41	INSTRUCTION MANUAL (KDL-26/32P30x0AEP) GERMAN/RUSSIAN	
	*1-910-040-53	H1PS 37/40 (CN4005(B1)-CN101(H1PS)) (37 inches)			*3-270-349-51	INSTRUCTION MANUAL (KDL-26/32P30x0AEP) POLISH/CZECH/SLOVAK/HUNGARIAN	
	*1-910-040-56	SPEAKER 26 (CN6400(GS2)-SPK) (26 inches)			*3-270-349-61	INSTRUCTION MANUAL (KDL-26/32P30x0AEP) NORWEGIAN/SWEDISH/FINNISH/DANISH/TURKISH	
	*1-910-040-57	SPEAKER 32 (CN6400(GS2)-SPK) (32 inches)			*3-273-475-11	INSTRUCTION MANUAL (KDL-37/40P30x0UK) ENGLISH	
	*1-910-040-58	SPEAKER 37/40 (CN6400(GS3)-SPK) (37 inches)			*3-273-475-21	INSTRUCTION MANUAL (KDL-37/40P30x0AEP) GERMAN/FRENCH/ITALIAN/DUTCH	
	*1-910-040-69	LVDS 30P 26 (CN4000(B1)-PANEL LVDS) (26 inches)			*3-273-475-31	INSTRUCTION MANUAL (KDL-37/40P30x0AEP) SPANISH/PORTUGUESE/GREEK	
	*1-910-040-70	LVDS 30P 32 (CN4000(B1)-PANEL LVDS) (32 inches)			*3-273-475-41	INSTRUCTION MANUAL (KDL-37/40P30x0AEP) GERMAN/RUSSIAN	
	*1-910-040-71	LVDS 30P 37 (CN4000(B1)-PANEL LVDS) (37 inches)			*3-273-475-51	INSTRUCTION MANUAL (KDL-37/40P30x0AEP) POLISH/CZECH/SLOVAK/HUNGARIAN	
	*1-910-040-72	LVDS 30P 40 (CN4000(B1)-PANEL LVDS) (40 inches)			*3-273-475-61	INSTRUCTION MANUAL (KDL-37/40P30x0AEP) NORWEGIAN/SWEDISH/FINNISH/DANISH/TURKISH	
	*1-910-041-10	= "H3PS 40" (CN4001(B1)-CN301(H3PS)) (40 inches)			*3-290-196-11	INSTRUCTION MANUAL (OTRUM) (KDL-37/40P30xH AEP/UK) ENGLISH	
	*1-910-041-11	= "H1PS 40" (CN4005(B1)-CN101(H1PS)) (40 inches)			*3-290-196-21	INSTRUCTION MANUAL (OTRUM) (KDL-26/32P30xH AEP/UK) GERMAN/FRENCH/ITALIAN/DUTCH	
				REMOTE COMMANDER			
				1-480-158-11 REMOTE COMMANDER (RM-ED009)			







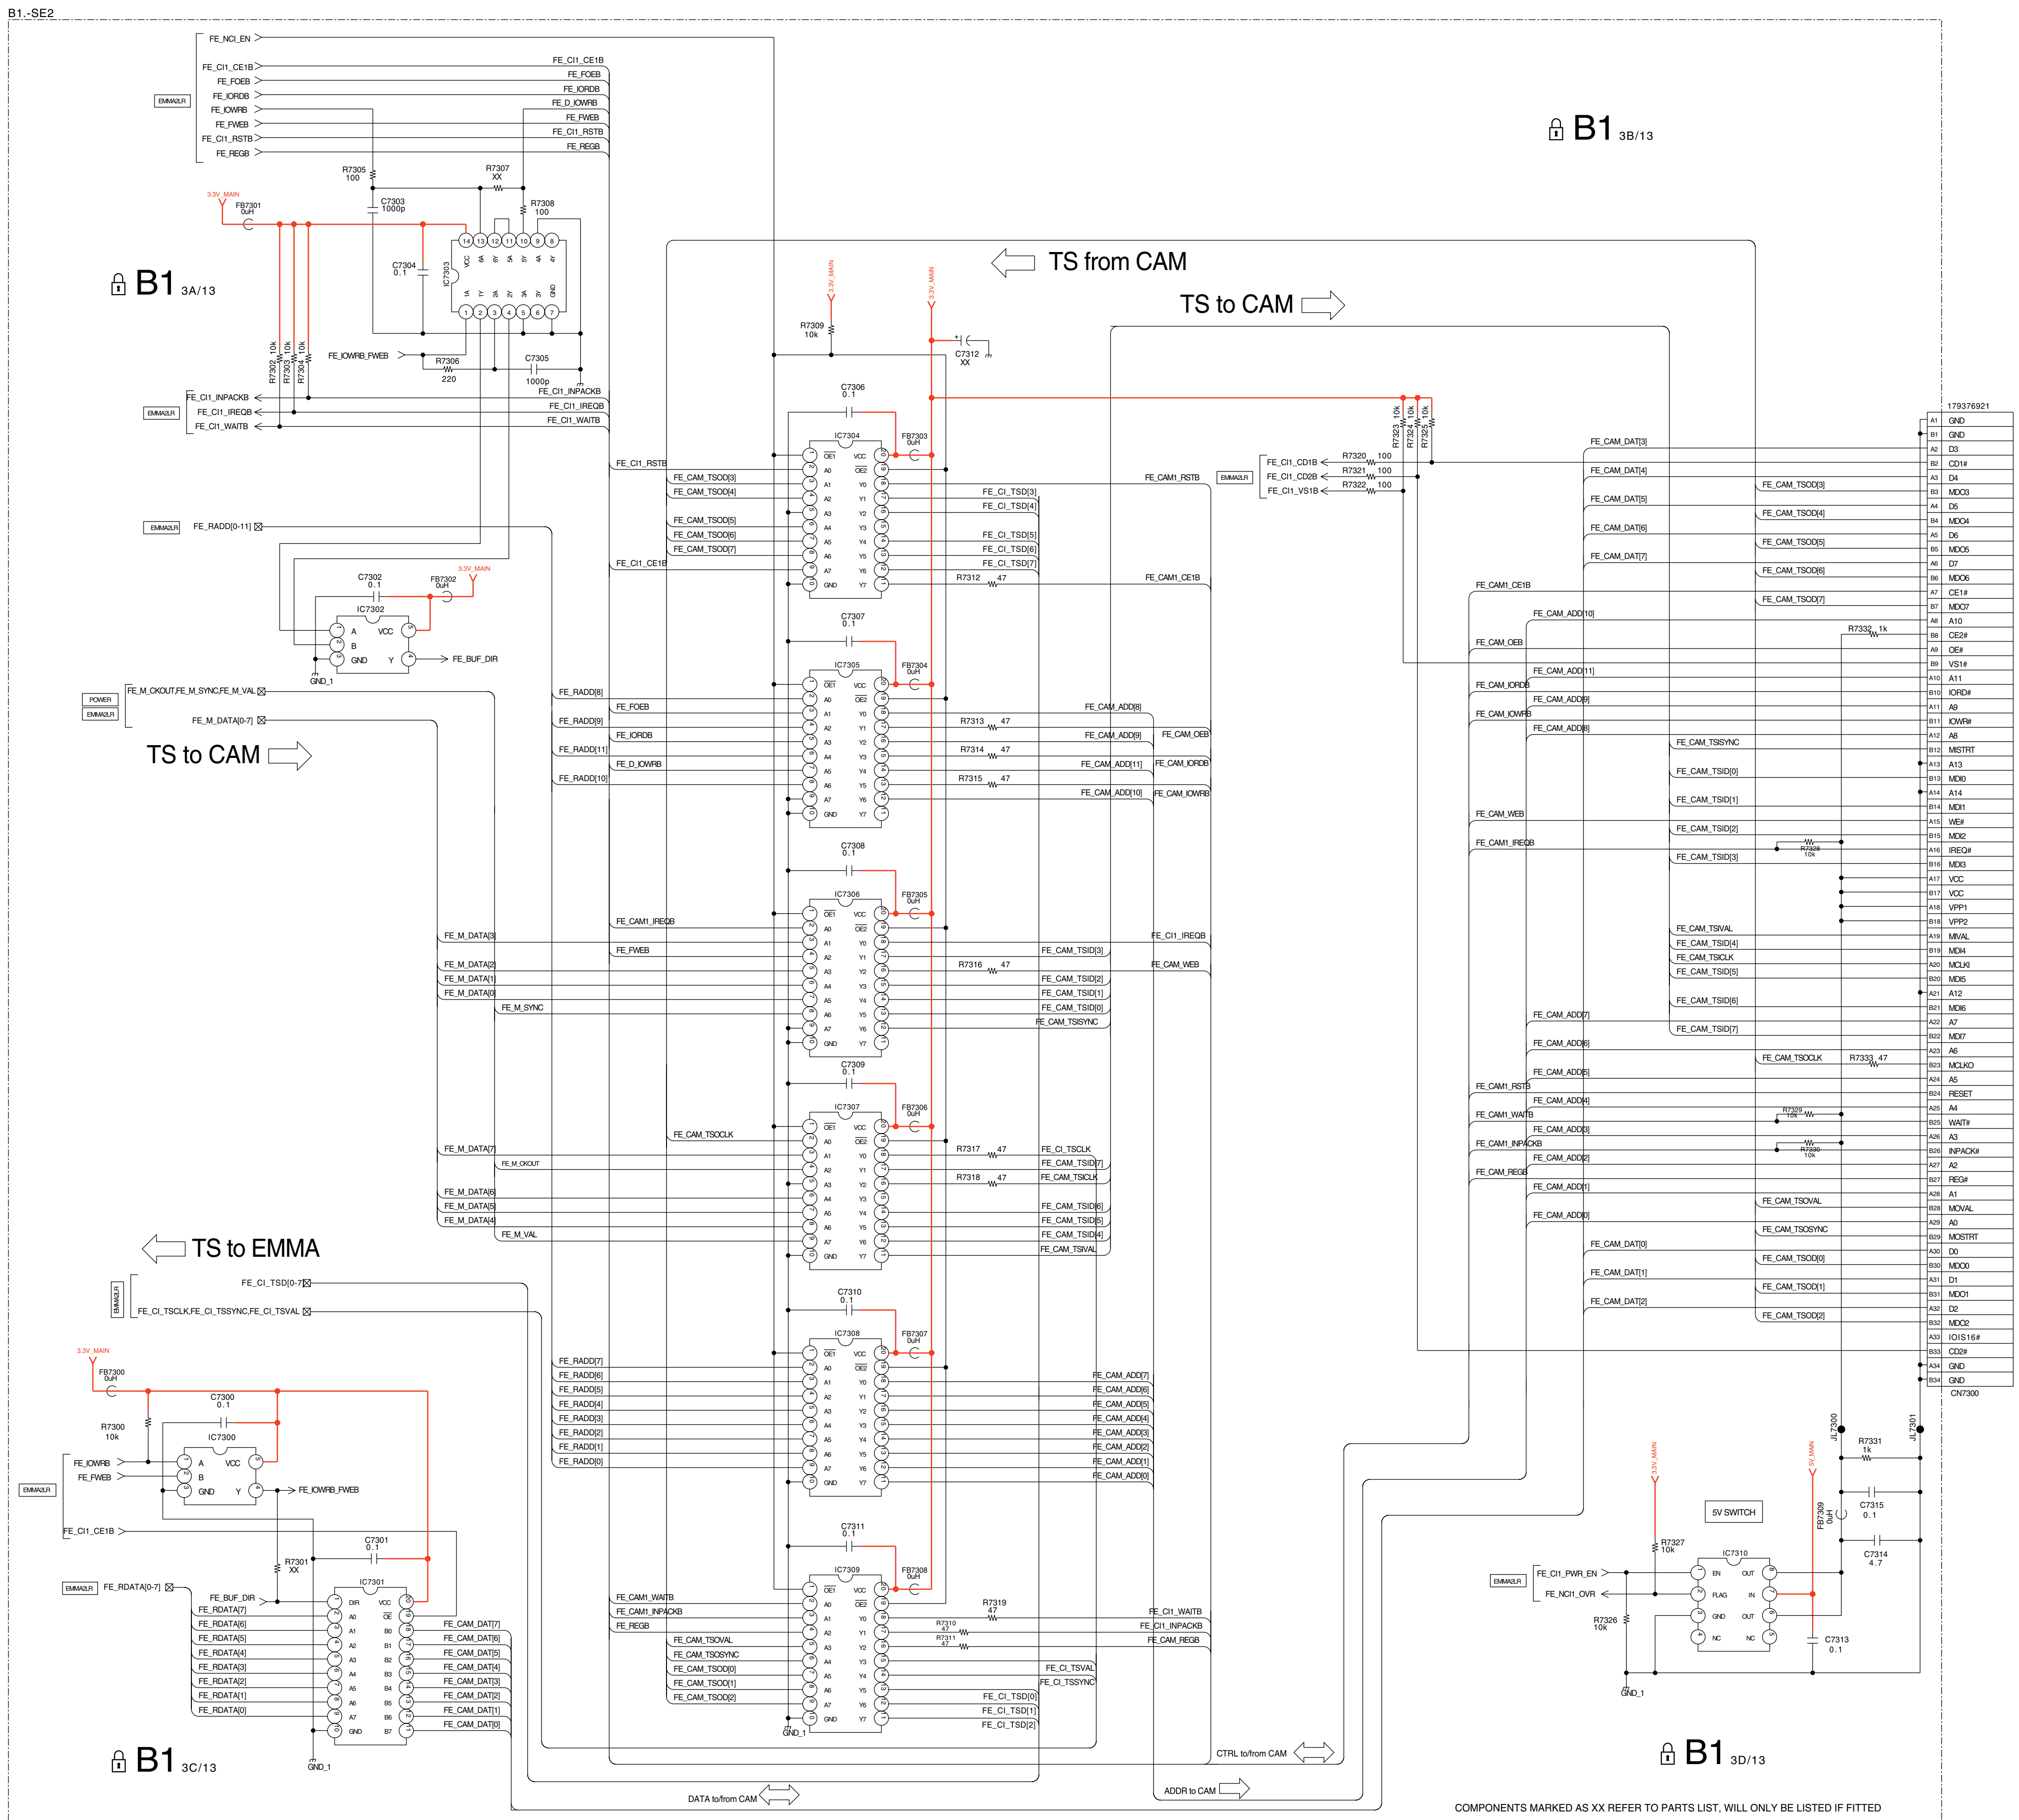

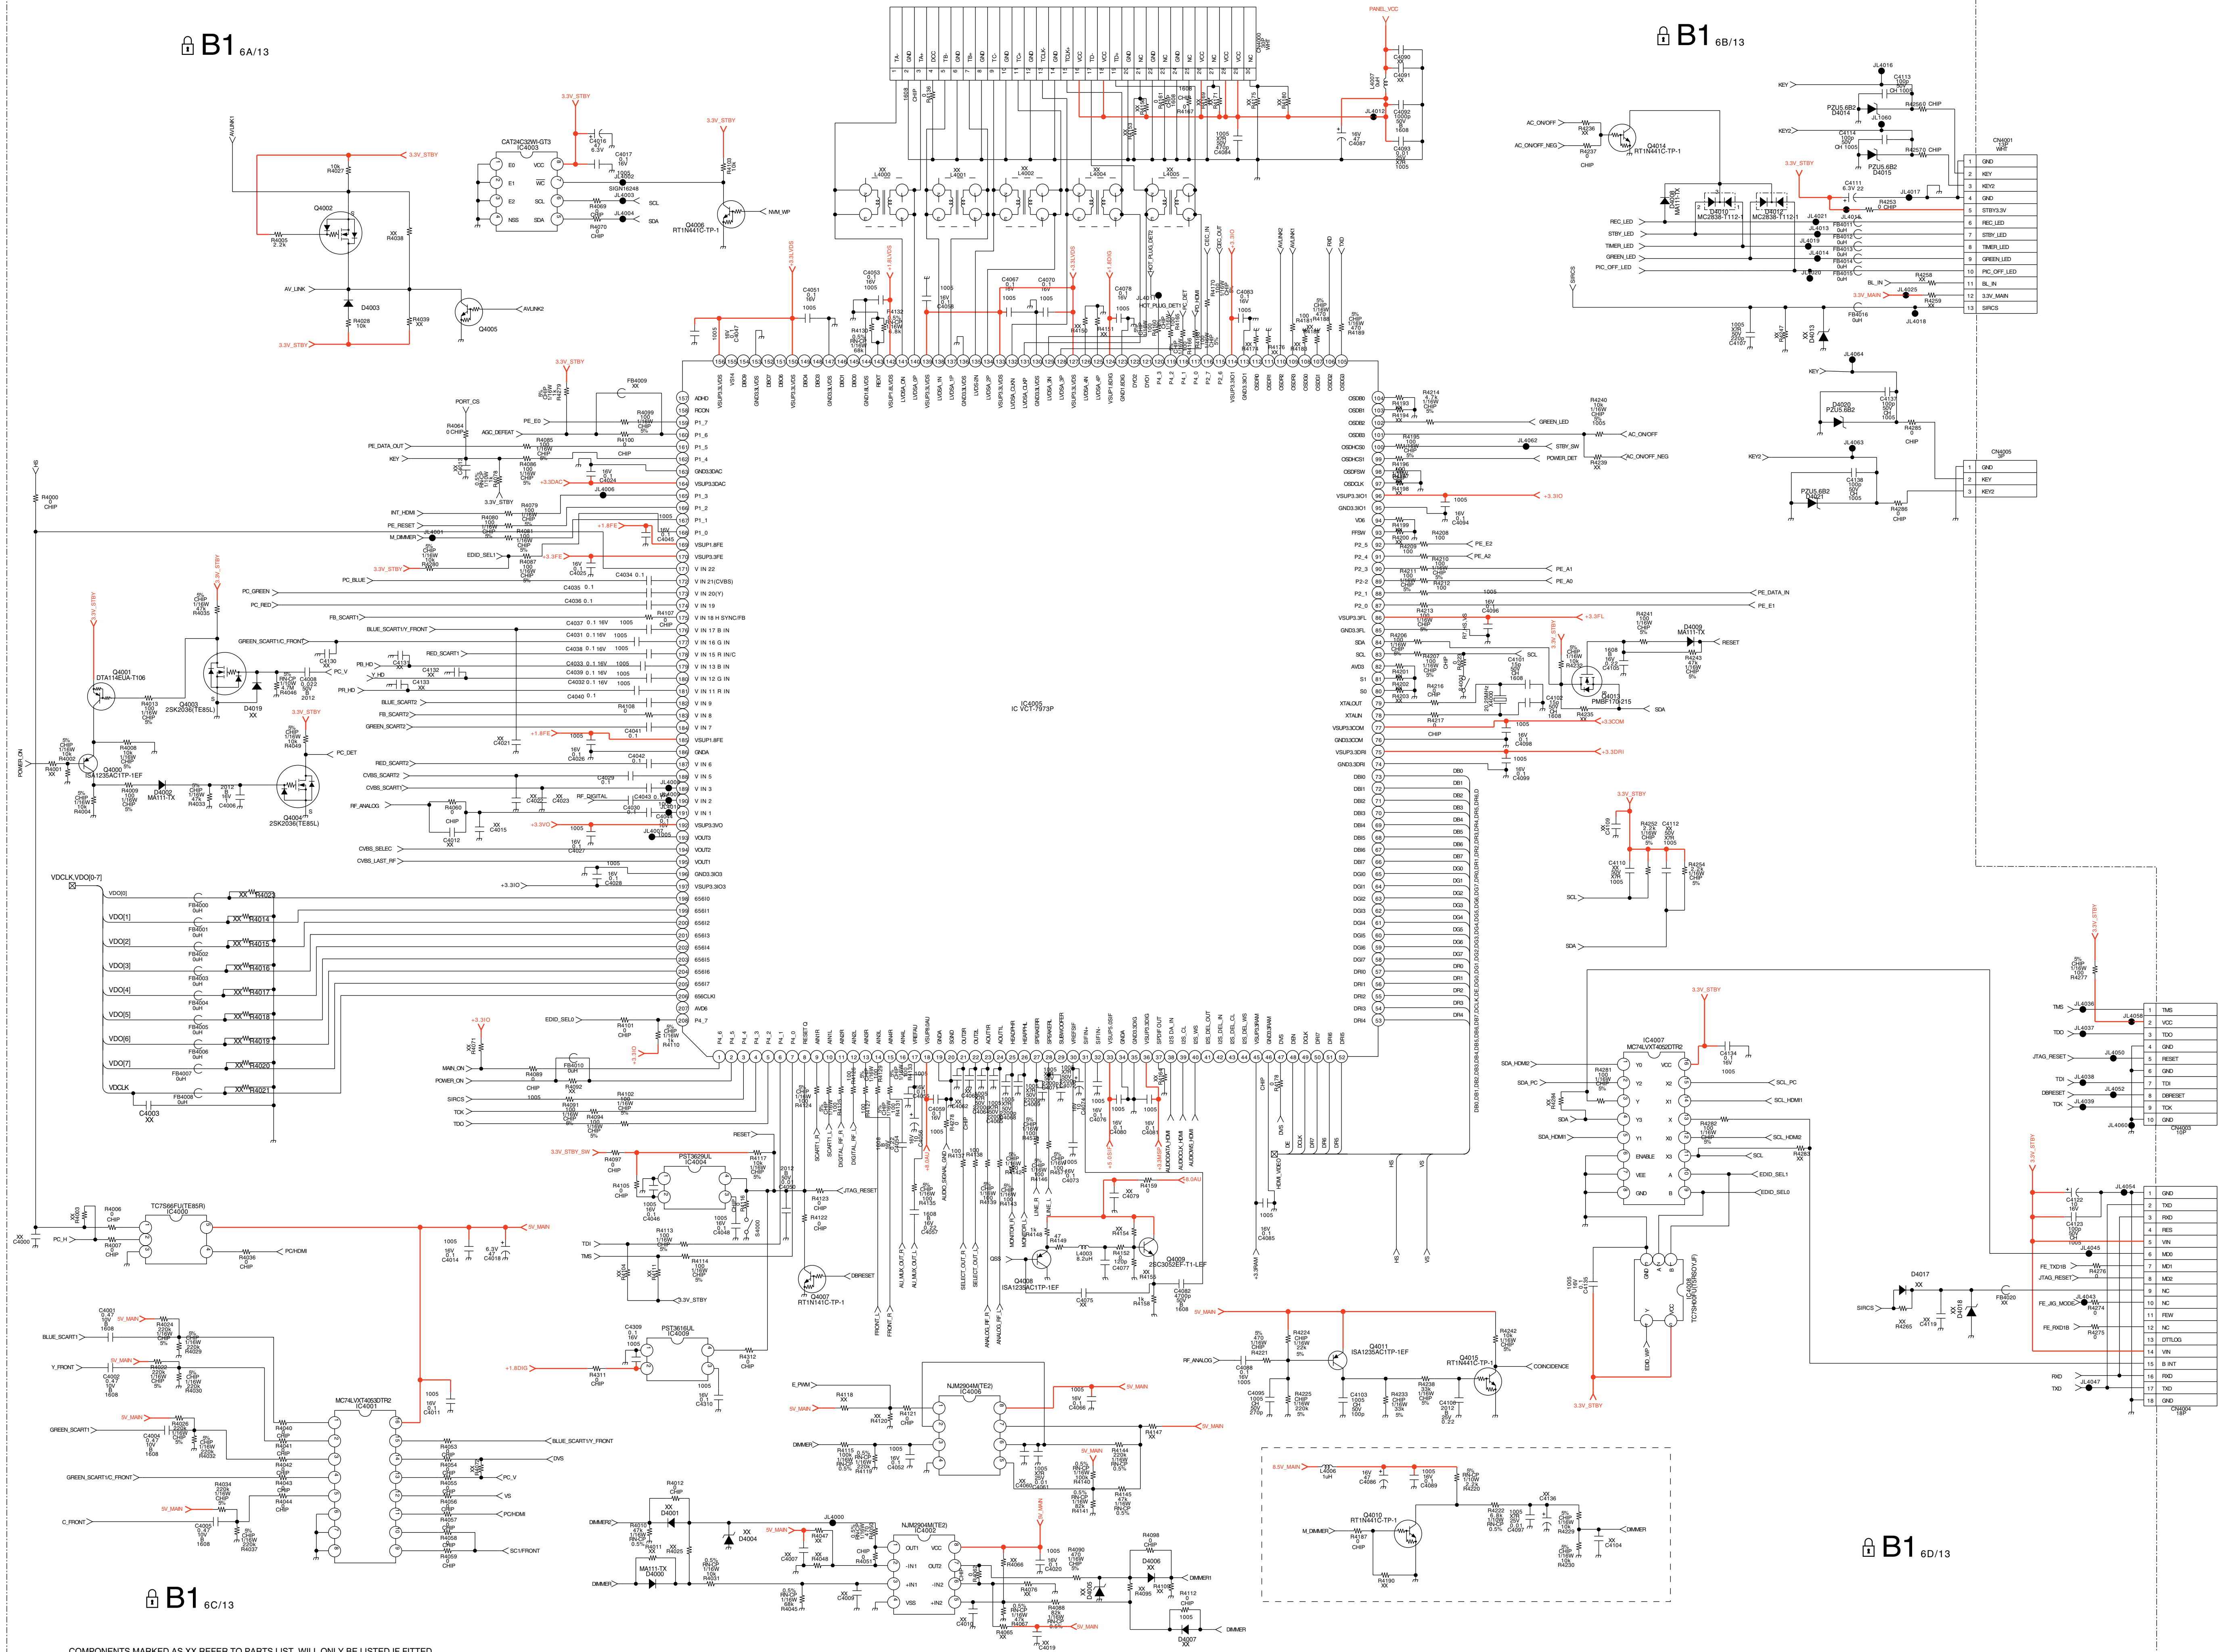




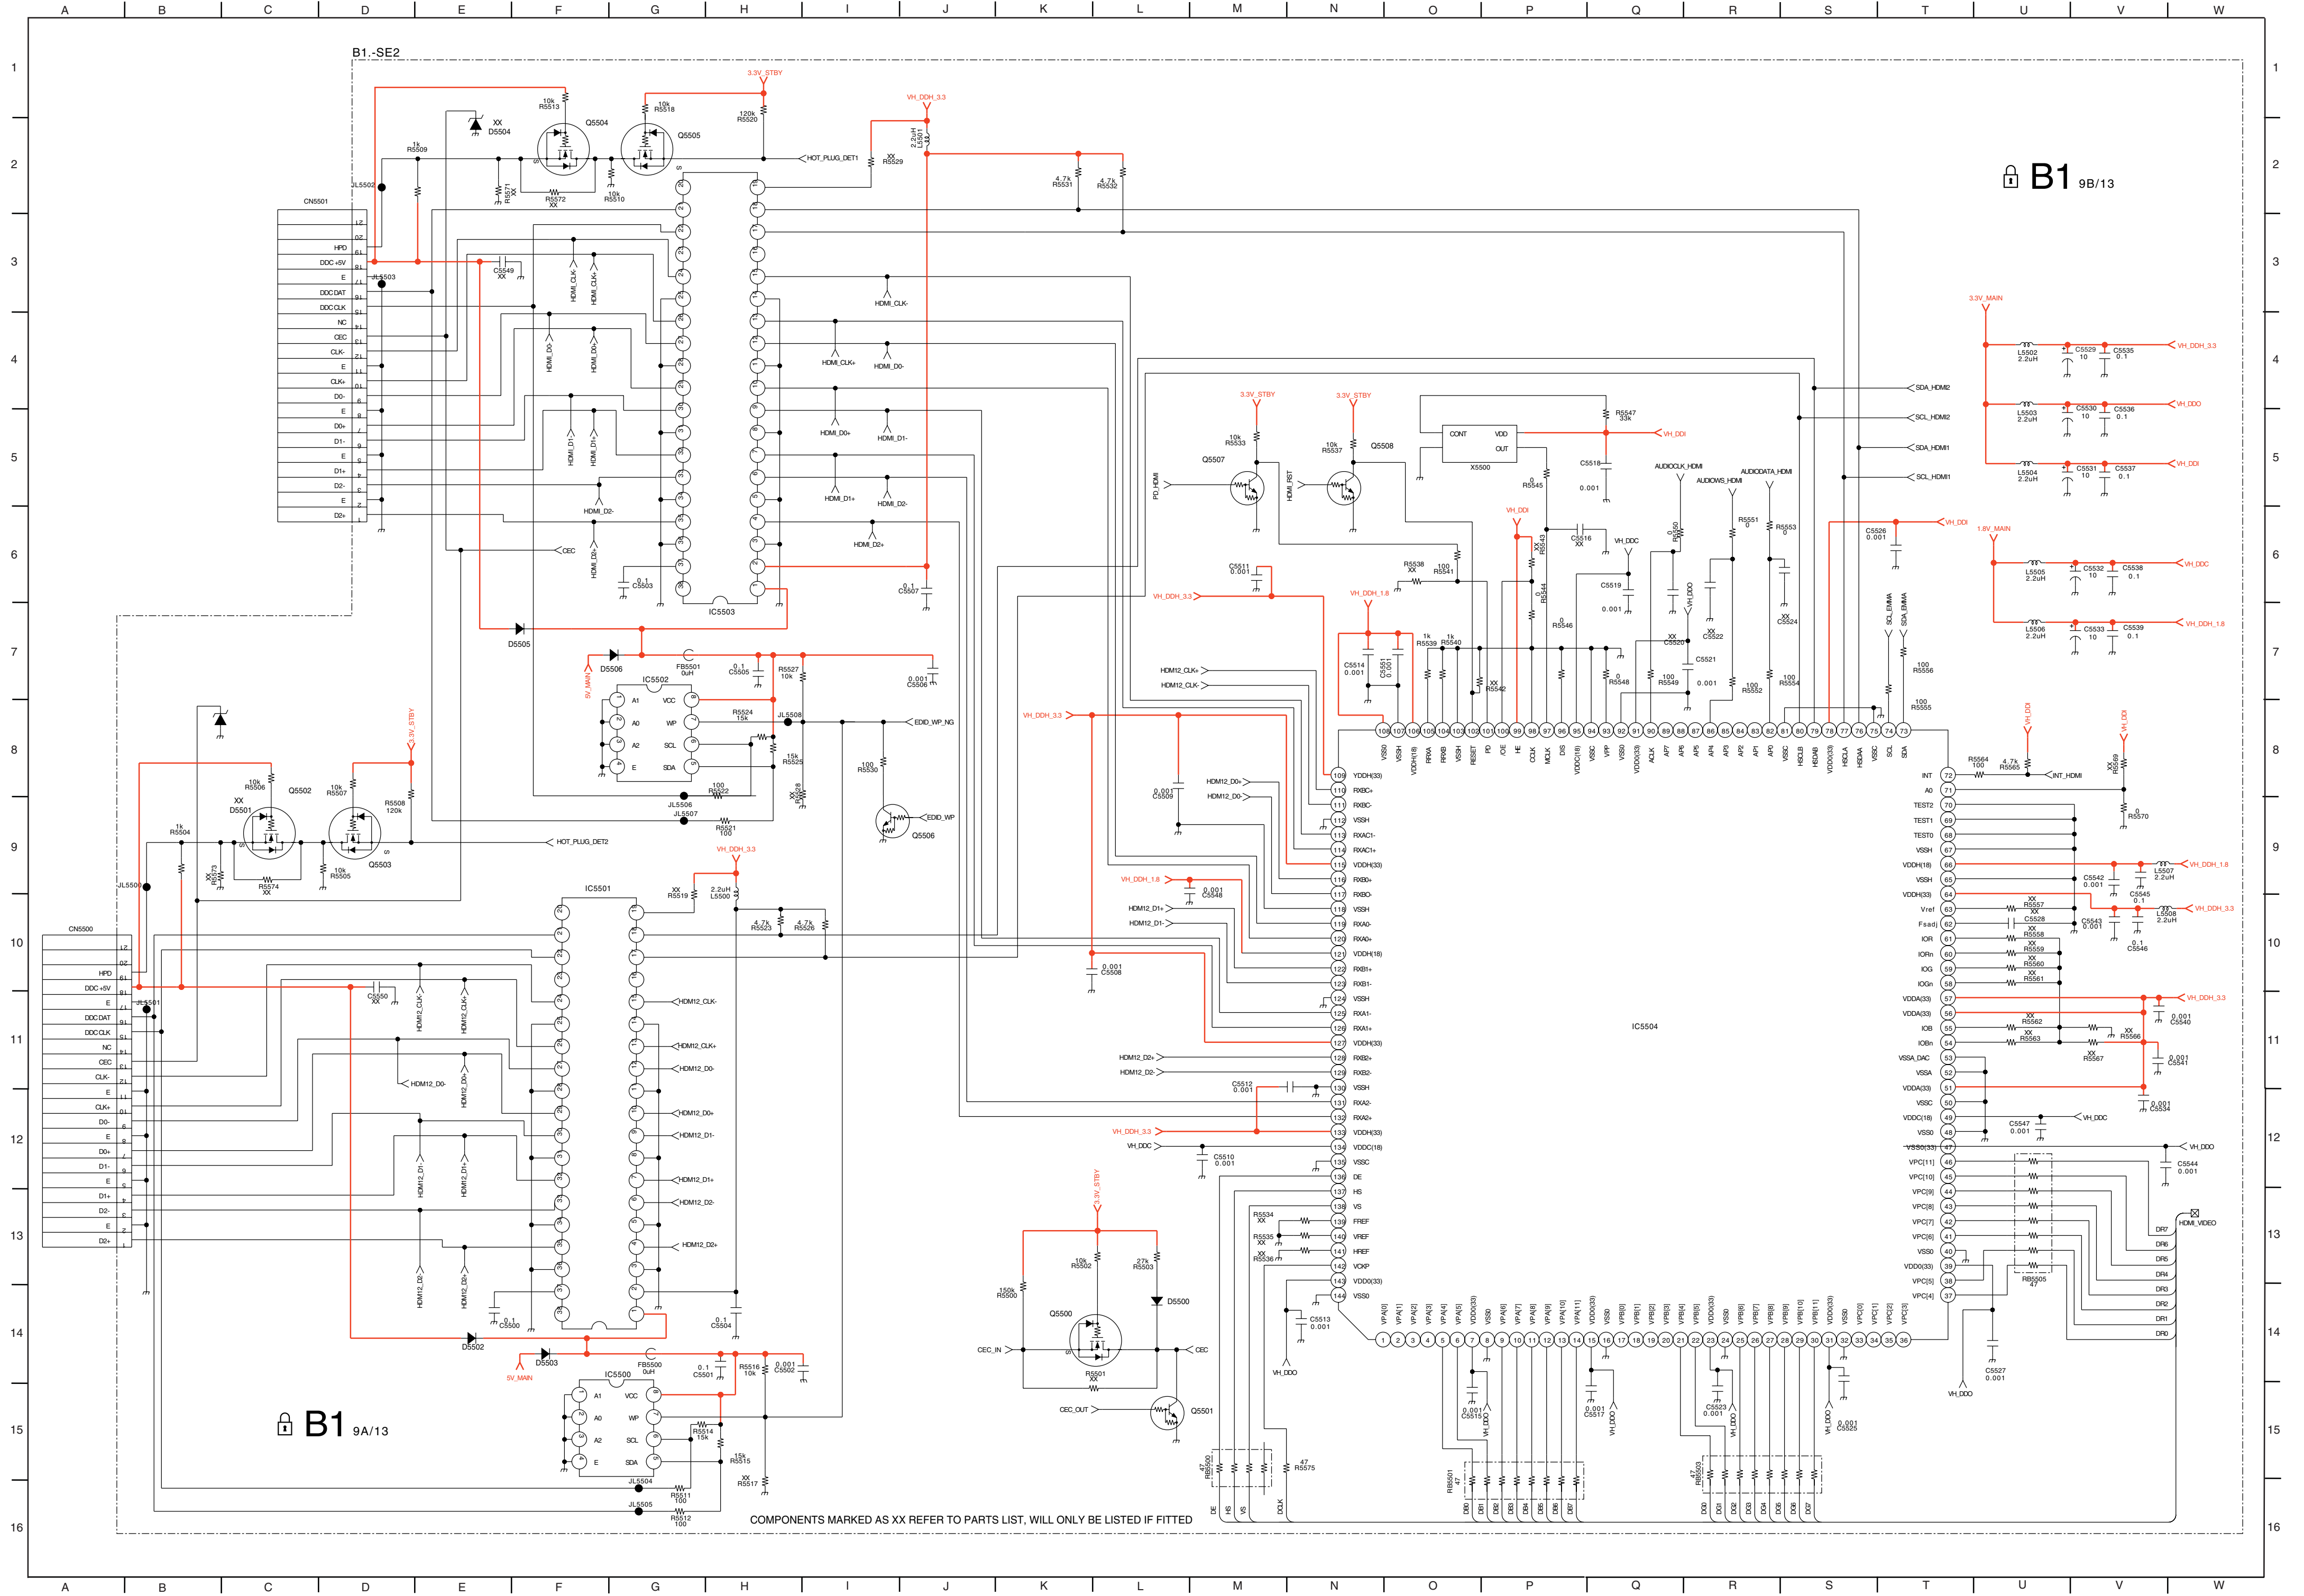

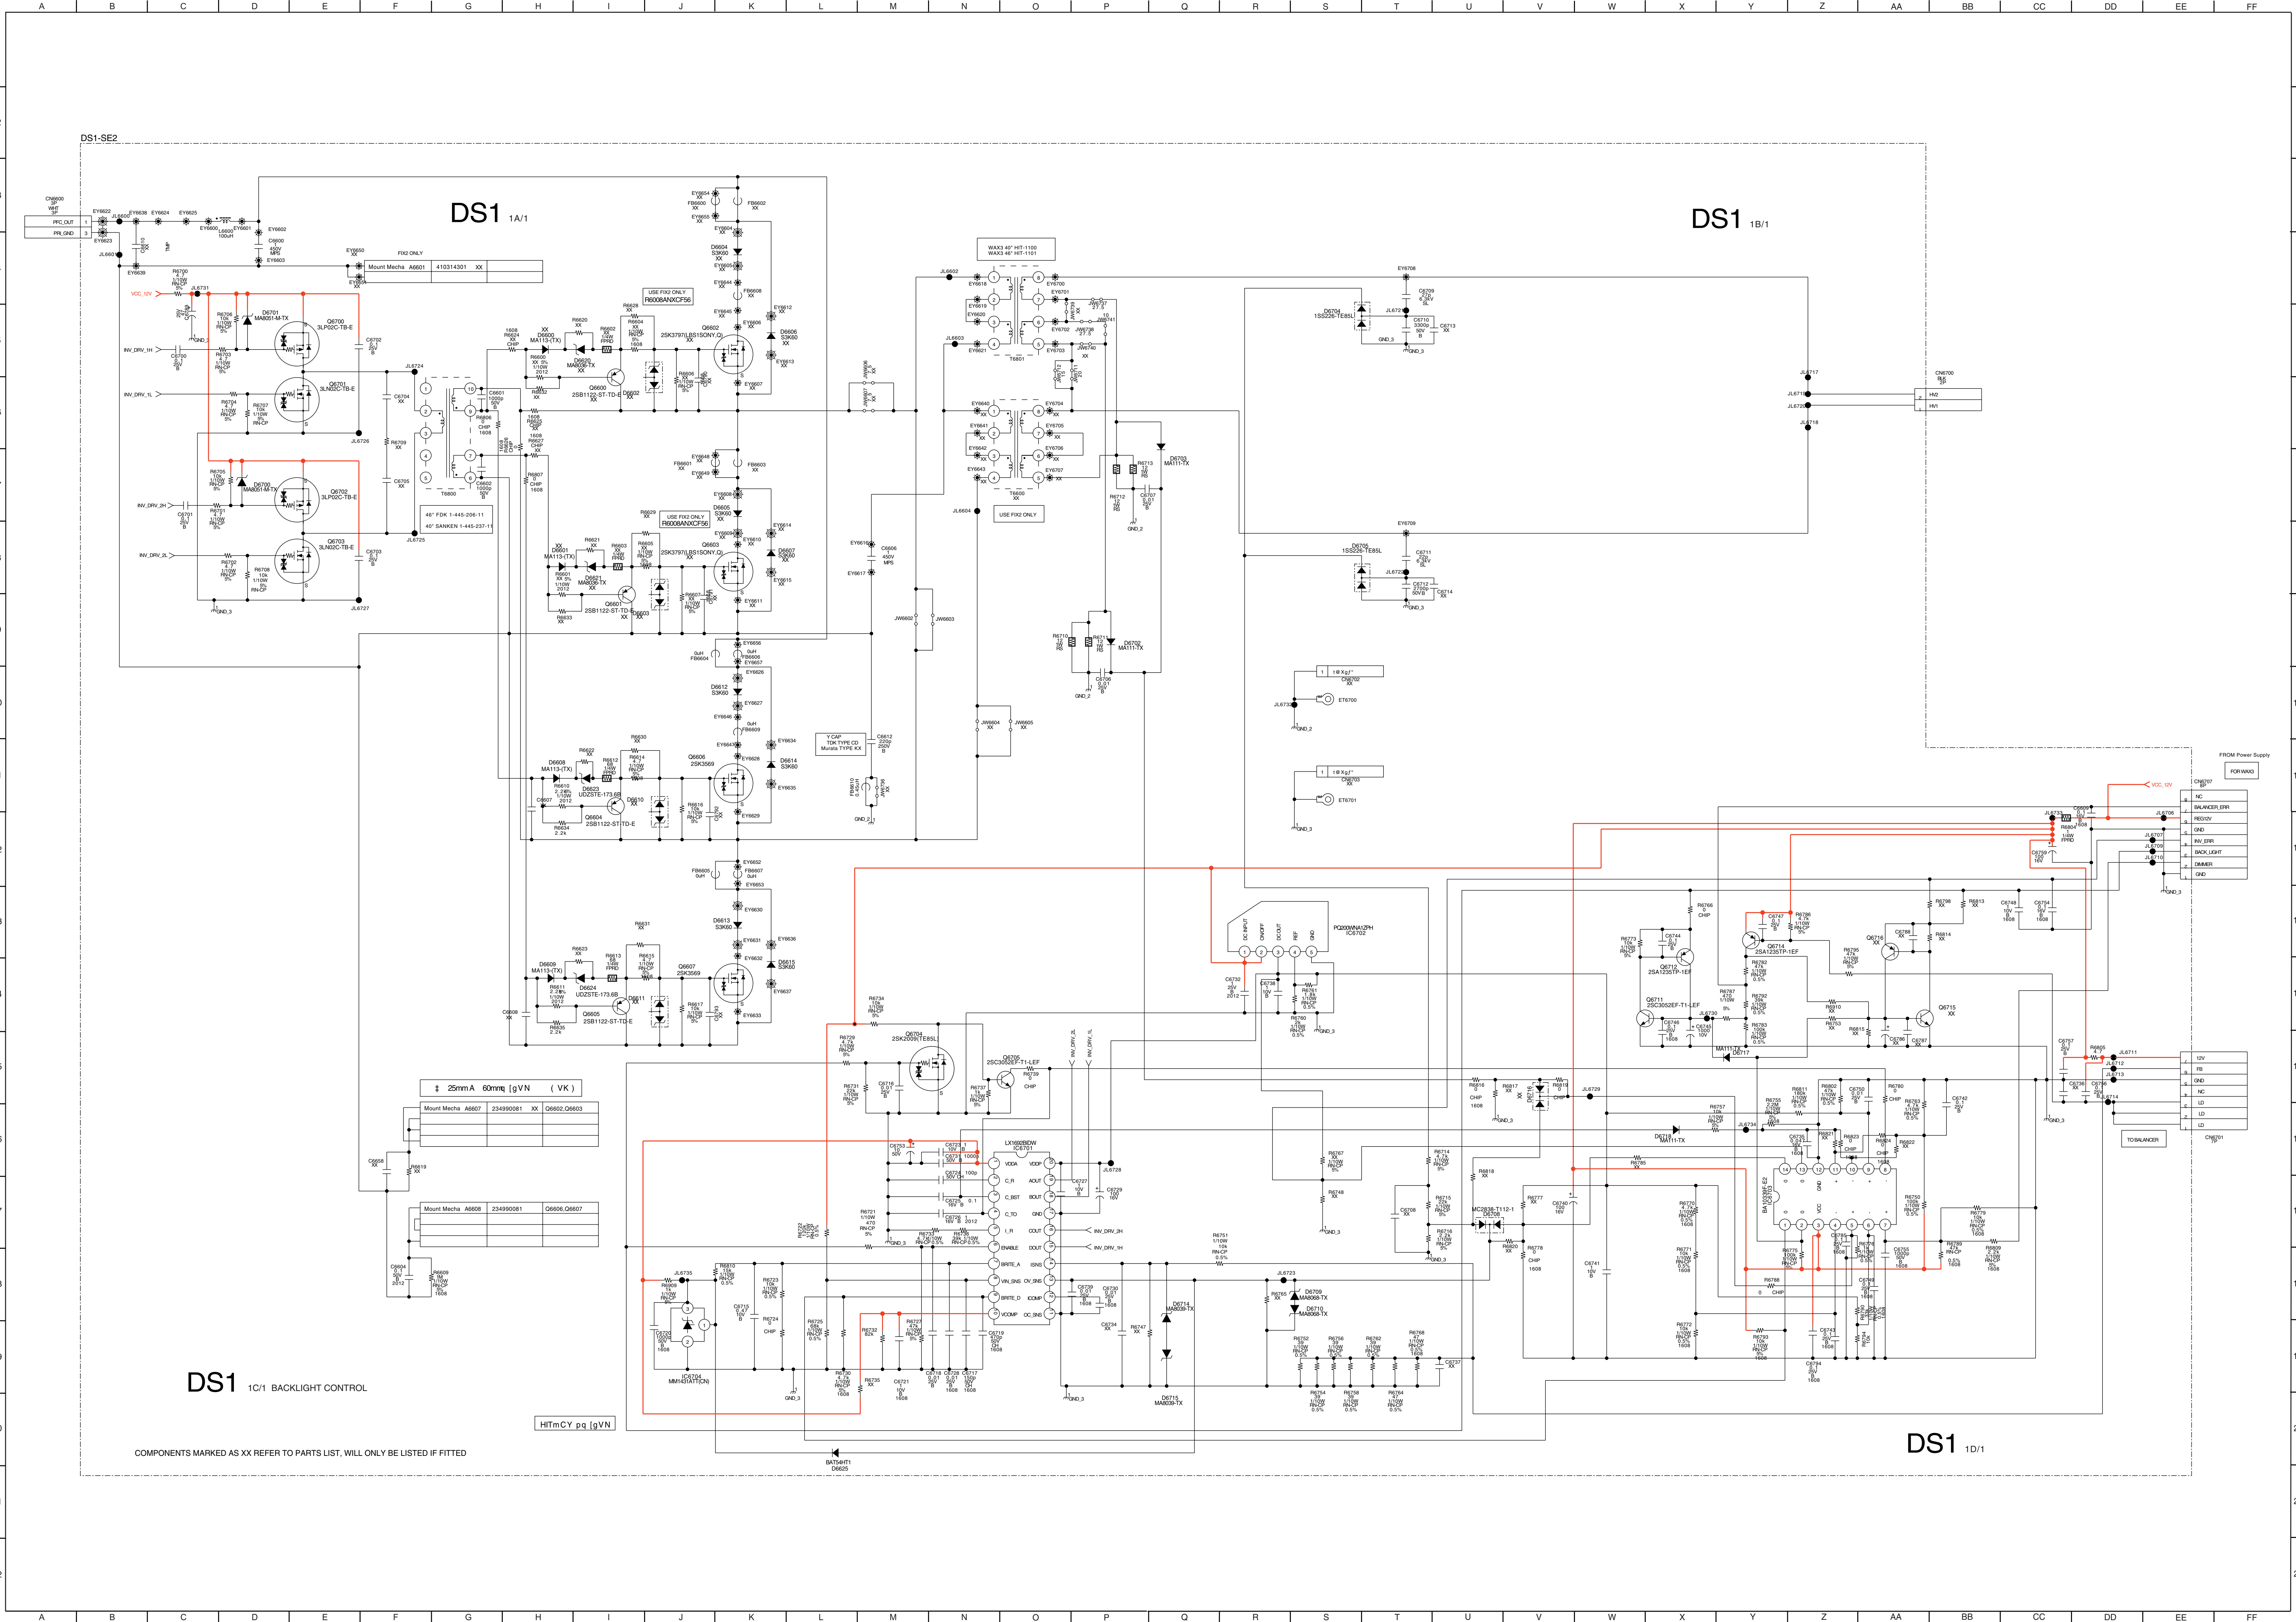



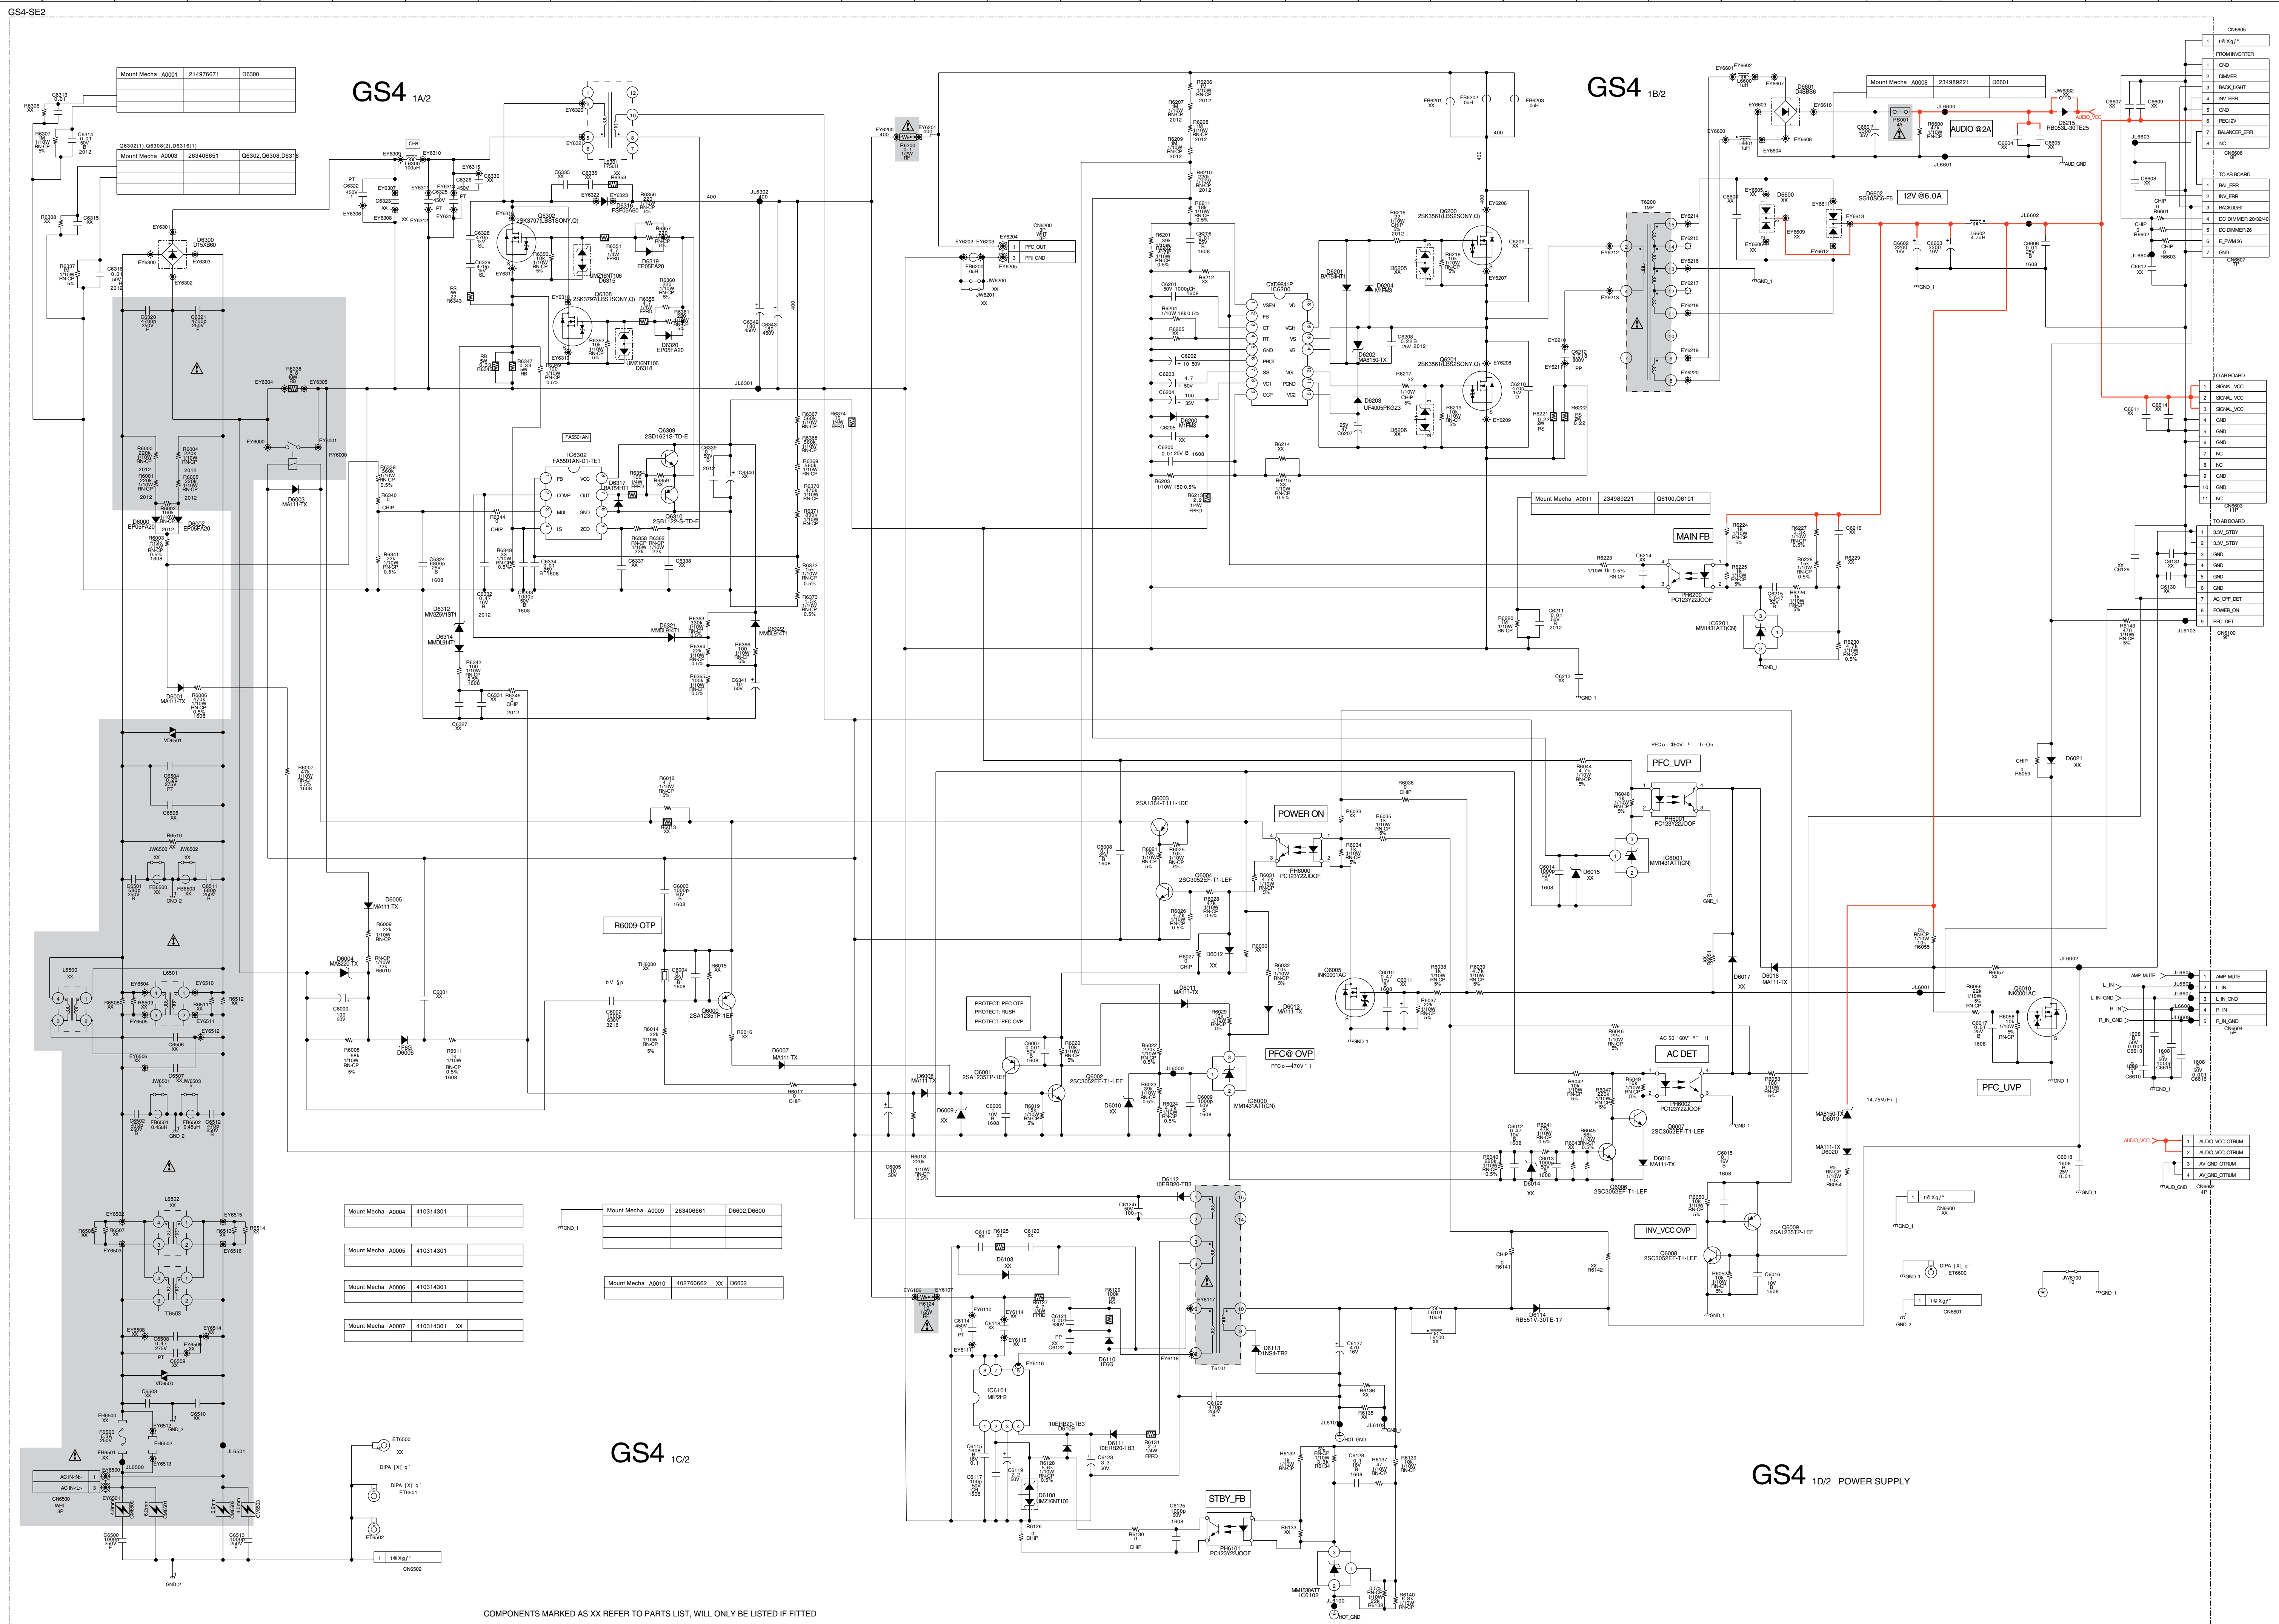

PRINTING THE SERVICE MANUAL

The PDF of this service manual is not designed to be printed from cover to cover. The pages vary in size, and must therefore be printed in sections based on page dimensions.

NON-SCHEMATIC PAGES

Data that does NOT INCLUDE schematic diagrams are formatted to 8.5 x 11 inches and can be printed on standard letter-size and/or A4-sized paper.

SCHEMATIC DIAGRAMS

The schematic diagram pages are provided in two ways, full size and tiled. The full-sized schematic diagrams are formatted on paper sizes between 8.5" x 11" and 18" x 30" depending upon each individual diagram size. Those diagrams that are LARGER than 11" x 17" in full-size mode have been tiled for your convenience and can be printed on standard 11" x 17" (tabloid-size) paper, and reassembled.

TO PRINT FULL SIZE SCHEMATIC DIAGRAMS

If you have access to a large paper plotter or printer capable of outputting the full-sized diagrams, output as follows:

- 1) Note the page size(s) of the schematics you want to output as indicated in the middle window at the bottom of the viewing screen.
- 2) Go to the File menu and select Print Set-up. Choose the printer name and driver for your large format printer. Confirm that the printer settings are set to output the indicated page size or larger.
- 3) Close the Print Set Up screen and return to the File menu. Select "Print..." Input the page number of the schematic(s) you want to print in the print range window. Choose OK.

TO PRINT TILED VERSION OF SCHEMATICS

Schematic pages that are larger than 11" x 17" full-size are provided in a 11" x 17" printable tiled format near the end of the document. These can be printed to tabloid-sized paper and assembled to full-size for easy viewing.

If you have access to a printer capable of outputting the tabloid size (11" x 17") paper, then output the tiled version of the diagram as follows:

- 1) Note the page number(s) of the schematics you want to output as indicated in the middle window at the bottom of the viewing screen.
- 2) Go to the File menu and select Print Set-up. Choose the printer name and driver for your printer. Confirm that the plotter settings are set to output 11" x 17", or tabloid size paper in landscape () mode.
- 3) Close the Print Set Up screen and return to the File menu. Select "Print..." Input the page number of the schematic(s) you want to print in the print range window. Choose OK.

TO PRINT SPECIFIC SECTIONS OF A SCHEMATIC

To print just a particular section of a PDF, rather than a full page, access the Graphics Select tool in the Acrobat Reader tool bar.

- 1) To view the Graphics Select Tool, press and HOLD the mouse button over the Text Select Tool which looks like: . This tool will expand to reveal additional tools. Choose the Graphics Select tool by placing the cursor over the button on the far right that looks like: .
- 2) After selecting the Graphics Select Tool, place your cursor in the document window and the cursor will change to a plus (+) symbol. Click and drag the cursor over the area you want to print. When you release the mouse button, a marquee (or dotted lined box) will be displayed outlining the area you selected.
- 3) With the marquee in place, go to the file menu and select the "Print..." option. When the print window appears, choose the option under the section called "Print Range" which says "Selected Graphic".

Select OK and the output will print only the area that you outlined with the marquee. 

(continued >)